


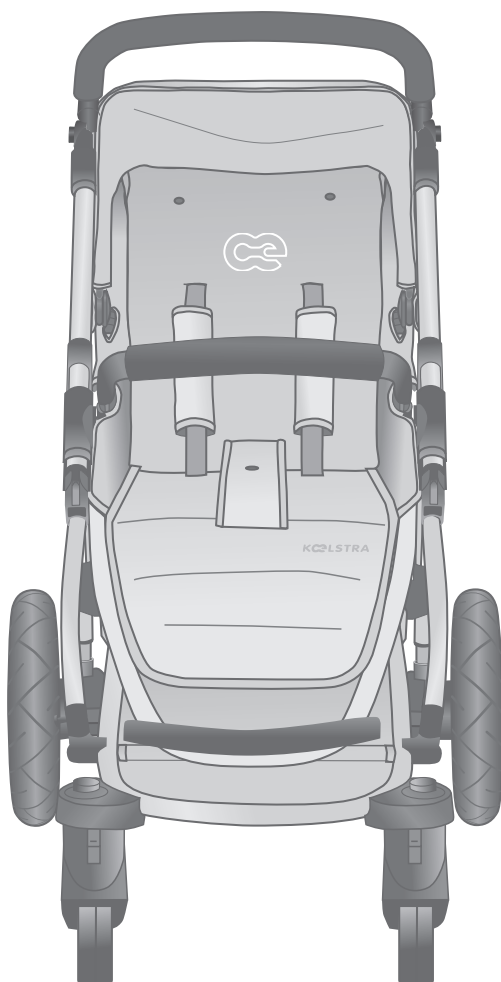
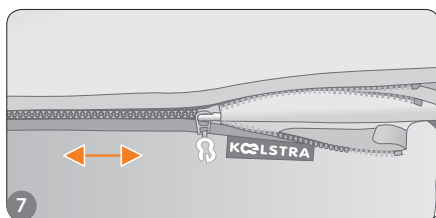
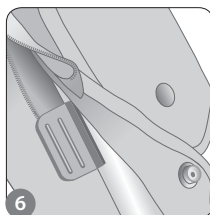
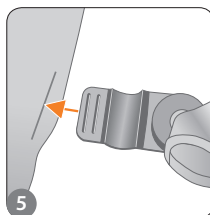
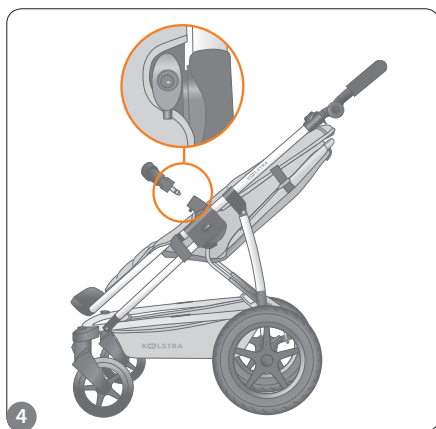








# KOLSTRA










## BINQUE DAILY





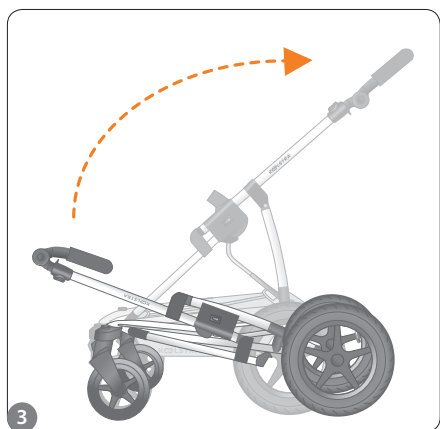













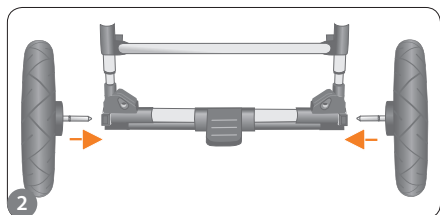









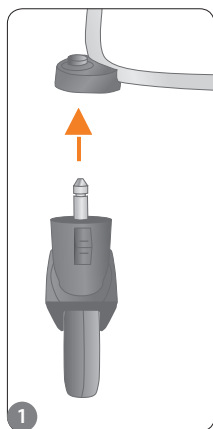


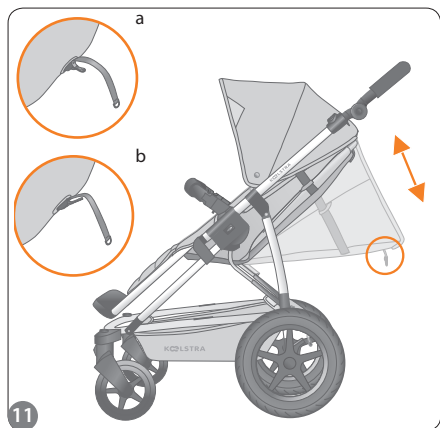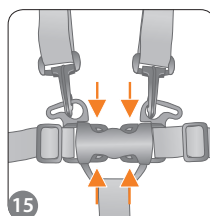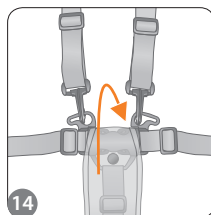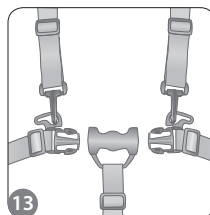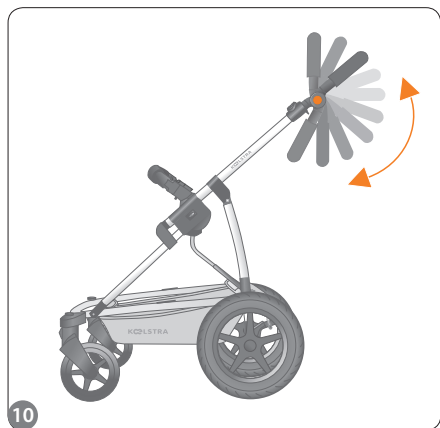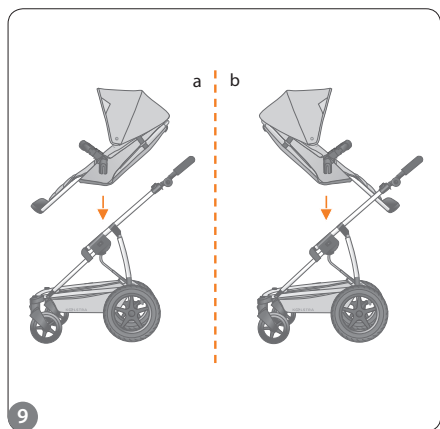


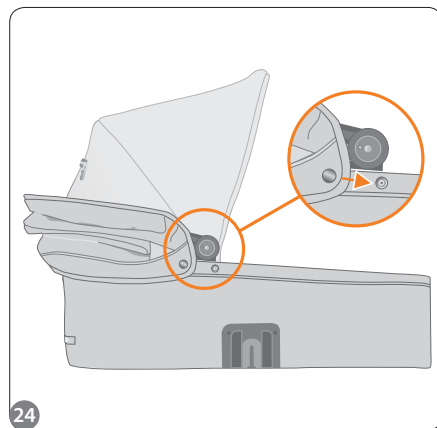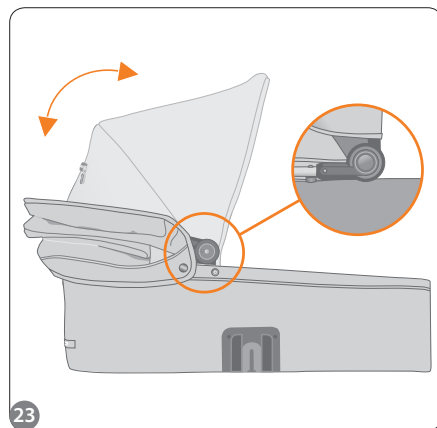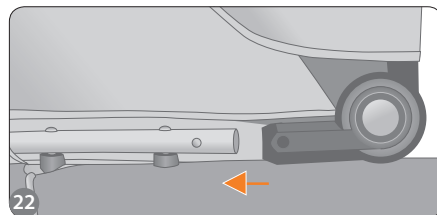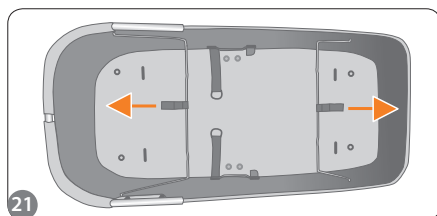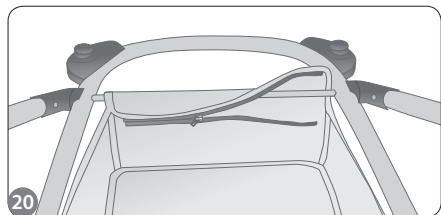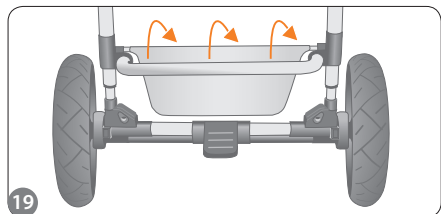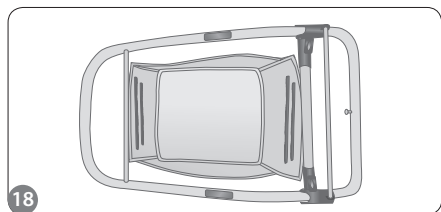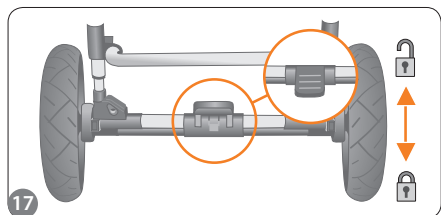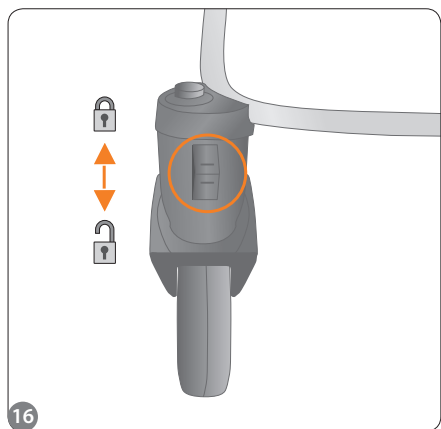

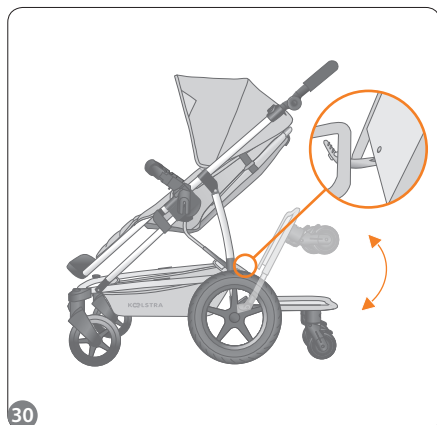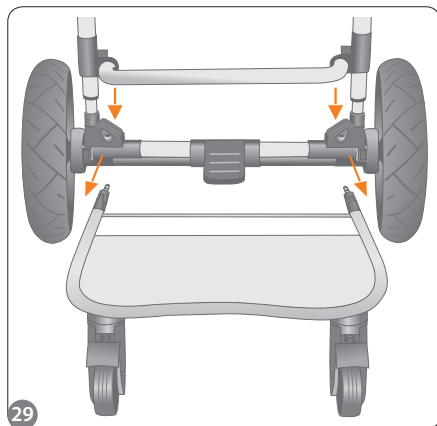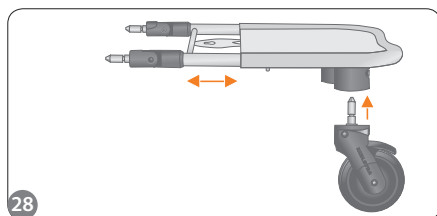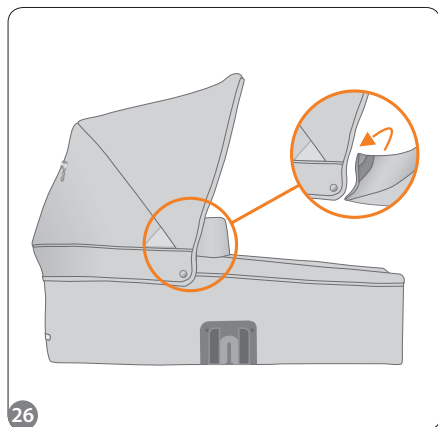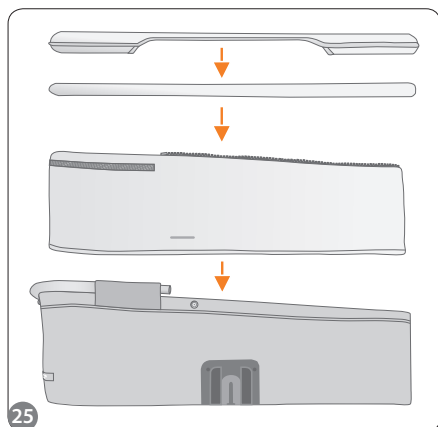

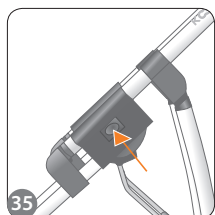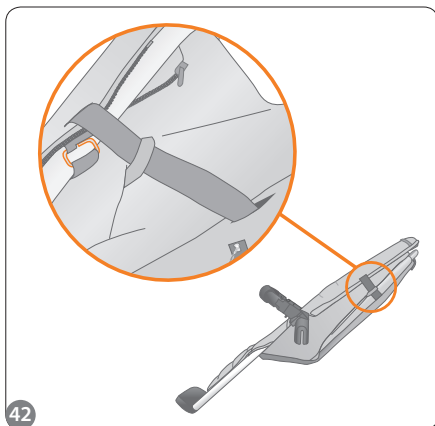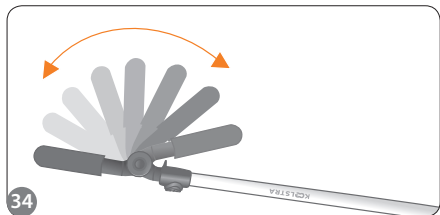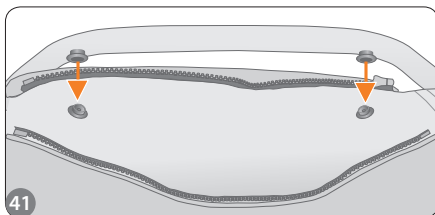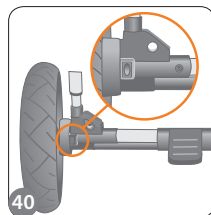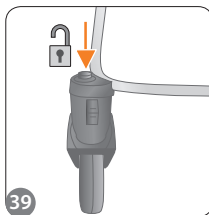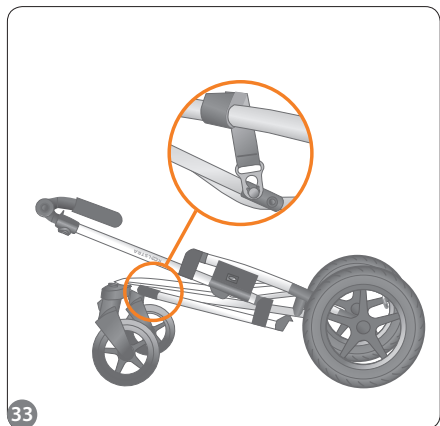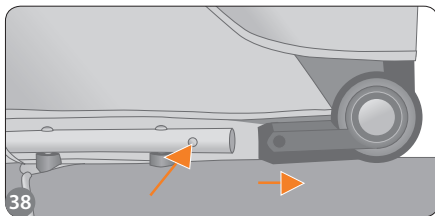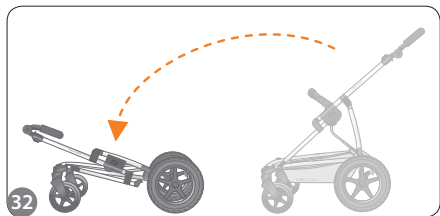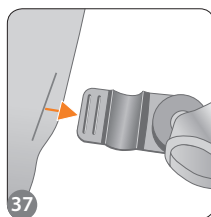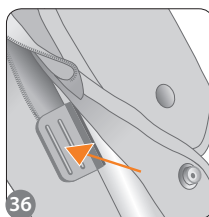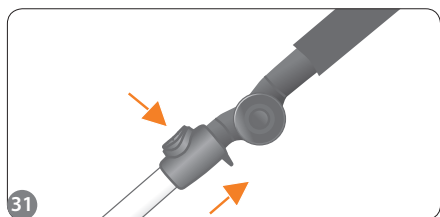

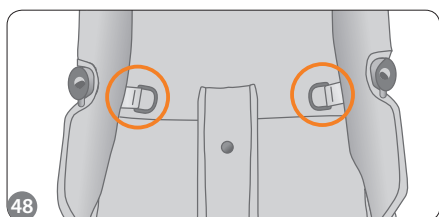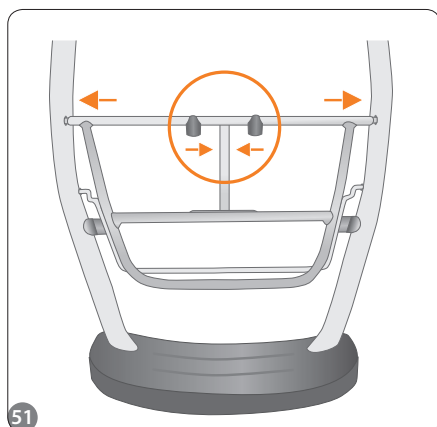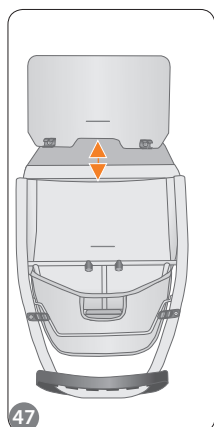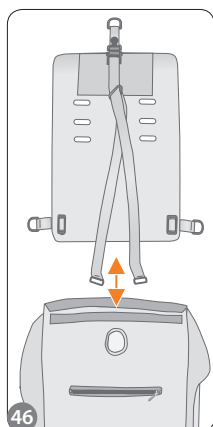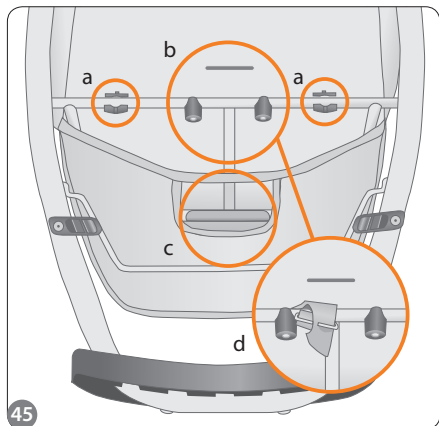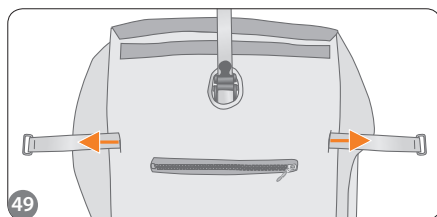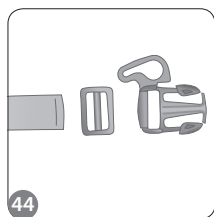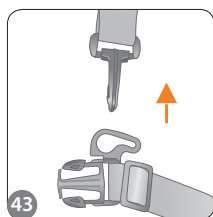

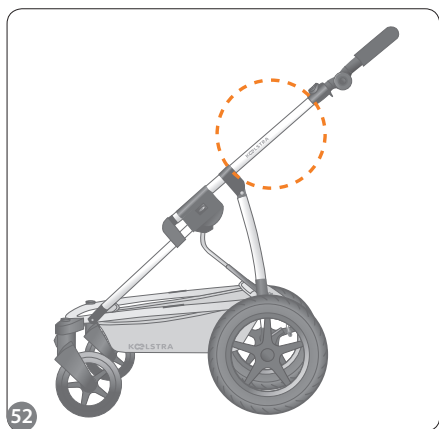



## Preface

Dear customer,

Please read this instruction manual and the warranty conditions carefully before using your pushchair. It is important that every person using this pushchair reads and understands both documents. Demonstrate how the pushchair works, before lending it to anyone else. If you do not follow the instructions, maintenance suggestions and warnings, you may jeopardize your child's safety. Keep both documents in a safe place for future reference. Safety instructions have the ⚠ symbol, tips have the 🌟 symbol.

The pushchair can be used for children from their birth up to the age of 4 approximately, it has a load-bearing capacity of 15 kg. It is important to check the complete pushchair and all its parts before use. If a part is missing or damaged, please report this to your Koelstra point of sale within 7 days of purchase.

We hope you enjoy using your Koelstra pushchair!  
[www.koelstra.com](http://www.koelstra.com)

*The pushchair, ride-along board and carrycot have been manufactured in accordance with the European standard EN 1888. In addition, the carrycot conforms to the standard EN 1466.*

### ⚠ Warning!

- Use the product only for its intended purpose. Using it for any other purpose is improper and dangerous. Koelstra BV cannot be held liable for any damage caused or injuries sustained due to incorrect or improper use of your product.
- This Koelstra product is not a toy, so never allow children to play with it.
- Please read this instruction manual carefully and keep this document for future use. If you do not follow the instruction manual, you may jeopardize your child's safety.
- It may be dangerous to leave your child unattended.
- Ensure that all the locking devices are engaged before use.
- Use a harness as soon as your child can sit unaided.
- Always use the crotch strap in combination with the waist belt.
- Any load attached to the handle affects the stability of the pushchair.
- Check that the pram body or seat unit attachment devices are correctly engaged before use.
- This product is not suitable for running or skating.
- This pushchair is intended for children from their birth up to a weight of 15kg.

### ⚠ Attention!

- **You are responsible for your child's safety. Avoid dangerous situations.**
- **The warranty conditions can be found in a separate appendix that comes with the manual.** To claim on the warranty you must be able to show the pushchair together with the serial number\*, proof of purchase and a fully completed warranty form.
- The sticker with the serial number can be found at the bottom of the pushchair. Do not remove this sticker, this is a warranty requirement.

*\* Only so-called 'hard goods' have a serial number. 'Soft goods' do not have a serial number.*


## Table of Contents

<b>What's in the box?</b>	<b>4</b>
<b>Product description of pushchair with seat</b>	<b>5</b>
<b>Product description of carrycot &amp; ride-along board (optional)</b>	<b>6</b>
<b>1 Unpacking and assembling</b>	<b>7</b>
1.1 Before first use	7
1.2 Mounting the wheels	7
1.3 Unfolding	7
1.4 Installing seat, canopy and safety front brace	7
<b>2 Pushing the pushchair</b>	<b>8</b>
2.1 Adjusting the push bar	9
2.2 Adjusting the back rest	9
2.3 Adjusting the leg rest	9
2.4 Using the 5-point safety harness	9
2.5 Locking/unlocking the swivel wheel	10
2.6 Using the parking brake	10
2.7 Shopping basket	11
<b>3 Using the carrycot (optional)</b>	<b>11</b>
3.1 Before first use (carrycot)	11
3.2 Assembling the carrycot	12
3.3 Using the mattress (carrycot)	12
3.4 Adjusting the canopy (carrycot)	12
3.5 Installing the wind protector (carrycot)	12
3.6 Installing the carrycot	12
<b>4 Using the ride-along board (optional)</b>	<b>13</b>
4.1 Installing the ride-along board	13
4.2 Adjusting the ride-along board	13
4.3 Hanging up the ride-along board	13
4.4 Removing the ride-along board	13
<b>5 Folding up and transporting</b>	<b>14</b>
5.1 Folding	14
5.2 Transporting	14

<b>6</b>	<b>Disassembling</b>	<b>14</b>
6.1	Removing the seat from the frame	14
6.2	Removing the safety front brace	14
6.3	Removing the canopy from the seat	14
6.4	Removing the carrycot from the frame	15
6.5	Removing the canopy from the carrycot	15
6.6	Disassembling the carrycot	15
6.7	Removing the swivel wheels	15
6.8	Removing the rear wheels	15
6.9	Removing the 5-point safety harness and upholstery from the seat frame	15
6.10	Installing the 5-point safety harness and upholstery on the seat frame	15
<b>7</b>	<b>Maintenance</b>	<b>16</b>
7.1	General	16
7.2	Cleaning	17
7.3	Washing in the washing machine	17
7.4	Wheels	17
7.5	Faults	17
<b>8</b>	<b>Accessories</b>	<b>18</b>
8.1	Carrycot (optional)	18
8.2	Ride-along board (optional)	18
8.3	Maxi-Cosi adapter set (optional)	18
8.4	Additional shopping basket (optional)	18
8.5	Parasol (optional)	18
8.6	Seat rain cover (optional)	19
8.7	Carrycot rain cover (optional)	19
8.8	Seat liner (optional)	19
8.9	Footmuff (optional)	19
8.10	Nursery bag (optional)	19
8.11	Safety front brace upholstery (optional)	19
8.12	miBasket (optional)	19
<b>9</b>	<b>Technical specifications</b>	<b>20</b>
9.1	Pushchair	20
9.2	Carrycot (optional)	20
9.3	Ride-along board (optional)	20
<b>10</b>	<b>Disposing of product and packaging</b>	<b>20</b>

## What's in the box?


### Pushchair

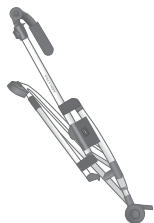

Frame  
with shopping basket



Seat  
with seat frame

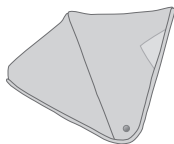

Canopy  
with canopy bracket



Safety front brace



Front wheel (2x)  
with installation  
material




Rear wheel (2x)




Instructions for use

### Carrycot (optional)

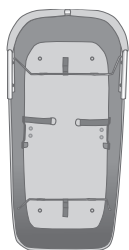

Carrycot

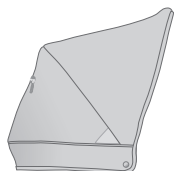

Canopy  
with canopy bracket






Padding (2x), mattress &  
airflow








Wind protector

## Product description of pushchair with seat

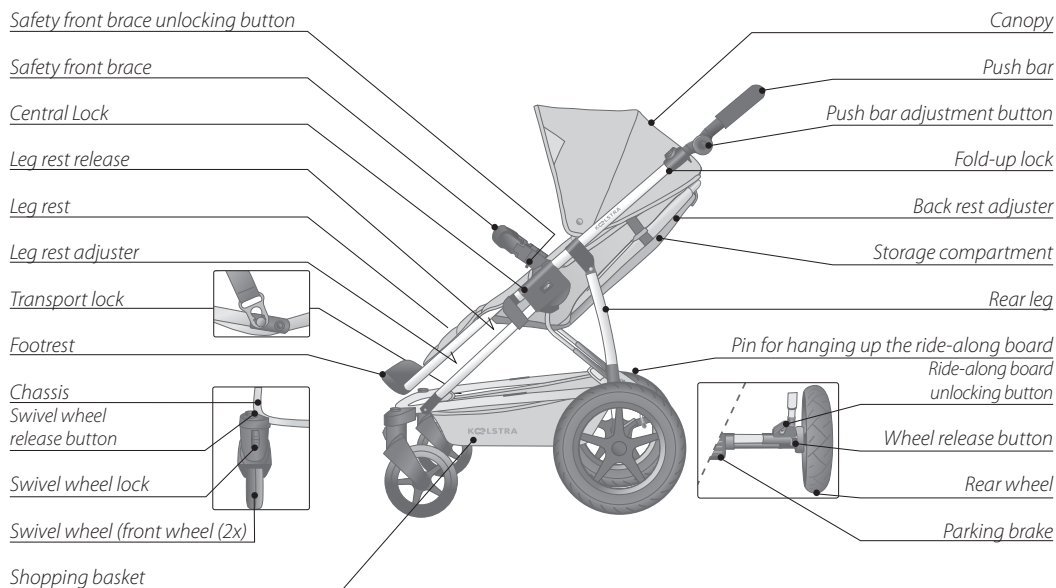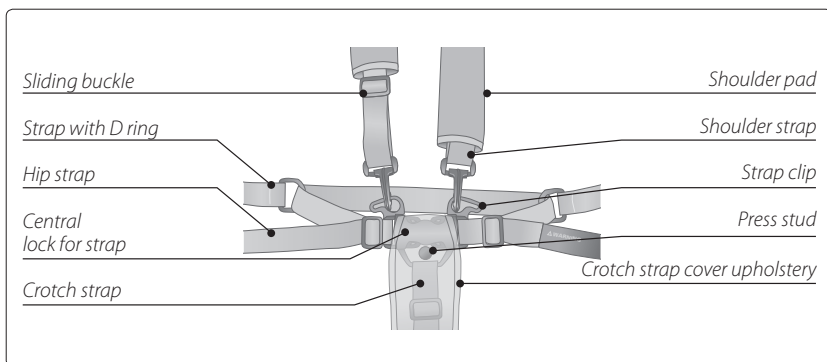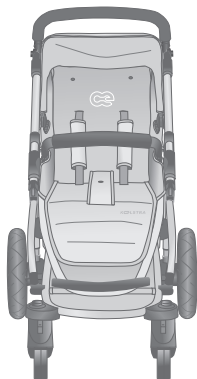

## Product description of carrycot & ride-along board (optional)

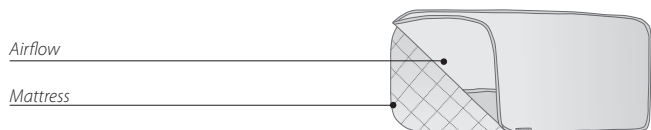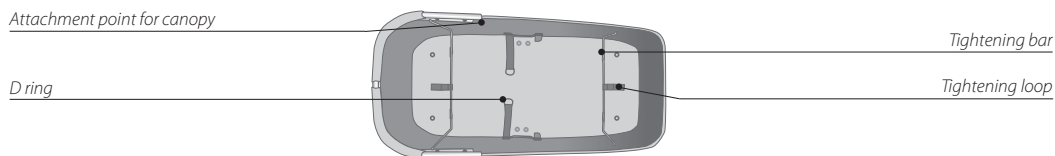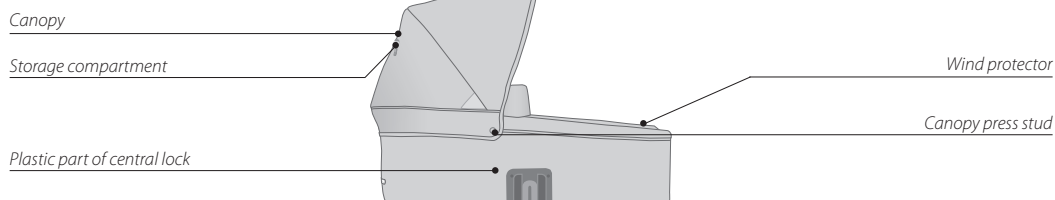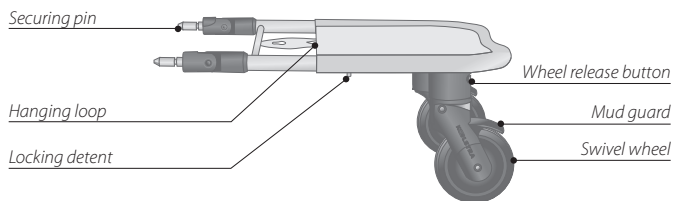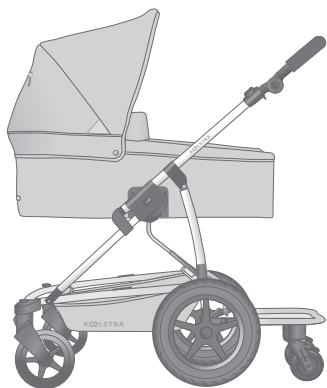

## 1 Unpacking and assembling

### 1.1 Before first use

#### Danger, risk of death!

- Keep plastic packaging materials away from children as they can present a choking hazard for children.
- Beware of small parts. Your child may swallow a small part and choke.
- Do not place any loose objects in the pushchair.

#### Warning!

- Before use, check your product for any damage, loose or missing parts, sharp edges and/or protruding parts.
- Never exceed the maximum weight allowed in the pushchair (see chapter 9 'Technical specifications').

#### Caution!

- To prevent damage, do not remove logos or stickers. Some logos and stickers are required by law.

#### Tip

- For environmental reasons, we recommend that you dispose of the packaging at your local civic amenity site.

1. Take the pushchair and the remaining parts out of the box.
2. Remove all packaging materials and discard immediately.
3. Use 'What's in the box?' to check if the pushchair is complete (see p. 4).

### 1.2 Mounting the wheels

#### Caution!

- Always check that all the wheels have been fitted correctly, as among other things, this is important for the brake to function properly.

Installing the swivel wheel (see fig. 1):

1. Click the swivel wheels into the frame from the underside, under the swivel wheel release buttons.  
*You will hear a click.*
2. Check that the swivel wheels are securely attached.

To install the rear wheels:

1. Remove the transparent protective covers from the axles of both rear wheels.
2. Slide the rear wheels in the rear axle as shown in figure 2 (note the direction of the profile on the tyres).  
*You will hear a click.*
3. Check that the rear wheels are securely attached.

### 1.3 Unfold

#### Warning!

- Beware of any moving parts or hinges when unfolding, folding or adjusting the pushchair.
- Keep your child at a safe distance. Beware of getting your fingers or hands trapped, or those of your child.

#### Caution!

- Never use force if you experience resistance when folding or unfolding the pushchair.

*The frame has been folded, the wheels have been attached.*

1. Engage the pushchair's parking brake (see section 2.6 'Using the parking brake').
2. Stand next to the pushchair.
3. Lift the push bar until the frame falls into the locking mechanism on both sides (see fig. 3).  
*You will hear a click on both sides.*
4. Rotate the push bar to the required position (see section 2.1 'Adjusting the push bar').

### 1.4 Installing seat, canopy and safety front brace

#### Warning!

- Never change the seat's direction of travel while your is child sitting or lying in it.
- If your child cannot yet sit independently, only use the lying position.
- Never use the seat separate from the pushchair's frame.
- Never lift the entire pushchair by the safety front brace.

#### Caution!

- Never lift the seat by the canopy, use the safety front brace instead.



## Tip

- Open the safety front brace on one side, so you can easily place your child in the pushchair or take it out of the pushchair.

To install the safety front brace:

- Fit the safety front brace in place in the designated plastic parts on the seat with a click (see fig. 4).

To install the canopy:

1. Half open the zips on both sides of the seat.
2. Open the press studs underneath.
3. Guide the canopy fasteners through the slits in the seat (see fig. 5).
4. Fit the canopy fasteners in place on the seat frame with a click (see fig. 6).
5. Close the zips and press studs you opened just now.
6. Open the zip at the top of the seat completely, so that the seat frame shows (see fig. 7).
7. Attach the canopy zip to the seat zip.

**Attention:** The remaining part of the zip on the seat has no function at this moment.

To install the seat on the frame:

*The pushchair is unfolded.*

1. Engage the pushchair's parking brake.
2. Fold up the canopy.
3. Lift the seat by the safety front brace.
4. Drop the plastic parts of the carrycot on the central lock parts on the frame (see fig. 8).

*You will hear a click on both sides.*

## Attention:

- You can place the seat on the frame so that it is facing forwards or backwards. This will change the direction in which your child will be looking (see fig. 9).
- The pushchair can only be folded with the seat if the seat is facing forwards, the direction of travel (see fig. 9a).
- 5. Check that the seat is securely attached.
- 6. Remove or disassemble the seat if desired, as described in the steps in chapter 6, 'Disassembling'.

## 2 Pushing the pushchair

### Danger, risk of serious injury or death!

- Never place the pushchair near heaters, open fire or other sources of heat as this could pose a fire hazard.
- Keep the pushchair away from loose leads, wires and cables on account of the risks of falling objects, strangulation or choking.

### Warning!

- Before use, check that the seat is securely attached to the frame.
- Never transport more than one child in the pushchair.
- Always keep hold of the pushchair when your child is inside.
- Only use accessories that are supplied by Koelstra BV. Other accessories have not been specifically designed for Koelstra products and may overload your pushchair and cause it to be incorrectly balanced.
- Do not use a second child's seat.
- Do not allow your child to stand on the bars between the wheels. This can be dangerous for your child and will damage the pushchair.
- Remove your child from the pushchair when using escalators, stairs, lifts and steep slopes.
- Never allow your child to stand up in the pushchair, always use the 5-point safety harness.
- Do not lift up the pushchair when your child is still in it.
- Never leave your child in or around the pushchair unsupervised.
- Take extra care near train stations or roads. Gusts of wind from passing trains or cars can cause the pushchair to move.
- Avoid dangerous situations: do not jog, skate etc. with the pushchair.
- Aluminium, metal and synthetic parts can become very hot in the sun. Make sure your child cannot burn itself on any hot parts.

### Caution!

- Always use all wheels simultaneously, even when manoeuvring the pushchair onto or off the pavement. Although the frame is strong, it will wear much quicker if you only use the rear wheels.

- Do not use the pushchair for transporting baggage, as overloading the pushchair may cause damage.
- Never expose the pushchair to extreme temperatures.
- Never push the pushchair through water on the beach.
- Do not place products on the canopy.

### ⚠ Attention!

- Always keep the canopy on the pushchair unfolded to protect your child's sensitive skin from the sun. If you do not want to use the canopy, then attach a parasol.
- To avoid danger of fingers becoming jammed or the product suddenly folding, check that all the locks are securely engaged each time before use.
- Check that the zips and press studs are properly closed and/or attached.

## 2.1 Adjusting the push bar

### ⚠ Warning!

- Do not let any shopping bags or other items hang from the push bar, as this may affect the pushchair's stability and durability, and may cause the pushchair to tip over.

1. Stand behind the pushchair (behind the push bar).
2. Engage the pushchair's parking brake.
3. Place your hands on the plastic parts below the push bar.
4. Using your index fingers, press the push bar adjustment buttons and keep them down.
5. Now push the push bar down or up (see fig. 10).

*If you release the push bar adjustment buttons, the push bar will automatically lock in the required position.*

## 2.2 Adjusting the back rest

### ⚠ Attention!

- Never adjust the back rest when your child is sitting or lying in the pushchair.

The back rest allows for stepless adjustment.

To place the seat in the lying position:

*The pushchair is unfolded, the seat is upright.*

- Push the back rest adjuster lug down and pull it to place the back rest in the desired lying position (see fig. 11a).

To place the seat in sitting position:

*The pushchair is unfolded, the seat is in lying position.*

1. Using one hand, push the back rest upwards.
2. Pull the D ring of the back rest adjuster strap to secure the back rest in the desired sitting position (see fig. 11b).

**Tip:** You can place the dangling part of the back rest adjuster strap in the storage compartment at the back of the seat.

## 2.3 Adjusting the leg rest (see fig. 12)

### ⚠ Warning!

- Never let another child stand on the pushchair's leg rest.

*The pushchair is unfolded, the seat has been mounted on the frame, the leg rest is in the vertical position.*

1. Lift the leg rest.
2. Rotate the leg rest adjuster upwards and place it on the hook behind the protruding part on the bottom of the leg rest.

*The leg rest has 2 modes: horizontal and vertical.*

## 2.4 Using the 5-point safety harness

### ⚠ Warning!

- Always use the safety front brace when your child is sitting or lying in the pushchair.
- Check that the 5-point safety harness is neither too tight nor too slack. Prevent your child from adopting a posture in which it can tip the pushchair over or can fall out of it.
- Always use the entire 5-point safety harness, that means also the shoulder straps and crotch strap.

### ⚠ Caution!

- Only use the 5-point safety harness supplied with this pushchair.
- Always secure your child in the 5-point safety harness (even if your child is able to sit up unaided).

 **Attention!**

- Always adjust the height of the 5-point safety harness according to your child's height. The larger the child, the higher the shoulder strap should be positioned in the seat.
- Always adjust the depth of the 5-point safety harness according to your child's size. The smaller the child, the further in the crotch strap should be positioned in the seat.
- Always adjust the length of the 5-point safety harness according to your child's size. Do this using the sliding buckles on the 5-point safety harness.
- Make sure the straps of the 5-point safety harness are not twisted.

**Tip**

- The 5-point safety harness has D rings attached to the hip straps. If desired, an additional set of straps or a harness can be attached to these.
- Slide the shoulder pads on the shoulder straps along the sliding buckles to make your child more comfortable.

Locking the 5-point safety harness (see fig. 13):

*All buckles on the 5-point safety harness are unclashed.*

1. Engage the pushchair's parking brake.
2. Place your child in the pushchair.
 

**Attention!** Make sure that the strap of the hip strap always runs behind your child's back and is attached at the front.
3. Place one of your child's legs on each side of the crotch strap.
4. Place the shoulder straps over each of your child's shoulders.
5. Connect the strap clip on one side of the hip strap in the central harness lock to the crotch strap with a click.
6. Then connect the strap clip on the other side of the hip strap in the central harness lock to the crotch strap with a click.
7. Open the crotch strap cover upholstery and then close the press stud in the middle of the central harness lock (see fig. 14).

**Attention:** The central harness lock must always be covered by the crotch strap cover upholstery.

8. Check that the 5-point safety harness is secure by giving it a gentle tug.
9. Tighten the shoulder straps, hip strap and crotch strap using the sliding buckles attached to the belts of the harness.

Unlocking the 5-point safety harness (see fig. 15):

1. Using your thumb and index finger, press the strap clip on one side of the hip strap and take the strap clip out of the central harness lock.
2. Repeat step 1 for the other side.
 

**Tip:** The hip and shoulder straps can remain connected to each other.

**2.5 Locking/unlocking the swivel wheel (see fig. 16)****Tip**

- The locked position is very handy for pushing the pushchair on sandy or rough ground.
- With the swivel wheel unlocked, the pushchair has a very small turning circle, which is very handy when shopping.

To lock the swivel wheel:

- Slide the swivel wheel lock on the swivel wheel upwards. *The swivel wheel is then locked as soon as you start pushing the pushchair.*

To unlock the swivel wheel:

- Slide the swivel wheel lock on the swivel wheel downwards to unlock it. *The swivel wheel can now move freely.*

**2.6 Using the parking brake (see fig. 17)****Warning!**

- Never leave your child in the pushchair unsupervised, not even if the parking brake is engaged.
- Always engage the parking brake on the pushchair whenever you bring the pushchair to a standstill (for example when putting your child in or taking your child out of the pushchair).

**Caution!**

- A slippery or steep surface may adversely affect the parking brake.
- Never park the pushchair on slippery floors (such as parquet, linoleum or laminate floors). Rubber tyres can cause a chemical reaction and leave marks on these surfaces. Place a piece of cardboard between the tyres and the floor to avoid any damage.

## ⚠ Attention!

- Always engage the parking brake when you bring the pushchair to a standstill.
- Always check that you have engaged the parking brake before letting go of the pushchair.
- Never use the parking brake when pushing the product.

To lock the parking brake:

1. Use your foot to press the parking brake (the pedal) between the rear wheels.
2. Give the pushchair a gentle push to check that the parking brake has been activated.

To unlock the parking brake:

- Push the parking brake between the rear wheels upwards to release it.

## 2.7 Shopping basket

To remove the shopping basket:

*Upon delivery, the shopping basket is attached to the frame.*

- Open both zips and remove the shopping basket from the frame.

**Tip:** You can replace the shopping basket with one in a different colour, they are available as accessories (see section 8.4).

To attach the shopping basket:

1. Place the shopping basket with the wider side to the back, under the pushchair (see fig. 18).
2. Fold the upholstery at the back around the designated thin connecting bar and fasten the zip (see fig. 19).
3. Fold the upholstery at the front around the designated thin connecting bar and fasten the zip (see fig. 20).

## 3 Using the carrycot (optional)

### 3.1 Before first use (carrycot)

#### ⚠ Danger, risk of death!

- Remove all objects from the carrycot (such as pillows and soft toys) which could cause strangulation or choking.
- Before use, check that the carrycot is securely attached to the frame.

- Never place the carrycot on a stand. This carrycot was not designed for use in combination with a stand.
- Never place the carrycot on a platform such as a table or sofa.
- Keep the carrycot away from loose leads, wires and cables on account of the risks of falling objects, strangulation or choking.
- Do not use the carrycot as a car seat. Use an approved car seat to transport your child by car.

#### ⚠ Warning!

- Do not use the carrycot if your child can sit independently or when your child becomes too active.
- Place the canopy fully upright before you lift up the carrycot.
- Never leave your child in or around the carrycot unsupervised.
- Do not allow other children to play near the carrycot unsupervised.
- Place the carrycot on a level, stable and rough surface.
- Never fold the pushchair when the carrycot is attached to the frame.
- Take your child out of the carrycot when you want to move, carry or lift the carrycot.
- Use the correct posture when carrying the carrycot. Keep your back straight and slightly bend your knees.
- Always place the carrycot in the shade outdoors. Protect your child's sensitive skin from UV radiation in the shade too. For example, you could use sun tan lotion and protective clothing.
- Never use the carrycot's padding separate from the carrycot.
- Only use the carrycot in a horizontal position.

#### ⚠ Attention!

- Do not attach any toys to the carrycot with a cord.
- Check regularly whether your child is not too hot or cold.
- Check the handle and the bottom of the carrycot frequently for damage and/or wear.



## Tip

- The carrycot has supporting feet and can be used as a cradle at home or while travelling, separate from the pushchair.
- There are D rings at the bottom of the carrycot. If desired, a set of straps or a harness can be attached to these.

1. Take all the carrycot parts out of the box.
2. Remove all packaging materials and discard immediately.
3. Use the 'What's in the box?' section to check if the carrycot is complete (see p. 4).

### 3.2 Assembling the carrycot

1. Remove the padding and the mattress with the airflow from the carrycot.
2. Tighten the two tension bars on the inside of the carrycot so that the small protrusions engage the recesses at the bottom (see fig. 21).

*The carrycot's sides are now tight.*

3. Slide the canopy's elbow pieces on to the carrycot's free frame tubes (see fig. 22).
4. Check that both locking detents are fully visible.
5. Press the adjustment button on the right-hand side of the canopy and with your other hand pull the canopy upright (see fig. 23).
6. Fasten the press studs on the rear side of the canopy to the press studs on the carrycot.
7. Attach the press stud on the canopy to the press stud on the carrycot (see fig. 24).
8. Insert the padding in the carrycot with the Velcro at the head end (see fig. 25).
9. Attach the padding zip to the longest zip on the carrycot.
10. Place the mattress in the carrycot smooth side down, and the head end (the wider side) towards the canopy (see fig. 25).

### 3.3 Using the mattress (carrycot)



## Danger, risk of death!

- Never place an extra mattress on top of the mattress supplied.
- The maximum allowed thickness of the mattress is 3 cm (centimetres).
- Check that the mattress is level. A mattress that has moved can present a risk of suffocation.



## Warning!

- Only use the mattress supplied by Koelstra.



## Attention!

- Always use your own fitted sheet around the airflow and mattress.



## Tip

- The airflow can be washed at 60 °C in the washing machine.
- Before use, check that the airflow is wrapped around the mattress with the ventilating side facing up.
- Always place the airflow on the chequered side of the mattress.

### 3.4 Adjusting the canopy (carrycot)

1. Using your right hand, press the adjustment button on the right hand side of the canopy (see fig. 23).
2. Use your left hand to push against the handle on the canopy to fold the canopy, or pull it to unfold the canopy. *The canopy is locked as soon as you release the adjustment button.*

### 3.5 Installing the wind protector (carrycot)



## Attention!

- Attention: Detach the Velcro of the wind protector from the canopy before folding the canopy.
1. Place the canopy upright (see fig. 23).
  2. Attach the zip on the wind protector to the shortest zip (that is still available) on the carrycot.
  3. Fasten the Velcro on the wind protector to the inside of the canopy (see fig. 26).

### 3.6 Installing the carrycot




## Attention!

- Rotate the pushchair's push bar so that it is in one straight line with the frame (see fig. 27) before placing the carrycot on the frame.
1. Engage the pushchair's parking brake.
  2. Place the carrycot's canopy upright.
  3. Lift the carrycot by the canopy handle.
  4. Drop the plastic parts of the carrycot on the central lock parts on the frame (see fig. 27). *You will hear a click on both sides.*

**Tip:** You can place the carrycot on the frame so that it is facing forwards or backwards.

5. Check that the carrycot is securely attached.
6. Remove or disassemble the carrycot if desired, as described in the steps in chapter 6, 'Disassembling'.

#### 4 Using the ride-along board (optional)

 **Danger, risk of death!**

- Never let go of the pushchair when your child is standing on the ride-along board.

 **Warning!**

- Never let your child stand on the ride-along board unsupervised.
- Never let your child stand on the ride-along board without holding on.
- Never place more than one child on the ride-along board.
- Do not let your child sit on the ride-along board.
- Never exceed the maximum weight allowed on the ride-along board (see chapter 9 'Technical specifications').
- Do not use the ride-along board to carry loads.
- Remove your child from the ride-along board when you manoeuvre the pushchair onto or off the pavement or approach an obstacle.
- Remove your child from the ride-along board when you manoeuvre the pushchair over rough and uneven surfaces.
- Never use the ride-along board as if the pushchair were a scooter.

 **Caution!**

- Always remove the ride-along board before folding the pushchair.
- Do not overload the ride-along board, the maximum load is 20kg.



**Tip**

- Hang up the ride-along board when not in use (see section 4.3).

#### 4.1 Installing the ride-along board

 **Warning!**

- Check that the ride-along board is securely attached before you allow your child to stand on it.

1. Connect the wheels (logo facing outwards) to the bottom of the ride-along board with a click (see fig. 28).
2. Engage the pushchair's parking brake.
3. Fit the ride-along board in place in the designated points on the rear axle of the pushchair with a click (see fig. 29).  
**Attention:** Do not install the ride-along board upside down. The wheels on the ride-along board must be on the ground.

#### 4.2 Adjusting the ride-along board

The ride-along board has 2 modes: a short one and a long one (see fig. 28). These modes are convenient if you want to place your child closer to or further away from the pushchair.

*The ride-along board is now in the short mode.*

1. Squeeze both locking detents at the bottom of the ride-along board and pull out the ride-along board.
2. Check that both locking detents are fully visible.

*The ride-along board is now in the long mode.*

1. Squeeze both locking detents at the bottom of the ride-along board and push the ride-along board inwards.
2. Check that both locking detents are fully visible.

#### 4.3 Hanging up the ride-along board

 **Attention!**

- The ride-along board can only be hung up if the seat is facing forwards in the direction of travel.
1. Place the ride-along board in the long mode.
  2. Rotate the hanging loop forwards.
  3. Attach the hanging loop to the designated pin on the frame (see fig. 30).

#### 4.4 Removing the ride-along board

*The ride-along board has its wheels on the ground.*

1. Press the slanting adjustment buttons on the upper side of the rear axle (see fig. 29) and detach the ride-along board from the frame.

## 5 Folding up and transporting

### 5.1 Folding

#### Warning!

- Always remove the carry-cot from the frame before folding the pushchair.

#### Caution!

- Always place the seat in the direction of travel before folding the pushchair.
- To avoid any damage, do not place any objects on or against the folded product.

#### Attention!

- Empty the shopping basket before folding the pushchair.
- Always store folded products away from children.

#### Tip

- When the pushchair is folded, cover the wheels with a cloth to prevent dirt and/or smudges from soiling the upholstery.

1. Engage the pushchair's parking brake.
2. Remove the ride-along board if it is attached.
3. Fold up the seat canopy.
4. Place the seat upright.
5. Fold down the leg rest.
6. Place the seat in the direction of travel, or remove the carrycot, the adapters or the car seat from the frame if they are assembled together.
7. Stand behind the push bar.
8. Using your thumb, press the button on the fold-up lock (on the left hand side of the push bar, at the top) and keep it depressed (see fig. 31).
9. Now simultaneously pull the fold-up lock at the left hand side and the right hand side of the pushchair towards you.  
*The frame is now unlocked.*
10. Push the push bar towards the swivel wheel (see fig. 32).
11. Attach the transport lock to the designated pin on the frame (see fig. 33).
12. Press both push bar adjustment buttons and fold the push bar completely towards the frame (see fig. 34).
13. Remove the wheels if you wish.

### 5.2 Transporting

#### Warning!

- Never lift the entire pushchair by the safety front brace.

#### Caution!

- Transport the pushchair with care. The frame and the upholstery can be damaged if you bump or scrape it.

*The pushchair is folded.*

1. Check that the transport lock is secure.
2. Lift the folded pushchair by its frame.

## 6 Disassembling

### 6.1 Removing the seat from the frame

*The safety front brace is attached to the seat.*

1. With one hand, grab the safety front brace.
2. Use your other hand to press the button of the central lock on one side of the pushchair (see fig. 35).
3. Now press the button of the central lock on the other side of the pushchair.
4. Lift the seat from the frame.

### 6.2 Removing the safety front brace

1. Press the unlocking button on one side of the bottom of the safety front brace and pull the safety front brace away from the seat (see fig. 4).
2. Repeat the above step for the other side.

### 6.3 Removing the canopy from the seat

1. Detach the canopy zip from the seat zip (see fig. 7).
2. Attach the two seat zip parts to each other.
3. Half open the zips on both sides of the seat and open the press studs underneath.
4. Detach the canopy fasteners on both sides of the seat frame (see fig. 36).
5. Guide the canopy fasteners through the slits in the seat (see fig. 37).
6. Close the zips and press studs on both sides of the seat.

## 6.4 Removing the carrycot from the frame

1. Place the canopy upright.
2. Grab the carrycot by the canopy handle with one hand.
3. Use your other hand to press the button of the central lock on one side of the pushchair (see fig. 35).
4. Now press the button of the central lock on the other side of the pushchair.
5. Lift the carrycot from the frame.

## 6.5 Removing the canopy from the carrycot

- Use your thumbs to squeeze the locking detents on both sides of the canopy and pull the canopy away from the carrycot (see fig. 38).

## 6.6 Disassembling the carrycot

- Repeat the steps in section 3.2 in reverse order.

## 6.7 Removing the swivel wheel

1. Lift the pushchair a little bit off the ground on the front.
2. Press the swivel wheel release button at the top of the frame (see fig. 39).  
*The swivel wheel will be released automatically.*
3. Repeat the above steps for the other swivel wheel.

## 6.8 Removing the rear wheels

1. Press the wheel release button on one side of the rear axle (see fig. 40).
2. Using your other hand, pull the rear wheel out of the rear axle.
3. Repeat the above steps for the other rear wheel.

## 6.9 Removing the 5-point safety harness and upholstery from the seat frame

To remove the upholstery from the seat frame:

*The canopy and safety front brace have been removed from the seat.*

1. Open the zip at the top of the seat, so that the seat frame shows.
2. Detach the two press studs at the top of the upholstery from the seat frame (see fig. 41).
3. Open all the press studs and zips on both sides of the upholstery.
4. Thread the strap that surrounds the sides of the seat frame through the metal buckle (see fig. 42) and pull it through the slit and loop on the upholstery.

**Tip:** Put the back rest in lying mode to facilitate detaching the metal buckle.

5. Squeeze the two fasteners at the bottom of the seat so they come away from the seat frame (see fig. 45a).
6. Squeeze the leg rest release and detach the leg rest frame from the seat frame (see fig. 51).
7. Push the protruding part at the bottom of the leg rest through the upholstery and remove the leg rest frame from the upholstery (see fig. 45c).

To remove the 5-point safety harness:

1. Open the crotch strap cover upholstery.
2. Unlock the central harness lock on both sides (see fig. 15).
3. Detach the shoulder straps from the hip straps (see fig. 43).
4. Guide the crotch strap at the bottom of the upholstery through the metal buckle (see fig. 45d) and pull the crotch strap through the slit in the seat, away from the upholstery.
5. Remove the strap clip from the hip strap on one (!) side (see fig. 44).
6. Now pull the hip strap out of the D rings.
7. Push the D rings through the upholstery so that they are no longer visible.

To remove the reinforcement plates:

1. Open the Velcro at the top of the upholstery and remove the back rest reinforcement plate and the straps (see fig. 46).
2. Remove the shoulder straps and belts with the D rings from the back rest reinforcement plate.
3. Push the two fasteners at the bottom of the seat through the openings in the upholstery so that they are no longer visible.
4. Open the Velcro at the bottom of the upholstery and remove the bottom reinforcement plate (see fig. 47).

*The upholstery and the 5-point safety harness can now be washed.*

## 6.10 Installing the 5-point safety harness and upholstery on the seat frame

Install the shoulder straps and belts with the D rings in the back rest reinforcement plate:

1. Guide the shoulder straps underneath the back rest adjustment strap (see fig. 46).
2. Push the shoulder straps on the side of the back rest adjuster through the openings in the back rest reinforcement plate at equal heights.

**Attention:** Check that the shoulder straps have not been twisted.

3. Push the D rings through the back rest reinforcement plate at the bottom.

To install the reinforcement plates:

1. Open the Velcro at the bottom of the upholstery.
2. Slide the bottom reinforcement plate with the fasteners on the side of the slits into the upholstery (see fig. 47).
3. Check that the plastic fasteners protrude from the designated openings in the upholstery (see fig. 45).
4. Close the Velcro.
5. Open the Velcro at the top of the upholstery and slide the reinforcement plate with the back rest adjuster into the opening at the back (top side) (see fig. 46).
6. Pull the D rings for the hip straps through the slits in the seat at the front (bottom side) (see fig. 48).
7. Guide the shoulder straps through the slits in the upholstery at the front (top side).

**Attention:** The shoulder straps must come out of the back rest at the same height.

8. Check that the back rest adjuster protrudes from the designated opening.
9. Guide the straps with the metal buckles through the vertical slits at the back (top side) of the upholstery (see fig. 49).
10. Close the Velcro at the top of the back rest.

To attach the upholstery to the seat frame:

1. Put the seat frame down on the ground in front of you with the mounting points for the front brace facing up (see fig. 50).
2. Place the upholstery in the middle, with the head end on the side of the press studs on the seat frame and the strap side facing up (see fig. 50).
3. Fasten the two press studs at the top of the upholstery to the seat frame (see fig. 41).
4. Close the zip at the top of the upholstery around the seat frame (see fig. 7).

5. Guide the straps with the metal buckles at the back through the loop on the upholstery, each on one side, then through the slit in the upholstery, then around the frame tube and through the metal buckle (see fig. 42).
6. Close the zips and press studs on both sides.

To install the leg rest frame:

1. Squeeze the leg rest release and place the leg rest frame with the leg rest release facing down between the openings at the bottom of the seat (see fig. 51).
2. Pull the metal buckle of the crotch strap through the slit at the bottom of the seat.
3. Fold the crotch strap around the leg rest frame and guide the cover through the metal buckle (see fig. 45d).
4. Slide the leg rest frame into the compartment at the bottom of the upholstery.
5. Check that the leg rest protrudes from the opening in the upholstery (see fig. 45c).
6. Push the leg rest frame into the plastic fasteners of the bottom reinforcement plate that protrude from the upholstery (see fig. 45a).

To install the 5-point safety harness:

1. Thread the side of the hip strap without strap clip through the D rings at the front of the seat.
2. Fasten the strap clip to the end of the hip strap, following the example of the strap clip that is still attached.
3. Attach the shoulder straps to the hip straps (see fig. 43).
4. Give all belts a gentle tug to check they are securely attached.
5. Attach the safety front brace and if desired the canopy.

## 7 Maintenance

### 7.1 General

#### Attention!

- Only use Teflon spray or silicon spray for lubricating the moving parts. Never use oil, grease or other lubricants as these attract dirt and dust.



## Tip

- If your pushchair has been involved in an accident, please pay a visit to your Koelstra dealer to have the pushchair checked for any technical faults.
- Lubricate the moving parts regularly. This will prolong the life of your pushchair.
- Regularly check that all the parts of your pushchair are functioning properly.
- The Koelstra upholstery is dirt and water-resistant.

## 7.2 Cleaning



### Caution!

- Do not bleach or dry clean the upholstery.
- Clean the pushchair immediately after it has been used in a sandy environment with salty water (for example at the seaside). Sand can damage moving parts and/or the locking devices. Salt will cause metal parts to rust.
- If wet, dry the unfolded upholstery in a dark room to prevent discolouring.



## Tip

- Stains can be removed using a mild detergent or soap stick.

### General:

- Use a damp cloth to remove stains on the upholstery.
- Regularly clean the frame, the moving parts and the wheels.
- First remove the coarse sand and dirt with a soft brush.
- Dry the pushchair with a soft cloth after cleaning.

## 7.3 Washing in the washing machine



### Caution!

- Do not bleach or dry clean the upholstery.
- Do not use a conditioner when washing the upholstery.
- Wash the upholstery with matching colours.
- Do not iron the upholstery.
- Do not dry the upholstery in a tumble-drier or spin-drier.



### Attention!

- Washing the upholstery too often can make the colours fade.
1. Disassemble the 5-point safety harness and the upholstery following the steps in section 6.9.
  2. Place the 5-point safety harness in a wash bag.
  3. Wash the upholstery and the 5-point safety harness in the washing machine with a programme for delicate fabrics at 30 °C.
  4. Run your hand over the upholstery to remove as many creases as possible.
  5. Dry the upholstery in a dark room to prevent discolouring.
  6. Assemble the upholstery and the 5-point safety harness following the steps in section 6.10.

## 7.4 Wheels



### Caution!

- Never use the pushchair if a tyre has a puncture.
- Ensure that the inner tubes have the correct pressure (see chapter 9 'Technical specifications').



### Attention!

- Flat tyres tend to wear more quickly.
- New inner tyres are available from your Koelstra dealer or a specialist bicycle shop.
- If your bicycle pump does not fit the valve of the tyres, you can obtain adapters from your Koelstra dealer or a specialist bicycle shop.
- Repair a puncture the same way as you would repair a puncture with your bicycle.

## 7.5 Faults



### Warning!

- To avoid dangerous situations and further damage, never use a faulty pushchair.
- Immediately replace faulty parts. Always have this done by an authorized Koelstra dealer.
- Do not use the pushchair if the padding is showing through the upholstery.

## ⚠ Caution!

- In spite of the fact that Koelstra upholstery belongs to the category with the highest UV protection, sunlight can make the upholstery colours fade and damage plastic parts. Therefore, never place the pushchair in sunlight for prolonged periods of time.

## ⚠ Attention!

- Do not make any modifications to the product yourself. This is unsafe and invalidates your warranty.
- Report any faults to your Koelstra dealer.
- If any parts start to show signs of wear or become faulty, always have them replaced by an authorized Koelstra dealer.

## 8 Accessories

## ⚠ Attention!

- Only use accessories and/or parts that have been approved by Koelstra.
- Never use connecting parts to connect Koelstra products.
- Visit our website [www.koelstra.com](http://www.koelstra.com) for a complete overview of the various accessories and other Koelstra products.

### 8.1 Carrycot (optional)

Specifications:

- Compact carrycot, can be used in combination with the pushchair's frame. See chapter 3 for instructions on using the carrycot.

### 8.2 Ride-along board (optional)

Specifications:

- Ride-along board for transporting a second, standing child. See chapter 4 for instructions on using the ride-along board.

### 8.3 Maxi-Cosi adapter set (optional)

## ⚠ Danger, risk of death!

- Before use, check that the adapter set and the car seat are securely attached to the frame.

## ⚠ Warning!

- Install the car seat on the frame before placing your child in it.

## ⚠ Caution!

- Always remove the adapters and the car seat from the frame before folding the pushchair or putting it in the car.
- Never lift the entire pushchair by the car seat if the car seat is attached to the frame.

## ⚠ Attention!

- Also read the user guide that comes with the car seat before you use it.

Specifications:

- Compact plastic adapters to fit your Maxi-Cosi car seat seamlessly into the frame of your pushchair.

### 8.4 Additional shopping basket (optional)

Specifications:

- Would you prefer a different colour combination? Then choose a carrycot and shopping basket in a different colour.

### 8.5 Parasol (optional)

## ⚠ Warning!

- Never leave the entire parasol behind on the product, only the fastener.

## ⚠ Caution!

- Never install the parasol on the rear leg of the pushchair. This could cause serious damage when folding the pushchair.
- Only install the parasol in the designated place (see fig. 52) on the frame between the push bar and the central lock.

Specifications:

- Parasol for protection against sunlight with adjustable attaching clamp.
- Flexible, so it can be bent in any direction.
- Shipped with a handy storage bag.

## 8.6 Seat rain cover (optional)

### ⚠ Warning!

- Use the rain cover only when it rains. Never leave your child under the rain cover if it is not raining as this can cause heat to develop and restrict the oxygen supply.

### ⚠ Attention!

- Always use a rain cover when it is raining. The upholstery is water-repellent, but water can penetrate the seams and cause damage.

#### Specifications:

- Transparent rain cover made to measure for the pushchair.
- Shipped with a handy storage bag.

## 8.7 Carrycot rain cover (optional)

### ⚠ Warning!

- Use the rain cover only when it rains. Never leave your child under the rain cover if it is not raining as this can cause heat to develop and restrict the oxygen supply.

### ⚠ Attention!

- Always use a rain cover when it is raining. The upholstery is water-repellent, but water can penetrate the seams and cause damage.

#### Specifications:

- Transparent rain cover made to measure for the carrycot.
- Shipped with a handy storage bag.

## 8.8 Seat liner (optional)

### ⚠ Attention!

- Check regularly whether your child is not too hot or cold.

#### Specifications:

- Double-sided seat liner for extra comfort and seat temperature control.
- Fleece side for extra insulation during those cold days.
- Cool side for cooling during those hot days.
- Slits for optimal use in combination with the 5-point safety harness.

## 8.9 Footmuff (optional)

### ⚠ Warning!

- Never let the upholstery of the footmuff rest on the child's face as this can restrict the oxygen supply.
- Take care not to catch your child when using the zip.

### ⚠ Attention!

- Check regularly whether your child is not too hot or cold.

#### Specifications:

- Insulating footmuff with soft inside fleece lining and detachable zip top.
- Slits for optimal use in combination with the 5-point safety harness.
- Triangular reflector for optimal visibility.
- Shipped with a handy storage bag.

## 8.10 Nursery bag (optional)

#### Specifications:

- Nursery bag with adjustable carry strap.
- Plenty of storage with seven zip compartments, including a thermal compartment.
- Supplied with nursery mattress.
- The carry strap also has a name badge and a handy hook.

## 8.11 Safety front brace upholstery (optional)

#### Specifications:

- Washable upholstery with zip for protecting the safety front brace and your child's comfort.

## 8.12 miBasket (optional)

#### Specifications:

- Handy shopping basket for transporting as much as 30 litres of additional articles.

## 9 Technical specifications

### 9.1 Pushchair

The pushchair has been manufactured in accordance with the European EN 1888 standard.

#### Target age range for pushchair with seat:

0 to approximately 4 years

#### Maximum load-bearing capacity\* of pushchair with seat:

15kg

#### Max. number of children: 1

#### Weight:

- Frame without wheels: 5.1 kg
- Frame with wheels: 8.2 kg
- Seat: 4.1 kg
- Complete (frame with seat and wheels): 12.8 kg

#### Dimensions in cm (l x w x h): \*\*

- Folded (without wheels): 96 x 62.5 x 52
- Unfolded (with wheels): 96 x 62.5 x 70 - 108

#### Max. tyre pressure:

- Rear wheels 30 psi / 2 bar

#### Recommended cleaning agents for upholstery:

Mild detergent, soap stick

### 9.2 Carrycot (optional)

The carrycot has been manufactured in accordance with European standards EN 1888 and EN 1466.

#### Target age: 0 to approximately 6 months

#### Maximum load-bearing capacity\* of pushchair with carrycot:

9 kg

#### Max. number of children: 1

#### Weight: 5.4 kg

#### Dimensions in cm (l x w x h): \*\*\*

- Folded: 88 x 41 x 15.5
- Unfolded: 81 x 41 x 63

#### Recommended cleaning agents for upholstery:

Mild detergent, soap stick

\* Weight including contents of the shopping basket

\*\* Dimensions are including the canopy and shopping basket

\*\*\* Dimensions are including the canopy

### 9.3 Ride-along board (optional)

The ride-along board has been manufactured in accordance with the European EN 1888 standard.

#### Target age: approximately 2 to 5 years

#### Max. load: 20 kg

#### Max. number of children: 1

#### Weight: 2.8 kg

#### Dimensions in cm (l x w x h):

- Short mode: 37 x 41 x 19
- Long mode: 44 x 41 x 19

#### Recommended lubricants:

Silicone spray, Teflon spray

## 10 Disposing of product and packaging

For environmental reasons, we recommend that you discard both the packaging and the product (at the end of its product life) at your local civic amenity site.

This instruction manual has been compiled with great care and meets the requirements and regulations of the NEN 5509 standard. However, Koelstra BV cannot be held responsible for any inaccuracies or for the completeness of the information and does not accept any responsibility for damages and/or injury of any kind that result from actions and/or decisions that have been based on the information in this manual.

The product purchased may differ from the product as described in the manual. The most recent manuals can be requested from Koelstra BV. See also [www.koelstra.com](http://www.koelstra.com).

The Koelstra BV products have been patented, all models are protected.

© Copyright Koelstra BV



**Koelstra BV**

Leitswei 6, 8401 CL Gorredijk – EN

P.O. Box 1, 8400 AA Gorredijk – EN

[info@koelstra.com](mailto:info@koelstra.com)

[www.koelstra.com](http://www.koelstra.com)