


B68 Ultrasonic Anti Bark Automatic Manual

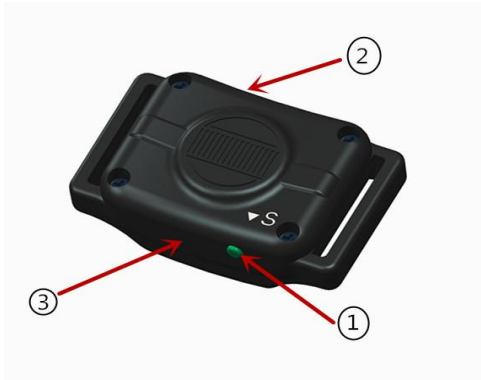

①, "S" button: (On the power off state, press "S" button to turn on the collar, press long time to turn off the collar; on the power on state, press "S" button to adjust the sensitivity.

②, USB charger

③, Indicator light

1, Product description

This product works by ultrasonic anti bark automatic dog training collar with simple and small size. It is for small and medium dogs. The product is rechargeable, it can work within 30days if collar charged fully. The main functions are vibration and high ultra frequency.

2. Instructions

①, Turn On/Off: Press "S" button 1S to turn on the collar, and press "S" button 2S to turn off the collar.

②, Adjust the sensitivity: Press "S" button under the power on state to adjust the sensitivity.

Press "S" button one time and hear one "Bip" 1 Level (the lowest sensitivity)

Press "S" button one time again and hear two "Bip" 2 Levels

Press "S" button one time again and hear three "Bip" 3 Levels

Press "S" button one time again and hear four "Bip" 4 Levels

Press "S" button one time again and long "Bip" 5Levels (the highest sensitivity)

3. Indicator light: After turn on the collar enter the standby green indicator and flash every 2

seconds, stop flashing after 40 seconds. If there is a dog barking, it will flash another 40 seconds. If the collar with low battery, the indicator will be from green to red.

4. Charging: You need charge the collar if the indicator from green to red, it will flashing light from weak to strong and also from red to green, long light green means it with fully charge.

5. How to work: Put this model collar on the dog's neck, when dog baring, collar will work as below:

Working the first time: the collar will vibration 1.5S without ultrasonic;

Working the second time: the collar will vibration 1.5S and with 1.5S ultrasonic;

Working the third time: the collar will vibration 1.5S and with 2.5S ultrasonic;

Working the fourth time: the collar will vibration 1.5S and with 3.5S ultrasonic;

Working the fifth time: the collar will vibration 1.5S and with 4.5S ultrasonic;

Notice: No matter how many times work, if the collar doesn't work within 20S, it will return to the first working mode.