

User Manual

10L Smart Pet Feeder

Important safety instructions

Read all of the instructions below before using this product. Do not make any changes or create settings that are not described in this manual.


If physical injury, loss of data or damage is caused by failure to follow instructions, the warranty does not apply.

- This product can be used by children aged from 12 years above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this product in a safe way and understand the hazards involved.
- Do not place anything on the top of the product.
- Do not expose the product to the temperature lower than 20°C.
- Ensure the desiccant package is intact before use to avoid it mixing with food.
- The product can only hold dry pet food with a diameter of 5 to 20mm.
- If the adapter is getting wet, cut off power. Never unplug the glove without insulating gloves. Contact our Customer Support to purchase a replacement.
- To avoid electric shock, do not place the power cord or plug in water or other liquids. Only use a power cord that is recommended or sold by the product manufacturer.
- Dispose of packaging properly. Some components may be packed in poly bags which can cause suffocation. Keep them away from children and pets.
- When the batteries are running low, replace them immediately; or the battery corrosion will damage the product.

What's in the box



Feeder

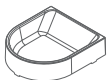

Food Tray
(With Stainless Steel Food Tray)



Power Adapter




User Manual

At a glance




Dessicant Compartment


Top Cover Opening Latch

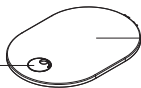

Food Hopper

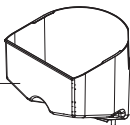 

Food Delivery Cylinder

 


Battery Compartment

Set Button



 Body

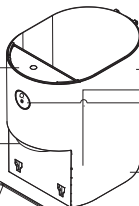

Camera

Power Port

Food Tray

Food Outlet

Power Switch



Assemble&Disassemble

 
Disassemble the food hopper

(Noted: Keep the food hopper empty before disassemble it)

Hold the spiral compartment and pull it out follow the direction of food outlet when detach the Food Delivery Cylinder.

Assmble the food hopper

- 1.Please put the spiral compartment in the slot of the product bottom
- 2.Adjust the bottom hexagonal card and align it the the spiral compartment
- 3.Put the spiral compartment below the arrow sticker
- 4.Press down the spiral compartment then finish the assemble

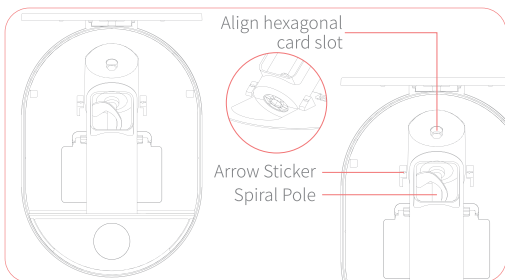

Clean Your Feeder

1. Power off and unplug.
2. Please use the soft cloth with some suds to wipe gently.
3. Food hopper and food tray are detachable for washing.
(Dish-washer is supported)
4. Please dry the food tank before assembling it.

Check Before Using

1. To avoid any power cut situation, please install 4*D size batteries before installing the food hopper.
2. Please press SET button twice for initial food dispensing settings.
3. Quick check the status of Link indicator, please ensure the Link indicator is slow flashing.(Please press and hold SET button for 3S if the link indicator is solid on)

Start Your Smart Life

 
1. Dowoload "Smart Life" APP by App Store or Google Play Store.
2. Please allow all "location/ Network/ Notification" access before getting configuration with your pet feeder.
3. Log in or Sign Up your account.



Scan QR Code to Download "Smart Life" as well



Configure Your Smart Pet Feeder- EZ Mode

Click “Add Device” and choose “Pet Feeder With Camera(Wi-Fi)” Under “Small Home Appliances” category.

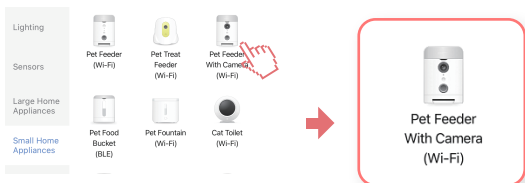


2. Click the mode switch button on the right top corner ,and then Click “Next” .

  3. Please ensure that you have entered correct password and your current WiFi frequency is 2.4GHz. (If not, please switch your WiFi option via WLAN page)

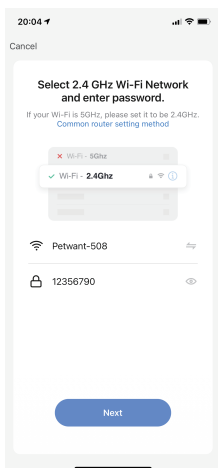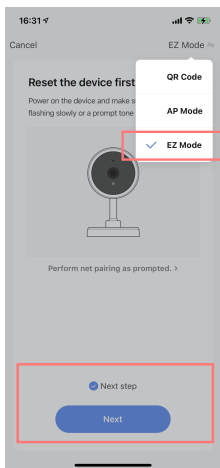

4. It will spend 2 minutes on completing the configuration.

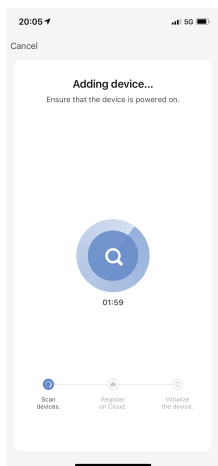

Tips about Mode Switch:

a) There will be two options for users to get smart feeder connected. If you fail to get configuration through EZ Mode, please press and hold SET button on the unit for 3s.

b) You will hear “ AP Mode” if you successfully get the configuration mode switched.



Configure Your Smart Pet Feeder- AP Mode

1. Click “Add Device” and choose “Pet Feeder With Camera(Wi-Fi) Under “Small Home Appliances” category.




2. Switch to “AP Mode” on top right page and Click “Power on prom” and then Click “Next” .


3. Please ensure that you have entered correct password and your current WiFi frequency is 2.4GHz. (If not, please switch your WiFi option via WLAN page)

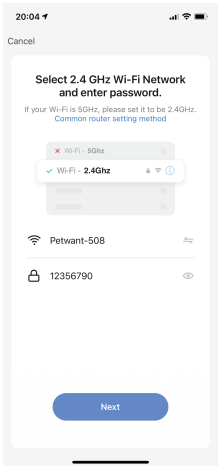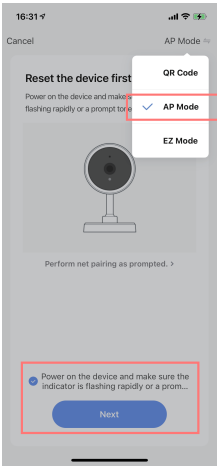

4 “Go to Connect” “Smartlife-XXXX”
AP hotspot through WLAN page.

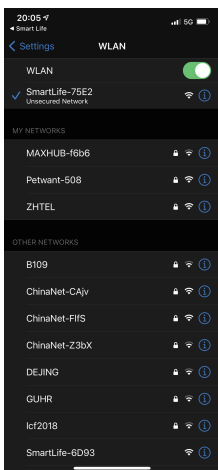


 5. Back to Connection page in the
APP after connected with the AP
hotpot.

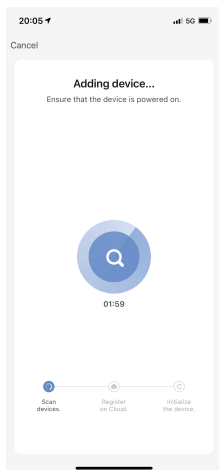

6. It will spend 1-2 mins on
completing the configuration.

 Function Showcase

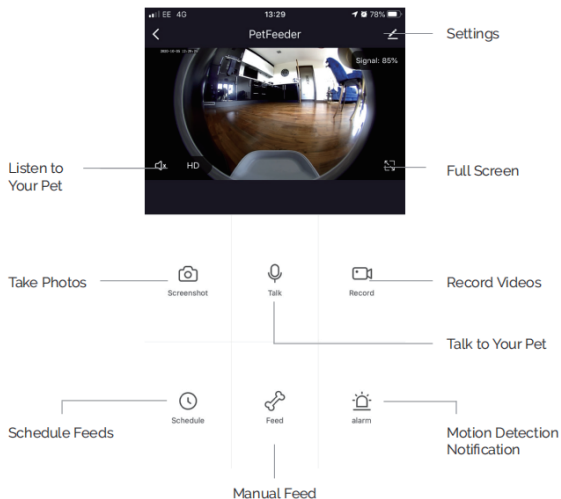

Note: The one way talking is a default factory setting. If need two way talk, please click the button, and change it in the "Basic Functions"

● Programmed Feeding Schedules

Click "Schedule" to add feeding times. Here you can set different feeding times and portions. You can set up to 4 meals and 20 portions per meal. In the overview of all feeding times, you can simply activate or deactivate individual feeding times.

● Instant Feeding

1. Press "Feed" and choose the number of portions that you want to give out right now.
2. By pressing "Short Record" you can record a 10-second long audio message. This is played at meal time to get your pet's attention
3. Under "Feed Record" you can see all previous feeding times.

Motion Detection

Under “Alarm” you can activate the motion detection of your camera to receive notification when your pet approaches the dispenser.

Other Settings

You can access additional features by going into the settings menu. These are:

- Checking the feeder's status.
- Activating and deactivating motion detection
- Sharing your device with others(Up to 20 people)
- You can also set the audio mode to one-way or two-way
- Remove Device

Product Parameters

| | |
|-----------------------------|--|
| Product Name | F5-C Smart 10L Pet Feeder |
| Item Size | 359mm*250mm*378mm |
| Product Size with Food Tray | 539mm*250mm*378mm |
| Food Tray Capacity | Around 1.5L |
| Product Capacity | 10L |
| Net Weight | 4.4kg |
| Material | ABS |
| Vedio Resolution | Support 1080p |
| Camera | 215°Wide Angel |
| Protection Level | IP65 |
| Food Size | Supoort 5-20mm diameter range dry food |
| Max Meals | 4 Meals/Day |
| Max Portions | 20 Portions/Meal |
| 1 Portion Wight | Around 20g |
| Manual Feeding | Support |
| Voice Recording | Support 10s Voice Recording |
| Power | DC 5V / 2A |
| Battery | 4*D Size Batteries |
| Desiccant | Suggest replace every 1 month |
| Use Enviroment Temperature | 0-40°C |