

Intelligent 2 in 1 Remote Dog Training Collar & Automatic Bark Control Collar

User Manual



Model Number:T720

Please read this entire guide before using!

1

Reinforce Learning Behaviours

If your dog knows the command but responds inconsistently or acts slower than your requirement, a training collar can sharpen his skill.

For example, you have taught your dog to come when called, but over time he responds slower. You can communicate with him via the remote trainer, so that he immediately responds to your call.

1. Set the collar to initial stimulation level and test it.
2. Fit the collar on your dog's neck along with his regular collar.
3. Let him roam around the training area. Then give the command and simultaneously press the stimulation button.
4. The instant your dog moves toward you, stop stimulation and praise him.
5. If he stops before he reaches you or turns away repeat the command and continue the stimulation. Again, stop at the instant he runs to you and reward him by praising him or feeding him a treat. Repeat this for 3 or 4 times.

Tips

1. If he doesn't get it for the first few times, don't give up and do not increase the stimulation. Try to work on this a couple of times per day.
2. During the training period never give the command if you are not able to enforce it. Your dog has to make the mental connection between the static stimulation/vibration/beep to his behaviour (may take a week or more for some dogs).

Altogether, both methods of stopping unwanted behaviour and reinforcing learning behaviours can be applied to nearly every training scenario.

Training collars are used to train the dogs and not for punishment. Use properly and with care and the collar can be a safe and effective tool to train, build communication and strengthen your bond with your best friend.

2

Main Features

1. Intelligent 2 in 1 Remote Dog Training Collar & Automatic Bark Control Collar, One-Click Switching, convenient operation.
2. Maximum remote range up to 1100 yards in the open area without any interference.
3. With power button on remote, anti-misoperation setting.
4. 4 training modes: Tone/Vibration/Static Stimulation/Light, 1-100 Adjustable Intensity Levels for Vibration and Static Stimulation.
5. IPX6 Waterproof Receiver Collar and IPX5 Waterproof Transmitter.
6. Receiver collar with 650mAh ultra-large capacity lithium battery.
7. Meet customer's personalized customization needs.
8. Train up to 3 dogs with one remote transmitter (separately purchase additional receiver).
9. Rechargeable receiver and transmitter.

Packing List:

- 1 x Handheld Transmitter
- 1 x Receiver
- 1 x Nylon Collar Strap
- 1 x Wrist Strap
- 1 x USB Charging Cable
- 2 x Long Contact Points
- 2 x Long Silicone Case
- 2 x Short Contact Points
- 2 x Short Silicone Case
- 1 x Anti-abrasion Buckle
- 1 x User Manual
- 1 x Test Light



3

Key Definition

1. Power button: Press to turn the transmitter on and off. 2. Press to turn the mode of automatic anti bark collar on and off.
2. Tone button: Press the tone button and the receiver beeps once. Tone level is not adjustable.
3. Static stimulation button: Press the stimulation button and the receiver emits an electrostatic stimulation once.
4. Vibration Button: Press the vibration button and the receiver emits a vibration once.
5. The +/- button: Adjust the levels of vibration and static stimulation from 1-100.
6. Channel button: Press to select a dog channel (dog1/dog2/dog3).
7. LED light button.



Remote transmitter

4

Receiver



- ①: Press to turn receiver on and off, contact signal to the remote transmitter.
- ②: Flashlight: It has different shows when charging and working, following will introduce it.
- ③: Contact points (static stimulation): choose a suitable length to fit for different thickness dog hair, can conduct static easier and train your dog conveniently.

Important notice

A start up roller is contained inside the receiver, if you hear sound when shaking the receiver, please do not suspect if it has any parts falling off.

How to Use

Note: Please charge before using the product!

I. Charge the remote transmitter:

- (1) Connect the charger cable to the charging port.
- (2) Plug the charger into a standard outlet.
- (3) The icon of the battery will flash during charging and be solid when charging is complete.

2. To turn the Transmitter on and off

- (1) Press power button to turn on/off the Transmitter. The backlight on/off.
- (2) The backlight will stay for about 30 seconds, if no operation then backlight off.

3. Charge the collar receiver:

- (1) Open the rubber cover, connect the receiver to a charger into a standard socket.
- (2) The LED flash light on the receiver turns red when charging.
- (3) Once the receiver is fully charged, the red LED flash light will turn off automatically.

4. To turn the Receiver Collar on

Press the power button once, the receiver will have a short "beep" sound, now the receiver is turned on. And the red LED light will flash one time every 8 seconds.

5. To turn the Receiver Collar off.

Press the On/Off Button once, the receiver will have a "beep" sound and no red LED light flash any more.

5

Warm Notice

1. Charge the remote transmitter and receiver at least 2 hours for the first charging.
2. The collar cannot receive any signals while it is charging.
3. The receiver will turn off automatically when battery energy is low after 10 seconds "beep" sound.
4. This product is rechargeable. In order to keep it continuous use, please charge it once a month if it is not used or in case of long use.

6. How to pair the Transmitter and Receiver

- (1) Turn on the remote and select one of the dog channel by pressing the CH button.
- (2) Adjust the levels by pressing "+" or "-" button (ensure the level is above 1).
- (3) Turn on the receiver, the receiver will have a short "beep" sound, and the red LED light will flash one time every 8 seconds.
- (4) Hold power button of receiver for 2 seconds again, the indicator light will be fast flashing for 10 seconds, press the function button (static stimulation/vibration/tone, any one of them) within 10 seconds. Then when you press function button, the receiver will emit corresponding sound, vibration and static stimulation. Confirm the pairing is successful.
- (5) If you have multiple receivers, simply choose a different channel and pair as per the same instructions.

The remote and receiver(s) should now be paired. Pairing is necessary to control the receiver.

You should then test each of the functions before attaching the collar to your pet.



6

Warm Notice

1. Please keep in mind the dog channel you choose, Please do not change to another one or the remote control will be invalid.
2. You need to pair remote transmitter and receiver before use. Please follow the manual when you use it at the first time.
3. The remote will fall into sleep mode after 30 seconds of no interaction. You can reactivate it by pressing any button.
4. When the transmitter turned off, it will not produce any functions when press its buttons except for the LED light.
5. If there is no operation within 4 minutes the receiver will fall into standby mode, which is shown by the unlit indicator light. The receiver can be reactivated once it is woken up.

Test Pet Training System.

Static stimulation function test

Static stimulation function can not be seen with the naked eye, please use our test light.

Press the static stimulation function button, the test light will shine.



Vibration function test

Press the vibration function button, the receiver will shake.

Tone function test

Tone function does not need to adjust. Press the tone button, the receiver will make a sound.

7

Description on the modes between Remote Dog Training and Automatic Anti Bark:

- I. This model could also be used as Automatic Anti Bark Collar. Turn on the remote, press and hold the remote power button for 3 seconds, if the receiver beeps twice, it means the anti bark collar function is off now. Press and hold the remote power button for 3 seconds, if the receiver beeps once, the anti bark collar function is on now.
- II. The automatic anti bark function has been set as the factory default setting before the shipment, therefore, there is no need to adjust individually. Could be worn on the neck of dogs directly when turn on the power.
- III. Following is how the automatic anti bark mode works:
 - (1) When the dog barks, the anti-barking device will produce a 2-second warning sound.
 - (2) When the second bark occurs within 30 seconds, the device will produce a 3-second warning sound.
 - (3) When the third bark occurs within 30 seconds, the anti-barking device will play a warning sound for 5 seconds along with a weak static stimulation punishment to the dog, to remind the dog of retraining not barking when hearing the warning sound.
 - (4) This kind of training will repeat for 7 times. The 1-2 times are warning sound only. If the dog keeps barking, it will trigger the 3-7 times sound + static mode. The strength of the static stimulation increases step by step, to correct the dogs behaviour.

IV. Automatic Protection Mode

- (1) No matter how many times the barking device activates, it will be reset automatically and return to the initial standby state when the dog stops barking for 30 seconds.
- (2) In order to protect the dog, the indicator light will enter into the fast flashing state when the device keeps working for 7 times, and the barking device will stop working for 1 minute and enter into the initial standby state.

Sensor hole



8

How to Wear Receiver Collar Correctly

 
1. Correct wearing position helps healthy and effective pet training. Receiver shall be placed on bottom of your pet's neck, and the screw cap must contact pet's skin directly.



put the conductive silicone on the prong to the bottom




2. If your pet has a thick fur in the neck places, please use longer screw caps.



3. The soft silicone prong is also with conductive function, could put it on to prevent rusty.



 4. The anti-abrasion buckle could prevent skin abrasion, we suggest to use it 2-3 times a week.



5. The space between Receiver Collar and Pet's Neck shall be maintained to a finger distance, can't be too loose, otherwise static effectiveness shall be badly influenced.



6. Too long Receiver Collar can be trimmed, or be handled with other methods.

9

Regular Maintenance

1. Please examine regularly to ensure tightness of Remote Transmitter and eliminate any external damages.
2. Clean the screw caps with alcohol weekly.
3. Examine your pet's neck and carry out weekly clean-up.

Attention

1. High-end transmission technology is used in the remote control Transmitter, no need to aim directly to Receiver Collar, the signal can go through obstacles such as walls and other things, but the effective distance will be decreased.
2. A list of factors, including but not limited to signal station, magnetic field, obstacle, battery volume, other wireless devices nearby, landform, vegetative cover, etc, shall also influence transmission of signals from remote transmitter and the actual effective distance of the Remote Transmitter.

Frequently Asked Questions (FAQ)

Q: How old my pet can use Pet Training systems?
A: DO NOT use on puppies younger than 6 months.

Q: Once my pet is trained and has been obeying my commands, is it still necessary for my pet to continue to wear the Receiver Collar?
A: You may need to reinforce your pet's memory with the Receiver Collar from time to time.

Q: Can I use Pet Training systems with more than one pet?
A: Yes, you can simply add one or two Receiver Collars to the system to control two or three pets, because three dog channels are available with the Remote Transmitter.

Q: What is the effective distance of your Pet Training systems?
A: The effective distance could be as far as 1100 Yards between Remote Transmitter and Receiver Collar without obstacles in between. However in reality, a list of factors, including but not limited to signal station, magnetic field, obstacle, battery volume, other wireless devices nearby, landform, vegetative cover, etc, will influence transmission of signals from Remote Transmitter and the actual effective distance of Remote Transmitter.

10

Q: I want to test Static Stimulation function of Receiver Collar at my finger, but it does not work, is anything wrong?
A: If you test Receiver Collar by your hand or leg, please touch the 2 screw caps (electrodes) at the same time, touching only one screw cap (electrodes) will not work.

Q: What's the function of anti-abrasion buckle?
A: 1. Use the anti-abrasion buckle could prevent skin abrasion, avoid hurt of dog's skin when wearing the iron column (rubber column) for long, and also it could be insulated from electricity.
2. After stop using the device, but the dog starts to bark again, we can use the anti-abrasion buckle and let the dog keep wearing the device.
3. When it becomes better after using the device for several times, dog doesn't bark, please use the anti-abrasion buckle.

Q: What do I do if my pet's neck becomes red and irritated?
A: Discontinue use of the pet training systems for a few days. If the condition persists beyond 48 hours, see your veterinarian. Even if the skin returns to normal, monitor your pet's skin condition closely.

Q: Can I attach a leash to the Receiver Collar?
A: NO. This can result in pulling the Screw Caps (contact points) too tightly against your pet's neck. Use a separate collar placed above the Receiver Collar.

Q: How will I know when to charge the batteries of the Pet Training systems?
A: For Remote Transmitter, the symbol will show up on the left down side of LCD screen. For Receiver Collar, if you hear 10 Seconds beep sound, you have to get it charged.

Q: How long can I leave Receiver Collar on my dog?
A: The Receiver Collar is not designed to be worn constantly. We recommend the Collar not be worn for more than 12 hours out of every 24-hour period. In case of longer time, you are advised to examine your pet regularly.

Q: How long should I process my training session for my pet?
A: Training sessions should be kept positive and short, it is better for about 10-15 minutes long each time.

11

Q: What are the proper levels of Vibration and Static Stimulation for my pets?
A: Try to find the best suitable levels of Vibration and Static Stimulation for your pet starting from the lowest level. Excessive levels of stimulation shall cause strong response from your pet.

Q: Any other better training methods?
A: You can prepare some dog food for training incentive to achieve better training outcomes. Each time after you restrain your pet's misbehavior, you can tell your pet what is supposed to do and what is not supposed to do. And after a number of repetitions, your pet understand what you like and what you don't like.

Q: How long will it take to get my pet trained well?
A: It takes time to eliminate a misbehavior or teach an obedience command. Please be patient. Overquick training may not lead to ideal outcome.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into Standby mode after 4 minutes without movement. And any gentle movement can activate it.
7. Make sure Receiver Collar is properly worn and the collar can't be too loose.
8. Trim your pet's fur where the screw caps (contact points) touch the neck and/or change to the longer contact points.

Q: The pet training systems does not work, or my pet does not respond after correct installation of the pet training system, how should I solve this problem?
A: 1. Make sure both Remote Transmitter and Receiver Collar have enough power to operate.
2. Check to see if Receiver Collar is turned on.
3. Check "CH" button on Remote Transmitter to ensure Dog Channels are correctly configured.
4. Try pairing Remote Transmitter and Receiver Collar.
5. Take off Receiver Collar and test all of the three functions work properly.
6. Receiver Collar goes into