


正面

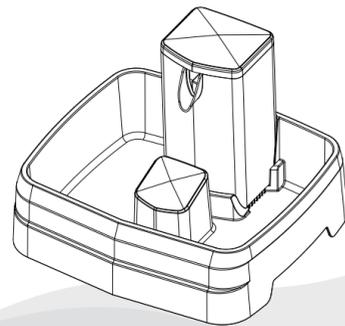

Pet Fountain

Before we start: Care instructions

To keep providing fresh, clean water for your pet, remember these three simple tasks:

Refill often.

Keep the water level up. The pump is designed to work in at least one inch of water. The pump can fail if it runs dry.


Clean your pump and your fountain.

Take your pump and fountain apart to clean with soap and water every two to four weeks. Be careful not to get soap in the filters, as it will not rinse out.

Replace your filters.


Replace the carbon filter every four weeks when you clean your fountain.
Replace the foam filter every two months.

What you have:

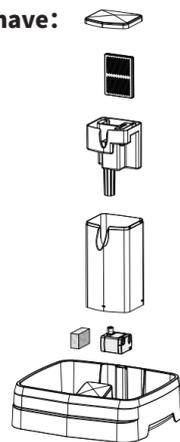

Setup instructions

1 Schematic diagram for pump installation

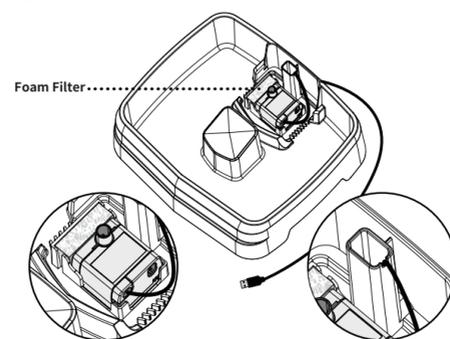


Put the pump and foam filter into the bottom of the bowl as shown. Press down to engage the suction cups.

Put the cord in the notch.

背面


2 Install outlet tower

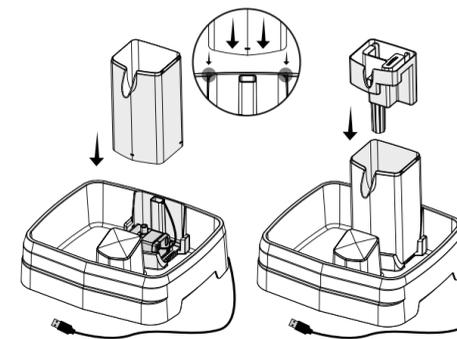

Attach the tower by aligning it with the raised notches on the back of the bowl.

Install the filter holder into tower.


3 Install the filter and the cover

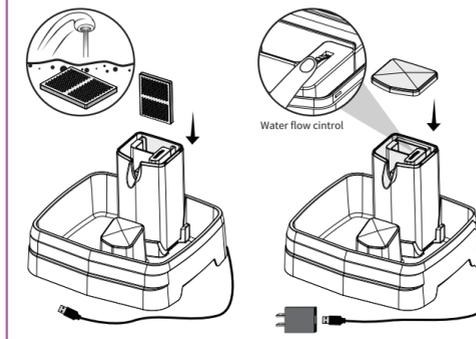

Insert the filter. The filter fits into the two slots located inside the tower.

Attach the lid to the tower. Pick up the pet fountain by the bowl and place it in a desired location. Pour water into the bowl. Connect the power adaptor.

Use instructions

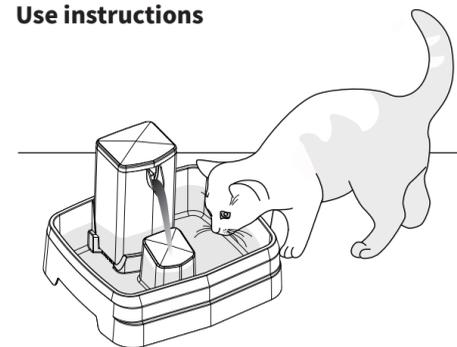


Place the fountain where your pet will use it. Fill the bowl with water, leaving a half inch of space between the water and the rim. Make sure your hands, the cord and the power adaptor are dry, then plug the fountain into an outlet.

Keep health and happiness flowing!

To extend product life, please clean the pump every 2 weeks.

1. Remove the Pump Cover
2. Remove the Impeller cap by placing your fingernail underneath the small lip located.
3. Remove the impeller and clean the parts with soap and warm water.

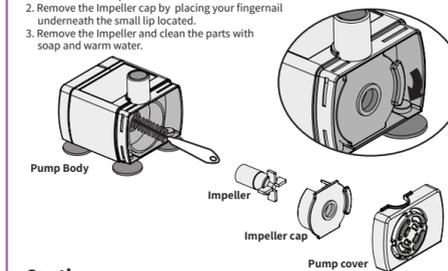

Cautions

1. Be sure to shut down and disconnect the power supply for safety when the equipment is not in use.
2. This product is for indoor use only.
3. The power adaptor and wire plug must not be flooded during cleaning.
4. This product is not allowed to run without water (can be ignored for models with the function of outage automatically without water).
5. Please disconnect the power supply before maintaining and cleaning the machine.