




EYENIMAL

A LIVING ADVENTURE

PROFESSIONAL PET CLIPPER

Tondeuse filaire pour animaux de compagnie

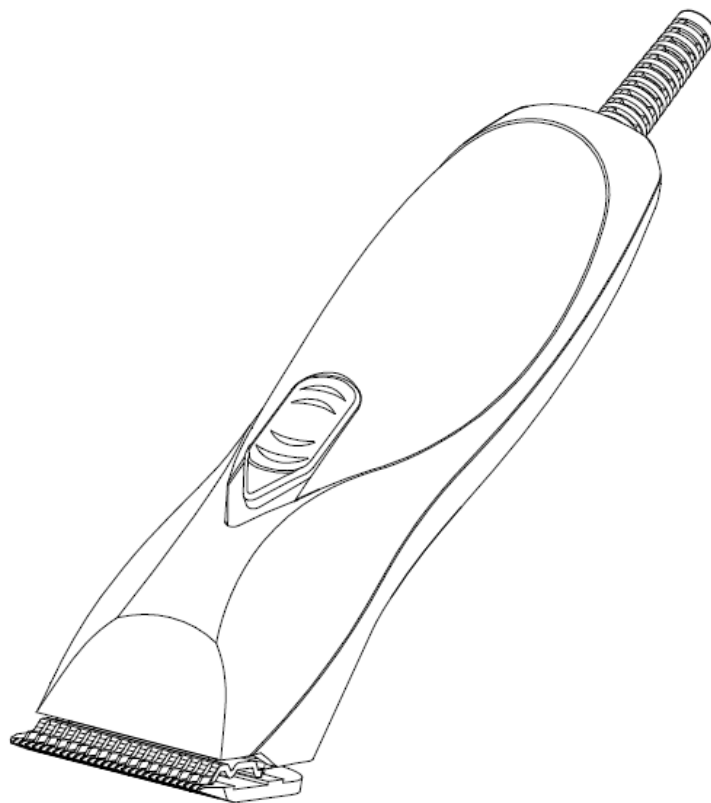

FR - Guide d'utilisation
EN - User's guide
ES - Manual de instrucciones
D - Gebrauchsanleitung
IT - Manuale d'uso

NUM'axes

EN - User's guide

Product contents

Professional AC pet clipper with 1 extra blade, 4 comb attachments, 1 empty bottle, 1 cleaning brush.

Technical features

Dimensions:	19.3 x 4.9 cm
Weight:	580 g
Electric power:	55W
2 levels of rotation speed:	2000RPM and 3200RPM

Operation instructions

1. Connect the AC adapter to an electrical outlet.
2. Switch the appliance on using the on/off switch.
3. After use, switch the appliance off and unplug the AC adapter from the electrical outlet.

2-Speed feature

The appliance has two different speed settings. The speed can be selected via the on/off switch.

Setting I = low speed

Setting II = high speed

Use low speed for most cutting needs. Use the high speed setting to cut through heavy coats.

Cutting with the comb attachments

The Professional Pet Clipper can also be operated with the included comb attachments. Comb attachments extend the cutting length range.

To attach your chosen comb, place it onto the bottom edge of the blade set and push it over the cutting edge of the bottom blade until it locks into place.

To remove the comb attachment, push it towards the cutting edge of the bottom blade and remove it from the blade set.

Changing the blade set

1. Switch the appliance off.
2. Press the release button towards the blade set (Diagram 1).
3. While holding down the blade release mechanism, push down on the blade, then gently pull the blade forward, and slide it off the blade hinge (Diagram 2).
4. Ensure that the blade hinge is folded out. If this is not the case, you can fold out the blade hinge carefully with a flat screwdriver (Diagram 3).

5. Attach the new blade set onto the blade hinge (Diagram 4).
6. Switch the clipper on, then push the blade set towards the clipper to lock it into position until it audibly clicks.



Diagram 1



Diagram 2



Diagram 3



Diagram 4

Cleaning after each use

Remove any stray hairs or debris from the appliance after each use. Clean the blades and combs by blowing on them or use the included cleaning brush.

Maintenance

Clean your Professional Pet Clipper regularly with a slightly damp, soft cloth.

After cleaning the blade set, dispense a small drop of lubricating oil of your choosing on the 5 most important points (Diagram 5) and switch the device on for a few seconds (approx. 10 seconds) to ensure the oil is evenly distributed.

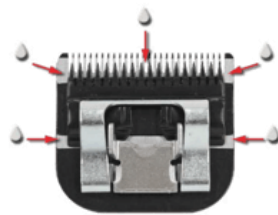


Diagram 5

How to groom your pet

Dirt and sand caught in your pet's coat can damage the blades. That is why we recommend bathing and drying your pet carefully prior to grooming. Untangle your pet's coat if necessary.

Acclimate your pet to the clipper sound, by gradually bringing the clipper closer to them while speaking in a soft, soothing voice, petting and comforting them.

Start by trimming the face and throat, then run the clipper on the neck and shoulder area. Move on to the back, rump, sides and belly. Work your way to the chest, then end with the legs (it is easier to clip the legs when held in straight position).

Hold the blade safely against your pet's body, and clip slowly in the direction of hair growth, making sure to keep the blade parallel to the skin. Make successive lines, trying as much as possible to finish each line so as to avoid clipping the same area several times.

Face and throat should be clipped opposite the hair growth pattern.

To clip paws, place the blade at the nail bed, and run the clipper slowly along each toe, opposite the hair growth pattern. Beware of cutting your pet's skin between the toes.

Important safety instructions

1. Do not disassemble the appliance yourself.
2. Do not clean the appliance with tap water and keep the clipper away from moisture.
3. Do not use corrosive products such as alcohol or gasoline to clean the appliance.
4. Keep the appliance away from any heat source. It should be stored in a cool, dry place.

Warning

The appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are closely supervised.

Do not reach for an appliance that has fallen into water. Unplug immediately.

Always unplug the appliance immediately after use, as well as before cleaning, attaching or removing any parts.

Do not use the appliance for other than intended purpose.

Never operate the appliance if damaged. Return it to NUM'AXES after-sales department.

Troubleshooting

Should your product stop working or develop a fault, first read this user's guide over. Also, make sure that you are using the product correctly.

If the problem persists, contact your retailer or check out our FAQ section at www.numaxes.com. You can also contact NUM'AXES at **+33.2.38.69.96.27** or by e-mail at export@numaxes.com.

Depending on the extent of the malfunction, you may have to return your product for service and repair.

For repairs, please provide the complete product and the proof of purchase (invoice or sales receipt).

Warranty

NUM'AXES guarantees the products against all manufacturing defects for two years after purchase. All postage and packing charges will be the purchaser's sole responsibility.


Warranty conditions

1. The warranty applies only with a proof of purchase (invoice or sales receipt). The warranty is exclusive to the original purchaser.
2. This warranty does not cover the following:
 - direct or indirect problems incurred when sending the product back to the distributor or to NUM'AXES,
 - damage to the product caused by:
 - negligence or incorrect use (ex: bites, breakage, cracking),
 - misuse from not following directions
 - repairs performed by unauthorized persons.

- loss or theft.
3. If the product is found to be defective, NUM'AXES will decide either to repair or to replace it.
 4. No claim may be made against NUM'AXES, particularly in relation to incorrect use or breakdown.
 5. NUM'AXES reserves the right to modify the characteristics of its products with a view to making technical improvements or to complying with new regulations.
 6. The information contained in this guide may be subject to amendment without prior notice.
 7. Photos and drawings are not contractual.

End-of-life product recycling or safe disposal



The pictogram , which appears on your product, means that it cannot be disposed of in household waste.

You must either bring the device to a collection point for treatment, recovery, recycling and elimination of electronic waste, or return it to your retailer.

Safe disposal of electronic waste promotes environment protection, and makes your input to natural resources conservation and protection of human health.