



X-SERIES

OPERATING GUIDE FOR SD-425X-E, SD-825X-E, SD-1225X-E & SD-1825X-E
PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING

MANUEL D'UTILISATION POUR SD-425X-E, SD-825X-E, SD-1225X-E ET SD-1825X-E
VEUILLEZ LIRE CE MANUEL DANS SON INTÉGRALITÉ AVANT DE COMMENCER

GEBRAUCHSANWEISUNG FÜR SD-425X-E, SD-825X-E, SD-1225X-E UND SD-1825X-E
BITTE VOR BEGINN DIE GESAMTE ANWEISUNG LESEN

GUIDA ALL'USO PER SD-425X-E, SD-825X-E, SD-1225X-E E SD-1825X-E
LEGGERE QUESTA GUIDA PER INTERO PRIMA DI INIZIARE

MANUAL DE FUNCIONAMIENTO PARA SD-425X-E, SD-825X-E, SD-1225X-E Y SD-1825X-E
LEA POR COMPLETO ESTE MANUAL ANTES DE EMPEZAR

GEBRUIKSAANWIJZING VOOR SD-425X-E, SD-825X-E, SD-1225X-E EN SD-1825X-E
LEES DE HELE GEBRUIKSAANWIJZING VOORDAT JE BEGINT

Hereinafter Radio Systems Corporation, Radio Systems PetSafe Europe Ltd., Radio Systems Australia Pty Ltd. and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

Thank you for choosing SportDOG® Brand training products. Used properly, this product will help you train your dog efficiently and safely. To ensure your satisfaction, please review the Operating Guide thoroughly. Please contact our Customer Care Centre for further assistance. For a listing of telephone numbers in your area, visit our website at www.sportdog.com.

To get the most protection out of your warranty, please register your product within 30 days at www.sportdog.com. By registering and keeping your receipt you will enjoy the product's full warranty and, should you ever need to call the Customer Care Centre, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at www.sportdog.com.

OTHER IMPORTANT INFORMATION

Use of this product implies acceptance of any and all terms, conditions, and notices related to this product including, but not limited to, those found in this Operating Guide and the Insert containing important Regulatory Compliance and Safety information that came with your unit.

TABLE OF CONTENTS

COMPONENTS	3
HOW THE SYSTEM WORKS	3
KEY DEFINITIONS	4
CHARGE THE REMOTE TRANSMITTER.....	5
CHARGE THE COLLAR RECEIVER.....	6
FIT THE COLLAR RECEIVER.....	8
FIND THE BEST INTENSITY LEVEL.....	8
CHANGING STATIC STIMULATION RANGES.....	9
GENERAL TRAINING TIPS	9
PROGRAM THE REMOTE TRANSMITTER	10
MATCH THE COLLAR RECEIVER AND REMOTE TRANSMITTER	14
PROGRAM THE SYSTEM FOR MULTI-DOG OPERATION	14
CHANGE ID CODES.....	16
ACCESSORIES	16
FREQUENTLY ASKED QUESTIONS.....	17
TROUBLESHOOTING.....	18
TEST LIGHT INSTRUCTIONS	19
BATTERY	19

You  videos available at www.youtube.com/sportdogintl or on each products' VIDEOS tab at sportdog.com.

COMPONENTS

YOUR SD-425X-E, SD-825X-E, SD-1225X-E, OR SD-1825X-E SYSTEM INCLUDES THE FOLLOWING:

- Remote Transmitter
- Collar Receiver
- Charging Adaptor
- Charging Cradle (SD-1225X-E & SD-1825X-E)
- Short/Long Contact Points
- Lanyard
- Belt Clip (SD-825X-E, SD-1225X-E, SD-1825X-E)
- Test Light Tool

HOW THE SYSTEM WORKS

Your SportDOG® Brand system has been proven safe, comfortable, and effective for all dogs over 3.6 kilograms. Consistent, correct use of this product allows you to reinforce commands and correct misbehaviour as far as 1,600 metres, depending on your system (see below). The Remote Transmitter sends a signal, activating the Collar Receiver to deliver a harmless stimulation. With proper training, a dog will learn to associate this signal with a command. Like all SportDOG® products, this model features adjustable static stimulation levels so you can tailor the stimulation level to your dog's temperament, eliminating the risk of over-stimulation.

SD-425X-E: 450 METRES

SD-825X-E: 800 METRES

SD-1225X-E: 1,200 METRES

SD-1825X-E: 1,600 METRES

IMPORTANT: DEPENDING ON THE WAY YOU HOLD THE REMOTE TRANSMITTER, THE MAXIMUM RANGE MAY VARY. FOR CONSISTENT RESULTS AT LONGER RANGES, HOLD THE REMOTE TRANSMITTER IN A VERTICAL POSITION AWAY FROM YOUR BODY AND ABOVE YOUR HEAD. TERRAIN, WEATHER, VEGETATION, TRANSMISSION FROM OTHER RADIO DEVICES, AND OTHER FACTORS WILL AFFECT THE MAXIMUM RANGE.





KEY DEFINITIONS

REMOTE TRANSMITTER: Transmits the radio signal to the Collar Receiver. It is waterproof and can be submerged in water to a depth of 7.5 metres.

INTENSITY DIAL: Provides multiple levels of static stimulation so you can match the stimulation to your dog's temperament.

TRANSMITTER INDICATOR LIGHT: Indicates that a button is pressed and also serves as a low-battery indicator.

TOGGLE SWITCH: This switch is factory-set so that the Remote Transmitter can control two Collar Receivers.

UPPER BUTTON: This button is factory-set to deliver medium continuous static stimulation.

LOWER BUTTON: This button is factory-set to deliver low continuous static stimulation.

SIDE BUTTON: This button is factory-set to deliver high continuous static stimulation.

CHARGING JACK: For connecting the charger. Although the Remote Transmitter is waterproof without it, keep the cover in place when not charging to keep debris out of the opening.

MODE BUTTON: This button gives you the ability to change the mode of your Remote Transmitter (see page 10).


COLLAR RECEIVER: Receives the radio signal from the Remote Transmitter and delivers the static, vibration, or tone stimulation for correcting or cueing your dog. It is waterproof and can be submerged in water to a depth of 7.5 metres.

RECEIVER INDICATOR LIGHT: Indicates when the Collar Receiver has been turned on or off, serves as a low-battery indicator, and also indicates when a continuous or momentary (nick) static stimulation button is pressed.

CONTACT POINTS: The contacts through which the Collar Receiver delivers static stimulation.

ON/OFF BUTTON: Momentarily pressing and releasing this button turns the Collar Receiver on and off.

CONTACT POINTS

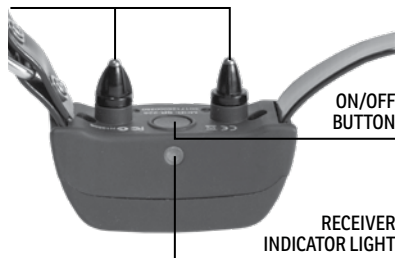

THE COLLAR RECEIVER IS CAPABLE OF DELIVERING FOUR TYPES OF STIMULATION

CONTINUOUS: You control both when and how long static stimulation is delivered, up to a maximum of 10 seconds. After 10 seconds, the stimulation will "time out" and the Transmitter button needs to be released and then pressed again before additional static stimulation can be delivered.

MOMENTARY (NICK): Static stimulation is delivered for 1/10 of a second, regardless of how long the button is pressed.

TONE: The Collar Receiver will make a rapid beeping noise when a Tone button is pressed.*

VIBRATION: The Collar Receiver will vibrate when a Vibration button is pressed, up to a maximum of 10 seconds.*

*Tone and vibration come preset and are not adjustable

STEP::1 CHARGE THE REMOTE TRANSMITTER

1. Lift the rubber cover protecting the Charging Jack and connect the corresponding charge connector.
2. Plug the charger into a standard wall outlet for 2 hours every time you charge.
3. When charging is complete, indicated by the light flashing green once per second, replace the rubber cover.

Using Li-Ion technology, the Remote Transmitter only requires a 2-hour charge. It is not harmful to let the unit charge for more than 2 hours.

NOTE: Approximate battery life between charges is 50 to 70 hours for SD-425X-E / SD-825X-E and 40 to 60 hours for SD-1225X-E / SD-1825X-E, depending on frequency of use.



TRANSMITTER INDICATOR LIGHT

OPERATIONAL MODE	LIGHT COLOUR	BATTERY STATUS	LIGHT FUNCTION
Continuous static, tone, or vibration stimulation button pressed	Green	Good	Light is solid in colour while button is pressed
Continuous static, tone, or vibration stimulation button pressed	Red	Low	Light is solid in colour while button is pressed
Momentary static stimulation button pressed	Green	Good	Light flashes once and turns off
Momentary static stimulation button pressed	Red	Low	Light flashes once and turns off
Unit is charging	Green	Low	Light is solid in colour while on the charger
Unit is fully charged (charger still connected)	Green	Good	Light flashes once per second once the battery is completely charged

STEP::2 CHARGE THE COLLAR RECEIVER

425X-E or 825X-E

1. Lift the rubber cover protecting the collar Charging Jack and connect the charger.



1225X-E or 1825X-E

Align the Contact Points with the Charging Cradle, making sure the hole on the Cradle aligns with the Receiver Indicator Light, and push the Cradle up and back until it snaps in to place. Connect the charger to the Charging Cradle.



2. Plug the charger into a standard wall outlet for 2 hours every time you charge. The Receiver Indicator Light will flash green once per second once the battery is completely charged.
3. Remove the charger and secure the rubber cover fully to ensure debris does not enter the Charging Jack.

Remove both the charge connector and Charging Cradle from the Collar Receiver. The Charging Cradle is not intended to be attached when the Collar Receiver is in use.

Using Li-Ion technology, the Collar Receiver only requires a 2-hour charge. It is not harmful to let the unit charge for more than 2 hours.

TO TURN THE COLLAR RECEIVER ON

Press and release the On/Off Button. The Collar Receiver Indicator Light will come on and the Collar Receiver will beep 1-2 times for the SD-425X-E / SD-825X-E and 1-3 times for the SD-1225X-E / SD-1825X-E, depending on what stimulation range is chosen. The default is 2 (medium).

ON/OFF
BUTTON



TO TURN THE COLLAR RECEIVER OFF

Press and release the On/Off Button. The Receiver Indicator Light comes on solid red and the Collar Receiver beeps for 2 seconds. To extend the life between charging cycles, turn the Collar Receiver off when it is not in use.

NOTE: Approximate battery life between charges is 50 to 70 hours for SD-425X-E / SD-825X-E and 140 to 160 hours for SD-1225X-E / SD-1825X-E, depending on frequency of use.

RECEIVER INDICATOR LIGHT




OPERATIONAL MODE	LIGHT COLOUR	BATTERY STATUS	LIGHT FUNCTION	SPEAKER FUNCTION	VIBRATION
Unit is turned on via On/Off button	Green	Good	Light is solid in colour during beep sequence	Beeps 1-2 times (1-3 times for SD-1225X-E & SD-1825X-E) depending on stimulation range setting (2 is the default setting). Please see page 09.	N/A
Unit is turned on via On/Off button	Red	Low	Light is solid in colour during beep sequence		
Unit is turned off via On/Off button	Red	N/A	Light is solid in colour during beep sequence	Beeps continuously for 2 seconds	N/A
Unit is on	Green	Good	Light flashes every 2 seconds	N/A	N/A
Unit is on	Red	Low	Light flashes every 2 seconds	N/A	N/A
Unit is delivering continuous static stimulation	Red	N/A	Light is solid in colour for as long as button is pressed (up to 10 seconds)	N/A	N/A
Unit is delivering momentary static stimulation	Red	N/A	Light will quickly flash once no matter how long button is pressed	N/A	N/A
Unit is delivering tone stimulation	Off	N/A	N/A	Unit will beep for as long as button is pressed	N/A
Unit is delivering vibration stimulation	Off	N/A	N/A	N/A	Unit will vibrate for as long as button is pressed (up to 10 seconds)
Unit is charging	Green	Low	Light is solid in colour while on the charger	N/A	N/A
Unit is fully charged (charger still connected)	Green	Good	Light flashes once per second once the battery is completely charged	N/A	N/A

STEP::3 FIT THE COLLAR RECEIVER

IMPORTANT: THE PROPER FIT AND PLACEMENT OF THE COLLAR RECEIVER IS IMPORTANT FOR EFFECTIVE TRAINING. THE CONTACT POINTS MUST HAVE DIRECT CONTACT WITH YOUR DOG'S SKIN.

To ensure a proper fit, follow these steps:

1. With your dog standing (3A), place the Collar Receiver as high as possible on your dog's neck, slightly to either side, so the Contact Points are touching the skin (3B). If your dog has a long or thick coat, you have two options to ensure consistent contact: either trim the hair around the Contact Points or switch to the longer Contact Points included with your system.
2. The Collar Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (3C).
3. Allow your dog to wear the collar for several minutes, and then recheck the fit. Check the fit again as your dog becomes more comfortable wearing the Collar Receiver.

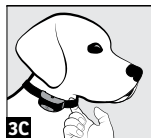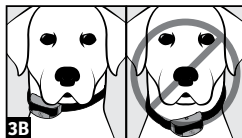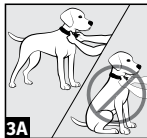

STEP::4 FIND THE BEST INTENSITY LEVEL

Your SportDOG® Brand system has multiple intensity levels. This allows you to choose the static stimulation level that is best for your dog. For training efficiency, it is important to find the right intensity level for your dog. This is called the Recognition Level, at which your dog looks around in curiosity, or flicks his ears.

NOTE: Always start at the lowest level and work your way up.

FINDING YOUR DOG'S RECOGNITION LEVEL

NOTE: Every dog is different and you cannot predict where your dog's Recognition Level will be. Watch closely for any slight change in behaviour that demonstrates your dog is feeling the static stimulation.

1. With the Collar Receiver turned on and properly fitted to your dog, set the Remote Transmitter's Intensity Dial at Level 1 and press the Continuous Static Stimulation Button for 1 to 2 seconds.
2. If your dog shows no reaction to Level 1, go to Level 2 and repeat the process until you find your dog's Recognition Level. This is the level you should use when you begin a training exercise.
3. **YOUR DOG SHOULD NOT VOCALISE OR PANIC WHEN RECEIVING STATIC STIMULATION. IF THIS HAPPENS, THE STATIC STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.**
4. If you have progressed to the highest static stimulation level while searching for your dog's Recognition Level and your dog continues to show no response, check to see if the Collar Receiver is snug against your dog's neck. Then go back to Intensity Level 1 and repeat the process. If your dog still does not indicate he is feeling the static stimulation, you have two options: you may either have to trim the hair beneath the Contact Points, or switch to the longer Contact Points included in your system.

If after completing all of these steps your dog still does not indicate he is feeling the static stimulation or if the static stimulation seems too high, you can try changing your Collar Receiver's stimulation range using the following instructions. Contact the Customer Care Centre if you are not able to find your dog's Recognition Level.

CHANGING STATIC STIMULATION RANGES

Your SportDOG® Brand Collar Receiver comes with 2-3 static stimulation ranges depending on the model. In the Remote Transmitter's default mode there are 21 static stimulation levels within each range, with 1 being the lowest and 21 being the highest. The default range setting is 2 or medium.

To change the range of static stimulation, follow these steps:

1. Make sure the Collar Receiver is off.
2. Then turn the unit on by pressing and releasing the On/Off button.
3. After the Indicator Light turns off and within 5 seconds, press and hold the On/Off button for 3 seconds.
4. The Collar Receiver will then beep and the Indicator Light will flash orange as indicated by the chart below. Continue to hold the button until the number of beeps/orange flashes equals the desired stimulation range shown.
5. Release the button once the desired range is selected; the Collar Receiver will turn off.
6. Turn the unit back on. It will then beep according to the static stimulation range selected in Step 4.

BEEPS	STATIC STIMULATION RANGE	DOG TEMPERAMENT	MODEL
1 beep	Low	Mild	SD-425X-E, SD-825X-E, SD-1225X-E, SD-1825X-E
2 beeps	Medium	Moderate	SD-425X-E, SD-825X-E, SD-1225X-E, SD-1825X-E
3 beeps	High	Stubborn	SD-1225X-E, SD-1825X-E

GENERAL TRAINING TIPS BEFORE TRAINING YOUR DOG WITH THIS PRODUCT

You will have the most success using this remote trainer if you always remember to teach a command before trying to reinforce the command with a remote trainer. Your training will be easier and proceed faster if you follow the guidelines in this Operating Guide. In addition, always keep the following training tips in mind:

- Eliminate one misbehaviour or teach one obedience command at a time. If you move too fast with the training, your dog may become confused.
- Keep your training sessions positive, short, and frequent. If you or your dog become frustrated or confused, it's best to take a break.
- Be consistent. Give your dog a tone, vibration, or static stimulation with each misbehaviour.
- Do not overcorrect your dog. Use as few stimulations as possible to train your dog.
- Restrict your dog from situations in which he has a history of misbehaving unless you can supervise him and use your remote trainer for applying tone, vibration, or static stimulation.
- If you notice one situation in which your dog misbehaves repeatedly, set up this situation as a training session. This will dramatically increase your chances of success.
- If your dog has a timid reaction to the tone, vibration, or static stimulation (especially the first couple of times), do not be alarmed. Redirect his attention to a simple and appropriate behaviour (i.e. a known command, such as "Sit").
- Never use your remote trainer to correct or eliminate any form of aggressive behaviour. If your dog exhibits such behaviour, contact a professional trainer. Aggression in dogs is the result of many factors – it may be a learned behaviour or it may be brought on as a result of fear. Another factor contributing to aggression in dogs is social dominance. Every dog is different.

At this point, your remote trainer is ready to use. The Transmitter is factory set to mode 5 (mode 5 toggle up for SD-1825X-E), but you may wish to change the mode to fit your situation. See STEP 5 for an explanation of mode options.

STEP::5 PROGRAM THE REMOTE TRANSMITTER

SD-425X-E, SD-825X-E, SD-1225X-E

Your Remote Transmitter has seven operational modes to allow you to select the best match for your type or style of training. There is also one programming mode (Mode V/T) which allows you to change the system's ID code. The Remote Transmitter is factory set to mode 5.

TO CHANGE THE MODE

1. Referring to the following table, adjust the Intensity Dial to your desired mode.
2. Turn the Remote Transmitter over and remove the belt clip if attached (SD-825X-E and SD-1225X-E only).
3. Using a pen or the tine on the buckle of your collar strap, press and release the Mode Button. When the Mode Button is pressed, the Transmitter Indicator Light will be solid in colour. When it is released, it will flash the mode selected.

For example, if mode 6 is desired, adjust the Intensity Dial to Level 6. Once the Mode Button has been depressed, the Transmitter Indicator Light will be solid, and once the Mode Button is released, the Transmitter Indicator Light will flash 6 times.



SD-425X-E, SD-825X-E, SD-1225X-E MODE CHART

(REFER TO PAGE 10 TO CHANGE MODE)

MODE	UPPER BUTTON FUNCTION	LOWER BUTTON FUNCTION	SIDE BUTTON FUNCTION	NUMBER OF DOGS
1	Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	Momentary stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	Tone only	1
2	Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Momentary stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Vibe only	1
3	Dog 1: Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Dog 2: Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Dog 3: Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	3
4	Dog 1: Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	Dog 2: Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	Dog 3: Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	3
5*	Medium Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Low Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	High Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	1
6	Medium Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	Low Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	High Continuous stimulation (Level set by Intensity Dial) OR Vibe if V/T on dial	1
7	Continuous stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Momentary stimulation (Level set by Intensity Dial) OR Tone if V/T on dial	Locate Remote Beeper**	1
V/T (ID CODE)	N/A	N/A	See STEP 08	N/A

NOTE: Modes 1, 2, 3, 4 and 7 provide 7 Levels of stimulation, which correspond to the setting of the Intensity Dial.

Modes 5 and 6 provide more "increments" to choose from – a total of 21 levels of static stimulation. For example, in mode 5 with the Intensity Dial set at 1, the Lower Button provides level 1 of 21, the Upper Button provides level 2 of 21, and the Side Button provides level 3 of 21.

* Factory Default Mode.

** Locate Remote Beeper: The Side Button turns run mode off and locates the Remote Beeper. To enable run mode again, press and hold the Side Button for 3 seconds.

SD-1825X-E

Your Remote Transmitter has 14 operational modes (seven with the toggle switch in the **grey/↑** position and seven with the toggle in the **orange/↓** position) to allow you to select the best match for your type or style of training. The Remote Transmitter is factory set to mode 5:↑. There is also one programming mode (Mode V/T) which allows you to change the system's ID code.

TO CHANGE THE MODE

1. Referring to the "SD-1825X-E MODE CHART" on page 13, choose your desired mode number (1-7) and toggle position (↑ or ↓). Adjust both the Intensity Dial and Toggle Switch to match your desired mode.
2. Turn the Remote Transmitter over and remove the belt clip (if attached).
3. Using a pen or the tine on the buckle of your collar strap, press and release the Mode Button. When the Mode Button is pressed, the Transmitter Indicator Light will be solid in colour. When it is released, it will flash a number of times that corresponds to the mode selected.

For example, if mode 6:↑ is desired, switch the toggle to the **grey/↑** position and adjust the Intensity Dial to Level 6. Once the Mode Button has been depressed, the Transmitter Indicator Light will be solid, and once the Mode Button is released, the Transmitter Indicator Light will flash 6 times. However, if you select Mode V/T (ID Code) in the **grey/↑** position, the light will remain solid in colour once the Mode Button is released.

* Factory Default Mode.

- For two-dog operation setup refer to STEP 07 on pages 14-15.
- ▲ For three- and six-dog operation setup refer to STEP 07 on page 14-15.
- Locate Remote Beeper: The Side Button turns run mode off and locates the Remote Beeper. To enable run mode again, press and hold the Side Button for 3 seconds.



SD-1825X-E MODE CHART (REFER TO PAGE 12 TO CHANGE MODE)

MODE: TOGGLE POSITION	NUMBER OF DOGS	TOGGLE SWITCH FUNCTION		UPPER BUTTON FUNCTION		LOWER BUTTON FUNCTION		SIDE BUTTON FUNCTION	
		↑	↓	DIAL 1-7	V/T	DIAL 1-7	V/T	DIAL 1-7	V/T
1:↑	2'	Dog 1	Dog 2	High Continuous Stimulation	Vibe	High Momentary Stimulation	Vibe	Tone	
1:↓	2	Dog 1	Dog 2	High Continuous Stimulation	Vibe	High Continuous Stimulation	Vibe	Locate Remote Beeper*	
2:↑	2	Dog 1	Dog 2	High Continuous Stimulation	Tone	High Momentary Stimulation	Tone	Vibe	
2:↓	2	Dog 1	Dog 2	High Continuous Stimulation	Vibe	Low Continuous Stimulation	Vibe	Tone	
3:↑	6^	Dogs 1-3	Dogs 4-6	Dog 1 (↑) / Dog 4 (↓)		Dog 2 (↑) / Dog 5 (↓)		Dog 3 (↑) / Dog 6 (↓)	
				High Continuous Stimulation	Tone	High Continuous Stimulation	Tone	High Continuous Stimulation	Tone
3:↓	2	Dog 1	Dog 2	High Continuous Stimulation	Tone	Low Continuous Stimulation	Tone	Vibe	
4:↑	6	Dogs 1-3	Dogs 4-6	Dog 1 (↑) / Dog 4 (↓)		Dog 2 (↑) / Dog 5 (↓)		Dog 3 (↑) / Dog 6 (↓)	
				High Continuous Stimulation	Vibe	High Continuous Stimulation	Vibe	High Continuous Stimulation	Vibe
4:↓	2	Dog 1	Dog 2	Rising High Continuous Stimulation	Vibe	High Continuous Stimulation	Vibe	Tone	
5:↑*	2	Dog 1	Dog 2	Medium Continuous Stimulation	Tone	Low Continuous Stimulation	Tone	High Continuous Stimulation	Tone
5:↓	2	Dog 1	Dog 2	Rising High Continuous Stimulation	Tone	High Continuous Stimulation	Tone	Vibe	
6:↑	2	Dog 1	Dog 2	Medium Continuous Stimulation	Vibe	Low Continuous Stimulation	Vibe	High Continuous Stimulation	Vibe
6:↓	2	Dog 1	Dog 2	High Continuous Stimulation	Vibe	Tone	Vibe	N/A	
7:↑	2	Dog 1	Dog 2	High Continuous Stimulation	Tone	High Momentary Stimulation	Tone	Locate Remote Beeper*	

7:↓	2	Dog 1	Dog 2	High Continuous Stimulation	Tone	Vibe	Tone	N/A
V/T (ID CODE)	N/A	a		N/A		N/A		See STEP 08

STEP::6 MATCH THE COLLAR RECEIVER AND REMOTE TRANSMITTER

To match the Collar Receiver with a new Remote Transmitter or to reprogram a new Collar Receiver to work with your existing Remote Transmitter:

1. Turn off the Collar Receiver.
2. Press and hold the On/Off Button. The Receiver Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin flashing as normal. If this occurs, start again from Step 1.
3. After the Receiver Indicator Light has turned off, release the On/Off Button.
4. Press and hold the Upper Button on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. Once the Receiver Indicator Light has flashed 5 times, the Collar Receiver has been matched and will begin flashing as normal. If the Receiver Indicator Light does not flash 5 times, start again from Step 1.

STEP:7 PROGRAM THE SYSTEM FOR MULTI-DOG OPERATION

SD-425X-E, SD-825X-E, SD-1225X-E

SportDOG® Add-A-Dog® Collar Receiver(s) must be purchased to train two or three additional dogs.

1. Program the Remote Transmitter to mode 3 or 4 (see TO CHANGE THE MODE on page 10).
2. Program the first Collar Receiver.
 - A. Turn off the Collar Receiver.
 - B. Press and hold the On/Off Button. The Receiver Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin its normal flashing. If this occurs, start again and repeat from Step A.
 - C. After the Receiver Indicator Light has turned off, release the On/Off Button.
 - D. Press and hold the **Upper Button** on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. If the Receiver Indicator Light does not flash 5 times, start again and repeat from Step A.
3. Program the second Collar Receiver by following Steps A through D above, but using the **Lower Button** in place of the Upper Button.
4. Program the third Collar Receiver by following Steps A through D above, but using the **Side Button** in place of the Upper Button.

SD-1825X-E

SportDOG® Add-A-Dog® Collar Receivers must be purchased to train additional dogs in two-, three-, or six-dog mode.

TWO-DOG OPERATION

SportDOG® Collar Receivers can be set to respond to either the **↑** or **↓** toggle position on the Remote Transmitter.

1. Program the Remote Transmitter to mode 1, 2, 5, 6 or 7 with the toggle in the **grey/↑** position, or any of modes 1-7 with the toggle in the **orange/↓** position (see TO CHANGE THE MODE on page 12).
2. Next, with the toggle switch in the **grey/↑** position, you can now program the first Collar Receiver.
 - A. Turn off the Collar Receiver.
 - B. Press and hold the On/Off Button on the Collar Receiver. The Receiver Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin its normal flashing. If this occurs, start again and repeat from Step A.
 - C. After the Receiver Indicator Light has turned off, release the On/Off Button.
 - D. Press and hold the Upper Button on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. If the Receiver Indicator Light does not flash 5 times, start again and repeat from Step A.
3. To program the second Collar Receiver, repeat Steps A through D, but with the toggle switch in the **orange/↓** position.

THREE-DOG OPERATION

1. Program the Remote Transmitter to mode 3 or 4 with the toggle in the **grey/↑** position (see TO CHANGE THE MODE on page 12).
2. Next, with the toggle switch in the **grey/↑** position, you can now program the first Collar Receiver.
 - A. Turn off the Collar Receiver.
 - B. Press and hold the On/Off Button on the Collar Receiver. The Receiver Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin its normal flashing. If this occurs, start again and repeat from Step A.
 - C. After the Receiver Indicator Light has turned off, release the On/Off Button.
 - D. Press and hold the **Upper Button** on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. If the Receiver Indicator Light does not flash 5 times, start again and repeat from Step A.
3. To program the second Collar Receiver, repeat Steps A through D, using the **Lower Button** in place of the Upper Button.
4. To program the third Collar Receiver, repeat Steps A through D, using the **Side Button** in place of the Upper Button.

SIX-DOG OPERATION

Repeat Steps 1-4 from "THREE-DOG OPERATION" above for dogs 1-3. Then flip the toggle switch to the **orange/↓** position and repeat Steps 2-4 for dogs 4-6.

ADD-A-DOG® MODEL	
SDR-AXF-E	Original Collar Receiver for: SD-425X-E & SD-825X-E (up to 3 dogs)
SDR-AX-E	Original Collar Receiver for: SD-1225X-E (up to 3 dogs) & SD-1825X-E (up to 6 dogs)

STEP::8 CHANGE ID CODES

An ID Code is the signal identification between the Remote Transmitter and Collar Receiver. Each is programmed in 1 of 2,000 ID Codes from the factory. The Remote Transmitter has the flexibility to program two or more Remote Transmitters to the same ID Code, allowing them to control one Collar Receiver. There are 64 programmable ID Codes available.

TO MANUALLY PROGRAM A REMOTE TRANSMITTER'S ID CODE

1. Turn the Intensity Dial to V/T and then press and release the Mode Button on the back of your Remote Transmitter. This does not change the mode, so the current mode will still be active after the ID change is complete.
2. Once the Mode Button is released, the Transmitter Indicator Light will illuminate solid green and stay on for 15 seconds.
3. While the green Indicator Light is on, turn the Intensity Dial to select the 1st digit of the ID and then press and release the Side Button. The green Indicator Light will flash rapidly confirming selection.
4. Again, while the green Indicator Light is on, turn the Intensity Dial to select the 2nd digit of the ID and then press and release the Side Button. The green Indicator Light will flash rapidly confirming selection. The 2nd digit is optional and, if not desired, wait until the green light turns off and refrain from pressing the Side Button.
5. At the end of 15 seconds, or after the second press of the Side Button, the green Indicator Light will turn off and the ID of the Remote Transmitter will be updated. At this point, the Remote Transmitter will be in the same mode it was in prior to setting the ID.
6. Upon changing the ID Code, you will need to match the Collar Receiver to the Remote Transmitter (see STEP 06).

NOTE: If you press the Side Button only once (skipping Step 4) the ID is still a two digit ID. The left digit is defaulted to 1. For example, if you selected 6 in Step 3 and pressed the Side Button only once, the ID you get will be 16.

TO RETURN THE REMOTE TRANSMITTER TO THE FACTORY ID

1. Turn the Intensity Dial to V/T and then press and release the Mode Button on the back of your Remote Transmitter. This does not change the mode, so the current mode will still be active after the ID change is complete.
2. Do not press any buttons and wait until the green Transmitter Indicator Light turns off.
3. You will need to match the Collar Receiver to the Remote Transmitter (see STEP 06).

ACCESSORIES

To purchase additional accessories for your SportDOG® Remote Trainer, contact the Customer Care Centre or visit the Shop section on sportdog.com and search Parts & Accessories.

FREQUENTLY ASKED QUESTIONS

Is the static stimulation safe for my dog?	While Continuous or Momentary static stimulation may be unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.
How old does a dog have to be before using this remote trainer?	Age is not as important as your dog's developmental ability to learn. Your dog should be able to learn basic obedience commands such as "Sit" or "Stay." The Collar Receiver may be too large for dogs under 3.6 kilograms.
Once my dog is trained and has been obeying my commands, will my dog have to continue to wear the Collar Receiver?	Your dog may need to wear the Collar Receiver from time to time for reinforcement. Also, many hunters keep the Collar Receiver on their dogs while hunting for maximum control because they possess a high drive and experience many distractions while in the field.
Is the Collar Receiver waterproof?	Yes. If the rechargeable battery pack ever needs to be replaced, make sure the o-ring and o-ring groove are free from dirt and debris.
Can my Collar Receiver be used around salt water?	If the Collar Receiver is used in or around salt water, the Collar Receiver should be rinsed with fresh water following each use.
Can I use this remote trainer with more than one dog?	Yes, your remote trainer is expandable to a maximum of 3 dogs (up to 6 dogs for SD-1825X-E). SportDOG® Add-A-Dog® Collar Receivers must be purchased. Please refer to page 15 for a list of compatible Collar Receivers.
Can I use this remote trainer on aggressive dogs?	We do not recommend any of our products to be used on aggressive dogs. We recommend you contact your local veterinarian or professional trainer if you believe your dog might be aggressive.
Will I get the exact range claimed with this remote trainer?	The range you get with your remote trainer will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. To get the maximum amount of range, please refer to "How the System Works" section of this guide.
How long can I continuously deliver static stimulation to my dog?	The maximum amount of time you can press the Continuous Static Stimulation Button and deliver static stimulation to your dog continuously is 10 seconds. After 10 seconds, the Remote Transmitter will "time-out," and the Continuous Static Stimulation Button must be released and pressed again.
What do I do if my dog's neck becomes red and irritated?	This condition is due to the Contact Points irritating the skin. Discontinue use of the Collar Receiver for a few days. If the condition persists for over 48 hours, see your veterinary surgeon. Once the skin returns to normal, resume use and monitor the skin condition closely. Avoid leaving the collar on your dog for more than 12 hours per day.
The Intensity Dial seems difficult to rotate. Is this normal?	Yes. This prevents accidental changes in intensity and encourages an optimal waterproof seal. The knob will "break in" and be slightly easier to turn as you use it.
Can I attach a lead to this remote trainer?	DO NOT attach a lead to your remote trainer. You may put a separate non-metallic collar on your dog's neck and attach a lead. Be sure the extra collar does not interfere with the Contact Points.

FREQUENTLY ASKED QUESTIONS

My Remote Transmitter is sending a signal to more than one Collar Receiver unintentionally, what should I do?

In the rare event this occurs, you can change your Remote Transmitter's ID Code (see STEP 08).

TROUBLESHOOTING

The answers to these questions should help you solve any problem you have with this system. If they do not, please contact the Customer Care Centre or visit our website at www.sportdog.com.

My dog is not responding when I press a button.

- Check to see if the Collar Receiver has been turned on and the Indicator Light is flashing.
- If your range has reduced from the first time you have used it, please check to see if the battery is low in either the Remote Transmitter or Collar Receiver.
- Many factors can impact the range you have with your system. For a list of these factors, please refer to "How the System Works".
- You can verify the Collar Receiver is delivering static stimulation to your dog by placing the test light, enclosed in your kit, on the Collar Receiver. Please refer to the "Test Light Instructions" section for details.
- Increase the Intensity Dial. Refer to "Find the Best Intensity Level" for your dog for more information.
- Increase the Static Stimulation Range. Refer to "Changing Static Stimulation Ranges" for more information.
- Make sure the Collar Receiver's Contact Points are placed snugly against your dog's skin. Refer to "Fit the Collar Receiver" for more information.
- You may need to switch to the longer Contact Points included with your system or trim the hair beneath the Contact Points. Never shave the dog's neck.
- If you notice your operating time dropping to about half the original time, your Collar Receiver battery needs to be replaced. Contact the Customer Care Centre to purchase a new one.

The Collar Receiver will not turn on.

- Make sure the Collar Receiver has been charged. The Collar Receiver will charge in 2 hours.

The Collar Receiver is not responding to the Remote Transmitter.

- Make sure the Remote Transmitter has been charged. The Remote Transmitter will charge in 2 hours.
- Verify the Collar Receiver has been turned on and the Indicator Light is flashing. Refer to "To Turn the Collar Receiver On and Off."
- Refer to "Match the Collar Receiver and Remote Transmitter."


TEST LIGHT INSTRUCTIONS

Should you need to test your system, follow these instructions:

1. Turn on the Collar Receiver.
2. Hold the Test Light Contacts to the Contact Points.
3. Press a Static Stimulation Button on the Remote Transmitter.
4. The Test Light will flash.

NOTE: At higher static stimulation levels, the Test Light will flash brighter.

5. Turn off the Collar Receiver.

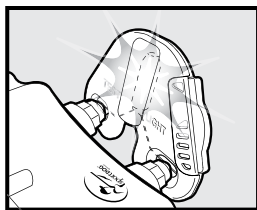

Save the Test Light for future testing.

NOTE: If the Test Light does not flash, recharge the battery and re-test. If the Test Light still does not flash, contact the Customer Care Centre.

BATTERY

This system operates on two Li-Ion battery packs. Only replace with battery received from calling the Customer Care Centre.

- Batteries should never be removed from the battery compartment for charging.
- The rechargeable Lithium Ion (Li-Ion) batteries are not memory sensitive, do not require depletion before charging, and cannot be over charged.
- The batteries come partially charged from the factory, but will require a full charge before the first use.
- **When storing the unit for long periods, remember to regularly give batteries a full charge. This should be done once every 3 to 4 months.**
- You should expect hundreds of recharge cycles from your batteries. However, all rechargeable batteries lose capacity over time relative to the number of recharge cycles they experience. This is normal. If your operating time drops to half of the original life, contact the Customer Care Centre to purchase a new battery.
- The batteries should last for a period of 3-5 years. When a battery needs replacement, you can order a new pack by calling our Customer Care Centre. Please do not open the Collar Receiver or Remote Transmitter until you have received the replacement.

Separate collection of spent batteries is required in many regions; check the regulations in your area before discarding spent batteries. Please see below for instructions on how to remove the battery from the product for separate disposal.

AT END OF PRODUCT LIFE, USE THESE BATTERY REMOVAL INSTRUCTIONS FOR FINAL DISPOSAL (DO NOT OPEN THE COLLAR RECEIVER OR REMOTE TRANSMITTER UNTIL YOU HAVE RECEIVED THE REPLACEMENT).

1. Using a #1 Phillips screwdriver for your Remote Transmitter and/or a 3/32 Hex Key for your Collar Receiver, remove the case screws.
2. Remove the case back or cover.
3. Remove the old battery pack.

These instructions are not valid for repair or battery replacement. To avoid invalidating your warranty, please call the Customer Care Centre for help in replacing your battery with one that is specifically approved by Radio Systems Corporation.

For a list of patents protecting this product, please visit: www.radiosystemscorporation.com/patents

TABELLA DELLE MODALITÀ PER I MODELLI SD-425X-E, SD-825X-E, SD-1225X-E

(FARE RIFERIMENTO ALLA PAGINA 69 PER CAMBIARE MODALITÀ)

MODALITÀ	FUNZIONE PULSANTE SUPERIORE	FUNZIONE PULSANTE INFERIORE	FUNZIONE PULSANTE LATERALE	NUMERO DI CANI
1	Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	Stimolazione momentanea (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	Solo segnale acustico	1
2	Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	Stimolazione momentanea (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	Solo vibrazione	1
3	Cane 1: Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	Cane 2: Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	Cane 3: Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	3
4	Cane 1: Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	Cane 2: Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	Cane 3: Stimolazione continua (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	3
5*	Stimolazione continua media (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico sulla manopola	Stimolazione continua bassa (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	Stimolazione continua alta (livello impostato dalla manopola di regolazione della intensità) OPPURE segnale acustico se sulla manopola compare la scritta V/T	1
6	Stimolazione continua media (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione sulla manopola	Stimolazione continua bassa (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	Stimolazione continua alta (livello impostato dalla manopola di regolazione della intensità) OPPURE vibrazione se sulla manopola compare la scritta V/T	1

EN

FR

DE

IT

ES

NL

**GEAR THE WAY
YOU'D DESIGN IT™**



SPORTDOG.COM

©2021 RADIO SYSTEMS CORPORATION

Radio Systems Corporation • 10427 PetSafe Way • Knoxville, TN USA 37932 • 1.865.777.5404

Radio Systems PetSafe Europe Ltd. • 2nd Floor, Elgee Building, Market Square
Dundalk, Co. Louth, A91 YR9X, Ireland • +353 (0) 42 942 4122

Radio Systems Australia PTY LTD • Suite 11001 Australia Fair Office Towers
36 Marine Parade, Southport, QLD 4215 • +61 1800 786 608
400-2547-19

