

B630 Plus

Bark Control Collar User Manual






Instruction Manual, Version WT-B630 Plus-V1

Please carefully peruse this manual prior to utilization

Contents

Safety Instructions	01
Product Parameters	02
What You Get	03
Function and Operation Description	04
1.At a glance	04
2.Charging	07
3.Installation.....	07
4.Turn on/off	08
5.Operating instructions	08
6.How to test the Static Stimulation function?.....	13
7.Training instructions	14
8.Level chart	15
Wearing Methods and Precautions	16
1.Wearing methods	16
2.Wearing precautions	18
Frequently Asked Questions	19
About After-Sales	25
Compliance	27

Safety Instructions






1	This product cannot be tested directly on humans, otherwise it will violate local laws.	
2	Turn off or remove the Bark Control Collar before playing with the dog.	
3	Please do not wear the device on your dog for a long time.	
4	Do not place the product near a stove or at high temperatures.	
5	Do not open the shell of the product which will cause the lithium battery to disconnect or start a fire.	

Product Parameters

Product Name : Bark Control Collar
Product Model: B630 Plus
Operating Voltage : 3.7V
Battery Capacity : 450mAh
Rated Input: DC 5V /0.5A
Waterproof rating : IP67
Operating temperature: -10°C~+50°C
Storage temperature: -20°C~+60°C
Device volume: 67.4mm*40mm*33mm
Net weight : 56 g


What You Get

COMPONENTS

	Bark control collar	1
	Type-C charging cable	1
	Static stimulation test light	1
	Contact points	2 pairs
	User manual	1

Function and Operation Description


1. At a glance

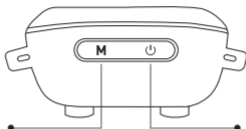


② Mode Button




① Power Button/Sensitivity Adjustment Button

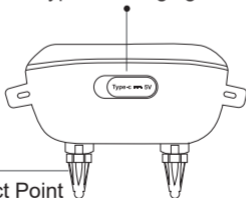



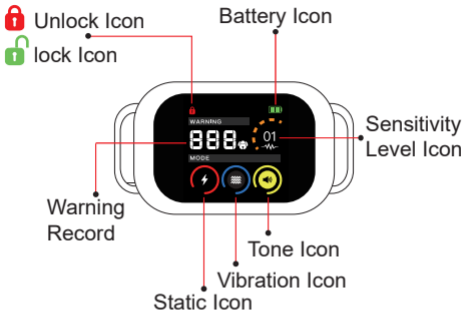

③ Type-C Charging Port



④ Contact Point




Icons	Meaning	Status
	Battery Fully Charged Icon	This icon that signifies a fully charged battery
	Low Battery Icon	This icon indicates low battery
	Unlock Icon	The operation interface is locked

Icons	Meaning	Status
	Lock Icon	The operation interface is unlocked
	Tone function on going	Indicates the product is currently in sound mode
	Vibration function on going	Indicates the product is currently in vibration mode
	Static stimulation function on going	Indicates the product is currently in static mode
	Sensitivity Level Icon	Used to display the current sensitivity level
	Warning Record	When this icon lights up on the screen, it signifies the activation of protective mode

2.Charging

Tips: Please fully charge before use!

 
 The battery is low

 The battery is fully charged




Display Charging Status and Prompt Successful Charging Connection.

3.Installation

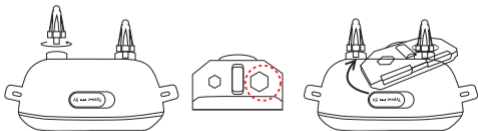

- ① Install the contact points
- ② Static test light
- ③ Use the test light to tighten the contact points

4. Turn on/off

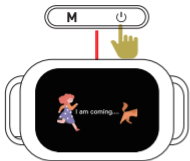

Press and hold the power button for 2 seconds to turn on. The screen will display "I am coming / Bark Control Collar."



Press and hold the power button for 2 seconds to turn off. The screen will display "Waiting for you." The screen will then go dark.

Screen off: The screen will go off if no operation occurs within 30 s. You may press any button to light the screen up.


Without any action, the device will return to the main menu after 5 seconds.

5. Operating instructions

① Locking and Unlocking:




Lock: Press and hold the power button and the M button simultaneously. The screen will display the lock icon, and after 2 seconds, the device will be locked.

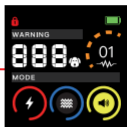

Unlock: Press and hold the power button and the M button simultaneously. The screen will display the unlock icon, and after 2 seconds, the device will be unlocked.

② Tone Mode

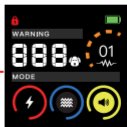

The levels range from 1 to 6, with higher levels resulting in faster sound production.

③ Vibration Mode



The levels range from 1 to 6, exclusively offering vibration. The intensity of the vibrations increases with higher levels.

④ Sound + Vibration Mode



The levels range from 1 to 6, with increasing levels indicating more intense vibrations and heightened auditory alerts.

⑤ Vibration + Static Stimulation Mode



The levels range from 1 to 6, with higher levels progressively increasing the intensity of vibration and transitioning from weak to strong static warning, while maintaining a consistent duration.

⑥ Sound + Vibration + Static Stimulation Mode



The sound, vibration, and static are synchronized with 6 available levels. As the level increases, the intensity of the shock also increases accordingly (The default setting is vibration +static stimulation mode).

⑦ Sensitivity Adjustment

After power on, press the power button once to adjust sensitivity.



Level 1-3 is suitable for environments with background noise, such as music or TV playing. Level 2-4 is suitable for typical home environments. Level 5 is ideal for extremely quiet situations, such as late at night (may be easily triggered).

⑧ Trigger Settings

The product is set to default Progressive Mode, adjusting levels based on the duration of dog barking intervals.


For example, if at Level 1 warning, continuous barking raises the warning level by one step. If the dog remains silent for a period and then barks again, the warning level decreases by one step.

⑨ Warning Count Record:



The product records a warning count every time it is triggered, starting at 001 and going up to a maximum of 999. To clear the warning count, press and hold the M button for 3 seconds.

6.How to test the Static Stimulation function?

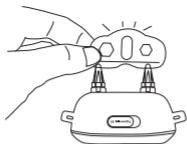

Turn on the bark collar and switch to Vibration + Static Stimulation Mode. Put the static test light on the contact points, then shout "woof, woof" to the collar while shaking it. Normally, the test lamp will flash when triggered.

7. Training instructions

1. Initial 1-7 Days of Wear:

During the first week of your dog wearing the product, please remain nearby and attentive. In general, the bark control collar might cause some disruption to your dog's barking behavior. Initially, your dog might struggle to adapt, leading to more intense barking or manifestations of nervousness, attempts to escape, and similar behaviors. At this stage, it's important to console your dog, help them relax, and gradually make them realize that when they become calm, the collar's warnings will subside.

2.Days 8-15 of Wear:



During this phase, it's important to note that your dog is likely barking less randomly. However, the training is not yet complete. Whenever you want your dog to remain calm, continue using the bark control collar. When your dog behaves well, consider rewarding them with treats. If the collar is not worn consistently during this stage, your dog may revert to barking, which could impact the training progress.

8.Level chart

Modes/Levels	level 1	level 2	level 3	level 4	level 5	level 6
Sound	Gentle-----Urgent					
Vibration	Weak-----Strong					
Sound + Vibration	Weak-----Strong					
Vibration + Static stimulation	Weak-----Strong					
Sound + Vibration + Static stimulation	Weak-----Strong					

Wearing Methods and Precautions

1. Wearing methods

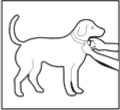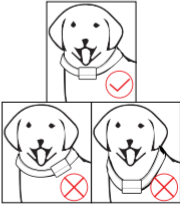①	<p>Please keep the dog in a comfortable standing position and ensure that the device is turned off before wearing.</p>	
②	<p>Please place the device in the middle of the dog's neck and ensure that the direction of the switch button is upward, and the contact point is aligned with the dog's throat. Check the tightness of the device collar.</p>	

③

You should be able to easily insert a finger between the collar and your dog's neck. If the collar is too loose or too tight, the operation of the device will be affected.



④

Mark the desired length of the collar with a pen, remove the collar and cut off the excess. Then carefully singe the cut edges with a lighter to stop the collar from unraveling.



2.Wearing precautions

- Wearing a collar for an extended period of time, or being too tight, will cause the dog's skin to become irritated. This must be avoided.
- Please make sure your dog doesn't wear the collar more than 12 hours a day.
- Please try to readjust the collar position on the pet's neck every 1 to 2 hours.
- Regularly check the tightness of the collar to prevent excessive pressure.
- Do not connect a leash to this collar because it will cause excessive pressure on the device.
- Please clean your pet's neck area and the contact area of the device with a damp cloth every week.
- Please check the contact area daily for signs of rash or pain.

- Please stop using the collar until the skin heals if you notice a rash or pain in your dog. If the condition persists for more than 48 hours, seek medical attention immediately.

Frequently Asked Questions

Question	Problem	Action
1. Bark control collar cannot be charged	Charging cable does not fit	Use the charging cable that came with the device (5v 1 amp)
	Charging cable is damaged	Replace the charging cable and try again
	The product enters the low power protection mode	The battery needs to be charged. Please attach the charging cable and fully charge the battery
	Adapter doesn't fit	Use the charging cable that came with the device (5v 1 amp)

Question	Problem	Action
<p>2.The product does not turn on</p>	<p>Check whether the touch of the key is normal</p>	<p>No response means damaged</p>
	<p>No display/ sound prompt</p>	<p>Recharge again</p>
	<p>The product enters the low power protection mode</p>	<p>Connect charging cable and wait for the battery to charge</p>
	<p>Wrong startup method</p>	<p>Long press the on/off button</p>
<p>3. It is effective at first, but does not work later</p>	<p>① Check whether the device works normally</p> <p>② Wearing for a long time dog has been fully adapted</p>	<p>① Change the levels and readjust the training mode</p> <p>② It is recommended not to wear the product when not training</p>

Question	Problem	Action
<p>4. The collar falls off easily and isn't tight enough</p>	<p>The collar is too loose</p>	<p>The device is worn in the middle of the dog's neck, with a finger width gap between the collar and the neck</p>
	<p>The excess was not trimmed off the collar during first use</p>	<p>The collar straps should be tightened correctly in each buckle so the collar fits the dog's neck then the excess should be cut off</p>
	<p>The collar strap is damaged and needs to be replaced</p>	<p>Please refer to the instruction manual for wearing the collar.</p>
<p>5. The dog bites the device, damaging it</p>	<p>The dog resists the product</p>	<p>The dog should not be able to see or reach the device it is wearing</p>

Question	Problem	Action
6. Device injures dog	It has been worn for too long a period of time	It should not be worn for more than 12 hours and should be checked every 2 hours
	If the device is worn when the dog is wet or swimming, the static stimulator irritates the skin	<p>①Keep your dog's neck area dry and clean, and do not wear products while swimming or playing with your owner</p> <p>②Use silicone caps to reduce the friction of the contact points</p>
	Dog develops a rash	Stop using the product for a few days. If the condition persists for more than 48 hours, consult your veterinarian for help
	The dog is less than 6 months old	The pet should be at least 6 months old before using the bark control collar, and the dog should be able to recognize basic obedience commands, such as "sit" or "stay."

Question	Problem	Action
7. Accessories missing, accessories damage, etc	Damaged in transport or packing mistake	Contact customer service to initiate a repair/return. May require photos or video.
8. Safety of vibration/static stimulation	A brief vibration or static stimulation won't hurt, but it can make the dog feel uncomfortable	The bark control collar requires the user to interact with and train the pet to achieve the desired effect
		Our vibration and device functions have been tested on different types of dogs over a long period of time
9. The product does not work	Cannot turn it on	Test after charging
10. Product has not been used for a long time	If the product is left on and not used for a long time, the battery will lose power	<p>① Please turn it off every time when not using it</p> <p>② If it is not used for a long time, please refer to the manual for charging instructions before charging and using it</p>

Question	Problem	Action
11. Barking does not activate the device	There was only sound without movement	Both sound AND vibration are required to trigger the device
	The dog barked once in 10 seconds	The dog must bark 2 time within 10 seconds to activate the device
	In protected mode	After being triggered 6 consecutive times, a one-minute protection mode must be completed before the device will activate again
	The Sensitivity level is set too low	Increase the trigger level
12. Device activates when dog isn't barking	The sound decibel in the area exceeds 70dB	Test in a quiet area
	The inductor breaks of	Contact customer service to initiate a repair/return. May require photos or video.

Question	Problem	Action
13. No static stimulation/No vibration	Check to see if the battery is low	Charge the device completely
	The dog's hair is too long	Adjust the device so the contact points touch the dog's skin
	The collar is too loose	The device is worn in the middle of the dog's neck, with a finger width gap between the collar and the neck

About After-Sales

1.If the device is defective within 30 days from the date of purchase, you must take a picture or video of the faulty product. After customer service approves, a replacement can be sent. The defective product must be returned to the factory within 7 days of receiving the replacement.

2.If the device becomes defective after 30 days from the date of purchase, but before the end of the 1 year warranty period, the customer will be required to ship the device back to the factory at their own expense. We will test and replace any faulty parts, then return the device to you free of charge.

3.This warranty is a supplement to other rights and remedies provided by law. For major failures and any other compensation, if it is a reasonably foreseeable loss or damage, you are entitled to a replacement or refund.

4.You also have the right to repair or replace the goods in the following cases: the quality of the goods is unqualified, and the failure does not constitute a major failure. If you have any questions or need more information, please contact our customer service.

Compliance



This symbol means that the product has been CE certified, and any product with CE mark is proved in compliance with the local regulations of EEAs.



This symbol means that the electromagnetic interference of the equipment is lower than the limit approved by the Federal Communications Commission.



Disposal of package: The package shall be disposed by type. Disposed as waste papers for cardboards and cartons
Recycling for packaging cases.



Disposal system: The disposal system shall be applicable to EU and other European countries and capable of collecting recyclable materials by category.