


01 / Meet your smart feeder

 


Nutri Vision Mini Feeder
User Manual

迷你可视宠物喂食器
使用说明书

Model / 型号: FDW050


Please read this manual carefully before using.
Keep the manual in a safe place for future reference.
使用产品前请仔细阅读本使用说明书,并妥善保管

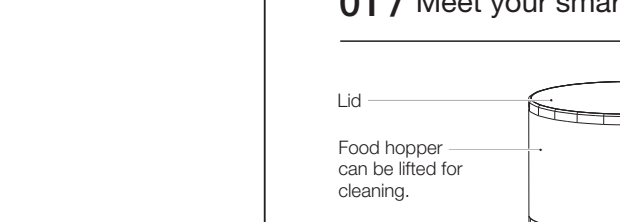

01 / Meet your smart feeder


02 / Operations

① Power on the feeder
Unbox and connect the USB Type-C Cable to the power socket at the bottom of the feeder, then connect power supply to the wall outlet.




* The power supply is not included, please buy separately!
* When the device is running on batteries, it will automatically disable Wi-Fi, switch to offline mode, and won't be controllable remotely.


② Bowl mounting
Slide the bowl into the feeder's outlet.



③ Lid removing
Open the lid according to the marked direction.

 


④ Fill the desiccant
Remove the desiccant from the packaging and place it in the desiccant cabinet.




* It is recommended to replace the desiccant once a month, and do not fall into the hopper, and NEVER use it if it is damaged.


⑤ Fill the hopper with food
Pour food into the hopper and fill it.




⑥ Lid closing
Lock the lid according to the marked direction.



⑦ Manual feeding
Short press the manual feeding button to feed instantly.
(Default quantity is one portion, customizable through App.)



⑧ Connect feeder with your phone and schedule your feeding
Click Video to watch real-time, and tap the FEED icon to release prey.

 


03 / Quick Setup

- Click the VIDEO button for the camera interface. The FEED button on the interface is for express feeding!

- Backup Battery Installation

Use a screwdriver to open the battery compartment cover at the bottom. Put four LR14 batteries inside (note the positive and negative poles), replace the cover and tighten the screws.

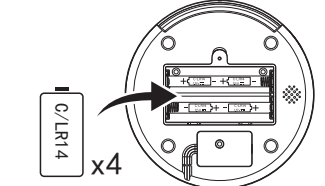

Note: You need to buy the batteries separately, and only alkaline dry batteries are supported. Before installing, make sure that there is nothing in the battery compartment. Install batteries for emergency backup in case of power failure. If the batteries are not used for a long time, please remove the battery.

- Scan the QR code on the right and download the Petreor App which is available on App Store and Google Play. Click Sign up to get walked through to create your Petreor account.
- Power on and ensure the Wi-Fi Indicator LED is flashing slowly, reflecting the device is ready for joining the Wi-Fi. Open the Petreor App and click the '+' button and get walked through the SET-UP steps.

Notice:

- The feeder doesn't support the 5GHz Wi-Fi, please make sure your Wi-Fi is 2.4G.
- If the Wi-Fi indicator is not blinking slowly after power-on, please long press and hold the manual feed button until the indicator blinks slowly.

04 / LED Status

LED Status		Specification
Red light is off	The food is more than 10%	Model: FDW050 Power Input: 5V=2A Capacity: 2.6 L (1.2 Kg) Size: 7.52x7.52x12.40 inches 191x191x315 mm Communication: Wi-Fi (2.4 Ghz) Resolution: 720P Range: 98.5 feet (30 m) Net Weight: 1.55 Kg Warranty: 1 Year
Fast blinking red	The food is less than 10%	
Red steady on	Jam	

Manufacturer: SkyRC Technology Co., Ltd.
Address: 4,5,8/F, Building No.4, Meitai Science Park, Guangguang South Road, Guihua, Guilan, Longhua New District, Shenzhen 518110, China

05 / Precautions

- Please use it in the indoor environment;
- Do not drop anything other than dry food into the food hopper. Otherwise, there is a risk of dysfunction or mistaken feeding;
- To prevent feeder from being hit by pets, it is recommended to place the feeder at the corner or against the wall;
- Please shield or organize the power cord well to prevent the pet from biting the cable and causing dangerous situations such as electric shock;
- This product is only suitable for DRY FOOD, and WET FOOD is prohibited.
- It is recommended to replace the desiccant once a month, and do not fall into the hopper, and NEVER use it if it is damaged.
- The pet food's shape and density will cause some deviations from the food hopper's capacity and the feeding unit's quantity.
- After each fill-up of the hopper, there may be deviation of two portions at the initial feeding time. It is recommended to calibrate manually! (Click the manual feeding button until food is fed!)
- Clean the food passage regularly to get the kibble out smoothly.
- DO NOT clean the main unit; instead, please wipe it with a rag. After cleaning the other parts, please dry it before reinstalling.
- Children must use under the guidance of adults.

06 / Certifications

FCC Instructions:

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

FCC Radiation Exposure Statement:



The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

EN

EN

EN

EN

<p>Environmental Conditions</p> <p>Operating Temperature: 32 °F to 104 °F, (0 °C to 40 °C) (indoor only)</p> <p>SkyRC Technology Co., Ltd. declares that this Nutri Vision Mini(FDW050), is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive (2014/53/EU).</p> <p>Environment friendly disposal</p> <p>You can help protect the environment!</p> <p>Please remember to respect your local regulations: dispose of nonfunctional electrical equipment with an appropriate waste disposal center.</p> <div>   </div> <p>Manufacturer: SkyRC Technology Co., Ltd.</p> <p>Floors 4, 5, & 8, Building 4, Meitai Technology Park, Guangang South Road, Guanlan, Longhua District, Shenzhen, China</p>			<p>07 / Warranty Terms</p> <hr/> <p>Within the period of warranty, if the product fails with no fault of user operations, it will be repaired at Petoneer's expense. The warranty will not cover product failure in examples below:</p> <ol style="list-style-type: none"> 1). Intentional damage to the product by the user or third party 2). Failure to operate or maintain the product following the (QIG) Quick Installation Guide Instructions. 3). Failure by natural wear and tear including but not limited to scratching, corrosion, oxidation and rusting. 4). Failure by non-authorized repair of the product including but not limited to user's own or third-party repairing attempts or modifications.
<p>Read all the instructions</p> <ol style="list-style-type: none"> 1.Do not touch hot surfaces. Use handles. 2.To protect against electric shock do not immerse cord, plug into water or other liquid. 3.Close supervision is necessary when any appliance is used by or near children. 4.Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance. 5.Do not operate any appliance with a damaged cord or plug, should the appliance malfunction, or if it has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. 6.The use of the accessory attachments is not recommended by the appliance manufacturer as it may cause injuries. 7.Do not use outdoors. 	<p>8.Do not let the cord hang over edge of table or counter, or touch hot surfaces.</p> <p>9.Do not place on or near a hot gas or electric burner, or in a heated oven.</p> <p>10.Always attach plug to appliance first, then plug cord in the wall outlet.</p> <p>11.Do not use the appliance for other than intended use.</p> <p>12.WARNING: Never leave the appliance unattended whilst in use.</p> <p>13.Warning: keep the supply cord away from heating tip and metal enclosure while using.</p> <p>14.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.</p> <p>15.Children should be supervised to ensure that they do not play with the appliance.</p> <p>16.If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.</p> <p>17.WARNING: This tool must be placed on its stand when not in use.</p> <p>SAVE THESE INSTRUCTIONS.</p>		<p>www.petoneer.com</p> <p>All Pictures shown in the manual are for illustration purpose only. Actual product may vary due to product enhancement.</p>
<div>EN</div> <div>EN</div>			<div>EN</div> <div>EN</div>

01 / 产品概览

02 / 使用操作

① 连接电源

取出主机, 将电源线插入主机底部, 接通电源。
* 设备不带电源适配器, 请自行配置。
* 备用电源无法联网。

③ 开盖

按标识方向打开储粮桶盖

② 安装食盒

将食盒安装至出粮口下

④ 加干燥剂

将干燥剂去除外包装后放置到干燥剂盒内

* 干燥剂建议每个月更换一次, 不可落入粮桶, 破袋切勿用。

⑤ 加粮

打开储粮桶盖, 加入宠物干粮

⑦ 手动喂粮

短按主机按钮, 即可立即出粮 (默认1份, 可在APP中修改份数)

⑥ 关闭上盖

按标识方向关闭储粮桶盖

⑧ 添加设备, 设置喂食计划

下载“Petoneer”APP, 添加设备, 设置喂食计划

⑧ 查看视频

点击“视频”进入实时视频画面观看, 并可在视频画面点击“快”快速出粮

安装备用电池

用螺丝刀打开主机底部电池盖, 将四节2号电池放入电池仓 (注意正负极), 放回电池盖并拧紧螺丝。

提示: 备用电池需自行购买, 仅支持碱性干电池, 安装电池时, 请确保储粮桶内无任何东西, 安装电池, 可供断电紧急备用, 备用电池长时间不用, 请将电池取出。

03 / 快速添加设备

1. 扫描右侧二维码, 按照提示下载安装“Petoneer”APP, 并注册登录账号。

2. 通电后, Wi-Fi指示灯慢闪, 进入配置模式 请打开“Petoneer”APP, 点击“+”按照提示进行设置。

注意: (1) 喂食器不支持5GHz路由器, 请使用2.4GHz路由器
(2) 若通电开机后Wi-Fi指示灯不在慢闪状态, 请长按按钮, 直至指示灯慢闪。

04 / 拆卸清洗

食盆

将食盆从出粮口取下

储粮桶

1. 上提储粮桶

注意：主机部位请勿清洗。请用抹布擦拭。其他部位清洗后，请晾干再装回喂食器主机上。

储粮桶盖

按标识方向打开取下储粮桶盖

2. 逆时针旋转提出储粮桶

05 / 余粮状态指示灯与参数

余粮状态指示灯		基本参数	
红色熄灭	余粮约大于10%	产品名称：迷你可视宠物喂食器	产品型号：FDW050
红色快闪	余粮约小于10%	容 量：2.6L (约1.2Kg)	工作电源：5V=2A
红色常亮	囤粮	通信方式：Wi-Fi (2.4GHz)	通信距离：30m
		产品尺寸：191x191x315mm	产品净重：1.55Kg
		执行标准：Q/TK 002-2019	保 修 期：1年

06 / 注意事项

1. 请在室内环境使用。
2. 请勿将宠物干粮以外的物品落入储粮桶，否则存在造成设备异常或造成宠物误食的风险。
3. 为防宠物升仓，建议将喂食器放置角落或靠墙处。
4. 请做好电源线遮挡或收纳，以防宠物啃咬电线，造成触电等危险状况。
5. 此产品只适用宠物干粮，请勿放入湿粮。
6. 干燥剂建议每个月更换一次，不可落入粮桶，破损勿用。
7. 狗粮颗粒形状及密度会对粮桶及出粮容量造成一定偏差。
8. 在空粮桶中加入宠粮后，首次出粮量可能会有两份左右偏差，点击手动出粮按钮直至出粮即可。
9. 请定期清理粮碗，保持出粮顺畅。
10. 主机部位请勿清洗，请用抹布擦拭，其他部位清洗后，请晾干再装回喂食器主机上。
11. 儿童必须在成人指导下使用。

• 为了提供更好的产品，我们会定期进行产品改良。产品实物可能与说明书有差异。

07 / 保修条款

在保修期限内，对于正常使用Petoneer产品过程中，由于非人为导致的损坏，所产生的维修费用和相关的人工费用，由Petoneer承担。以下情况导致的维修不在保修条款包含中。

- (1) 故意行为导致的损坏。
- (2) 未按照产品使用说明书指引使用、保养该产品。
- (3) 设备正常磨损、腐蚀、氧化、锈垢、耗损等原因导致的损失。
- (4) 因在非Petoneer授权维修代理店或用户自身进行维修、改造、清洗而造成的损坏。

服务热线：400-808-5869
服务网址：www.petoneer.com

制造商：天空创新科技（深圳）有限公司
制造地址：深圳市龙华区观澜街道花社区观光路美泰工业园4栋4,5,8层

中文 中文

中文 中文

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu