

Remote Dog Training Collar



Shenzhen Trainertec Electronic Co., Ltd
[Http://www.trainertec.com](http://www.trainertec.com)

Remote Dog Trainer Operation Guide

Thank you for choosing Trainertec, the best electronic training collar in China. We want to ensure your pet's safety by providing you with the tools and techniques to successfully train your pet.

If you have any questions, please contact us by email sales@trainertec.com or visit our website at www.trainertec.com.

Please read the operation guide carefully before start to train your pets .

This instruction is suitable for Remote dog training collar DT1200V.

Table of Contents

Components.....	3
How the system works.....	3
Main Features.....	4
Transmitter.....	6
Receive Collar.....	9
Setting Up Multi-dog System.....	10
Charging	14
Training Guide	16
Troubleshooting Guide.....	17

Components



How the System Works

The Remote Dog Trainer has been proven safe, comfortable, and effective for all pets over 10 pounds. This system assists you in controlling your pet without a leash in a long distance range . At the push of a button, the Remote Transmitter sends a signal,

activating the Receiver Collar. Using the Remote Trainer consistently and correctly, many misbehaviors that your pet exhibits can be corrected or any basic obedience commands can be taught

Important: The Remote Trainer actual distance depending on the way you hold the Remote Transmitter, the range may vary. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation , Vehicle , Building, transmission from other radio devices, and other factors will affect the range of your Remote Trainer.



Main Features


1. Range in open field is up to 1200 meters,
2. Train up to 3 dogs from the same transmitter
3. 10 levels of static shock
4. 10 levels of vibration
5. “Buzz” sound activated with a separate button

6. Two buttons “+” and “-” allow you to set your shock and vibration intensity
7. Dog Selection Button allow you to select your dog
8. Lcd digital display for 10 shock & vibration levels and dog ID
9. Memorize shock & vibrate level in transmitter for different dogs
10. Easy to operation with rubber button
11. Waterproof transmitter and receiver. Dog can swim freely.
12. Rechargeable 3.7V Li-ion battery for transmitter and receiver
13. Strong TPU Collar Strap
14. Led low power indication, red light will flash when battery level is low.
15. Full functional multi-dog training system
16. Around 8 seconds safe static shock protection
17. 2-year warranty


Transmitter




“” and “” **buttons**: press these buttons to adjust the shock intensity and Vibration intensity from 1 to 10 level

“” **button**: it is the power switch; hold this button for 4 seconds to switch on power, then LCD will display the default “A01”. You may change Dog ID by press the relative buttons. If you want to switch off the power, hold this button for 4 seconds to switch off power.

“” **button**: no-stimulation warning buzz

“” **button**: Emit vibration stimulation. Press 1 time , vibrate 1 time . Press and hold on , emit continuous vibration, and will stop automatically after 8 seconds

“” **button**: Emit shock stimulation. Press 1 time , emit 1 shock . Press and hold on , emit continuous

shock, and will stop automatically after 8 seconds

“1,2,3 ” buttons: Dog Selection Button , default is **“1”** . Your transmitter is capable of training up to three dogs with optional receive collars. You select **1** dog, LCD display dog ID **“A XX”**. If you want to train **2** dog, press **“2”** button , LCD will display **“B XX”** If you want to train **3** dog, press **“3”** button again, LCD will display **“C XX”**. **“XX”** is for showing the shock & vibration level .

The transmitter has the memory functions to keep up the suitable shock & vibration levels for different dogs. 10 levels of shock stimulation, 10 levels of vibration stimulation. One tone

NOTE: The red Led light will flash when the battery is low power. Recharge the battery at once.

Receive Collar


NOTE: CHARGE RECEIVER BEFORE FIRST USE

Contact Prong

Choose short or long prong to match the dog's coat type

LED Light

Indicate the working status, Low battery ,Charging status

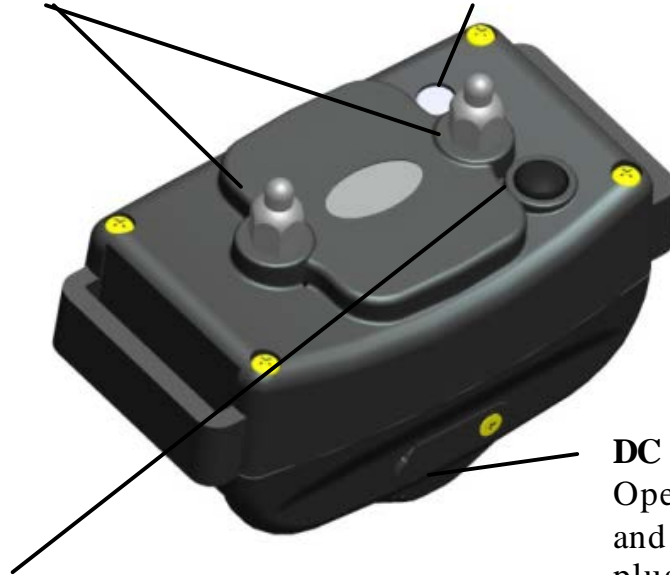

DC Jack Cover

Open the Rubber Cover and insert the adaptor plug into DC Jack to charge .

On/Off Button

Press and hold on 4 seconds to turn the collar on. Two confirming tones will sound and the collar green Led light will flash 1 time per 5 seconds.

Press and hold on 4 seconds to turn the collar off. One long tone will sound and the green Led light will stop flashing and off .

Turn the collar off when not in use to conserve battery



Spanner

Change the Contact Prong basing on the pet's coat type .

Notes: If the Contact Prong is tight , Continue to turn the spanner clockwise , The Contact Prong will be broken . Never turn the contact prong too tightly .

Setting Up Multi-dog System


You can expand your one-dog Remote Trainer into multi-dog Remote Trainer by yourself. Simply purchase extra receive collar and add them to your system.



1. Match a Receive collar To add a Receive collar to your remote dog training system, following the below steps:

Step 1 : Take out 1 Pcs unmatched receive collar .

Press and hold “ON/OFF” button .after two “beep” sound ,then release , receiver is power on ,Green Led flash frequently .(**Note : never open 2 or more unmatched receivers .**)

Step 2 : Take out the transmitter that you want to match

receiver . Press and hold on “  ” button until LCD display occur then release , Transmitter is power on .



Step 3 : Press and hold “  ” button and “  ” button at the same time ,until the digital number on the


LCD display change automatically ,then release.
Enter match receiver mode . The number
changes like “08,09,10,11.....”, increasing
automatically .

Step 4 : Take the transmitter to close the unmatched
receiver 50~100mm .

Step 5 : Press and hold on the Dog selection button .If
you match “1” dog, Press “1” button ; If you
match “2” Dog , Press “2” button ; If you
match “3” dog , Press “3” button .After listen
to 3 “beep” sound from receiver and see green
Led flash slow down , Then release .

**Special note: You must confirm that listen
to 3 sound “beep” from unmatched receiver
and see green Led flash slow down first ,
then release dog selection button . If you
match receiver failure , you need to cancel
the failure matched receiver first, then
re-match again. .**


Step 6 : Press and hold “” button and “” button at the same time again ,until the digital number on the LCD display no change ,then release .



Step 7 : Test matched Receiver---Chose dog first, then press “” button , you can hear the “beep” sound from the matched receiver .
Congratulate you , match receiver successfully .

Note: After matched receive collar , the dog selection button will return to “1” default . Before test the matched collar , Please chose dog first .

2. Cancel a matched Receiver Follow up the below steps one by one to cancel the matched Receiver:



Step 1 : Take out 1 Pcs matched receiver . Press and hold “ON/OFF” button .after two “beep” sound , receiver is power on ,Green Led flash 1 time per 5 second .

Step 2 : Press and hold “  ” button until LCD display occur then release , Transmitter is power on .

Step 3: Press and hold “  ” button and “  ” button at the same time ,until the digital number on the LCD display change automatically ,then release. Enter cancel matched receiver mode . The number changes like “08,09,10,11.....”, increasing automatically

Step 4 : Close the Receive Collar 50~100mm, Press the Dog Selection Button one time (You can press “1” or “2” or “3” freely, It is same). You can listen to 2 “beep” sound from receiver.

Step 5 : The green Led light of Receiver flash frequently . Congratulate You cancel the matched Receiver successfully .

Step 6 : Press and hold “” button and “” button at the same time again ,until the digital number on the LCD display no change ,then release .Exit the cancel matched receiver mode .

Charging

The transmitter and receiver charge rapidly – about 2 hours are needed.

The transmitter and receive collar can be charged at same time

Common adaptor for transmitter and receiver charging

To recharge, Open the Rubber Cover first . Plug the Adaptor Contact Pin into household AC power outlet and insert the Adaptor Plug into Receiver DC Jack .

The Transmitter and Receive Collar can be charged by connecting USB Cable and other 5V DC power supply ,such as Cell phone Adaptor , Notebook , Computer .

Do not charge batteries in especially hot areas , far away from a fire.

1. Receive Collar Charging

The red Led light is on when charging .

The green Led light is on and the red Led light is off when the receive collar is full charged

The Receiver red Led light will flash when the battery is low power. Recharge the battery at once.

2. Transmitter Charging

The LCD display is “CHA” when charging.

The LCD display is “FUL” when the transmitter is full charged

The transmitter red light flashes if the battery is low. Charge it promptly

Important : When stock the products for 4~5 weeks , Please give a full charge for Transmitter and receive collar.

Training Guide


1. Fitting Collar on the Dog


Place the collar strap in the middle of the dog's neck. The receiver should be on the underside of his neck although on some dog's necks the receiver will naturally seek a slightly off-center position. The Rubber Cover should face backwards(toward the dog's chest). Tighten the buckle by holding it with two fingers as you pull the strap snug. Remote training collars must be put on a dog quite snugly to ensure consistent contact and reliable stimulation.

Do not put any fingers under the strap as you tighten it.

2. Stimulation

Your Remote Trainer has 10 levels of intensity . So you can find the best level for your dog's temperament and the type of training your dog. You may also select either shock or vibrate stimulation, depending on your dog's temperament and your training purpose.

You may press “+” or “-“ button to select suitable shock level, then press and hold on the “” button for around 8 seconds continuous stimulation ; press one time , emit one static shock

You may press “+” or “-“ button to select suitable vibration level, then press and hold on the “” button for around 8 seconds continuous vibrate ; press one time , emit one vibrate .

Troubleshooting Guide

Problem#1: No stimulation when a transmitter button is pressed.

The receiver has not been activated. The receiver must be turned on otherwise it won't work at all.

The receiver has not been set to your transmitter.

Follow the instruction to match.

Problem#2: The Beeper of Receiver doesn't make any sound when the Receiver is turned on.

Press dog selection button to choose correct Dog ID

before press transmitter buzz control button.

The Beeper component is loose , send to service center to repair .

Problem#3: The stimulation seems too high, not high enough or no feeling at all

The collar strap is not tight enough. Make sure the contacts points connect the dog's skin well.

The intensity level is not correct. Change the shock level.

The batteries are dead. Recharge as needed.

Problem#4: The receiver light changes color to indicate low battery very quickly

The unit has been left turned on between training session.

Make sure the receiver is turned off after use.

You are training in very cold weather.

Problem#5: The Remote Trainer doesn't have range or the range is significantly reduced.

Either you or the dog is shielded by a metal structure.

Operate it far away from these structure.

The receiver is on backwards. For best range, position

the receiver so that the light face toward the dog's nose.
Radio Interference. Wait a short while then try again, or
move to another area.

**Problem#6: The receiver seems can't receive any
signal or can not work at all**

Check the receiver on/off button, make sure the
receiver is turned on.

Check the transmitter , If it is low battery, charge
transmitter first .

Cancel the receiver match , then re-match it with
transmitter . If receiver can not work
too, send back to service center to repair or replace .

Warning:

Changes or modifications not expressly approved by
the party responsible for compliance could void the
user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Shenzhen Trainertec Electronic Co., Ltd

[Http://www.trainertec.com](http://www.trainertec.com)

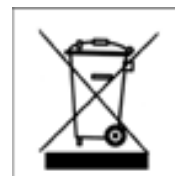

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu