

USER MANUAL

REEDOG MX 3200 Extreme





Collar pairing

1. Fully charge the transmitter and receiver using the attached cable (2-3 hours) - if the battery is weak, the indicator light will start flashing red.
2. Turn on both the receiver and the radio by long pressing the appropriate button. You can recognize an unpaired receiver by a rapidly flashing green light.
3. Now simultaneously press **the sound button (bell)** and **the pro button** on the radio
selecting a dog (1, 2 or 3) – numbers (A01,02,03,04,05,06....) will start to be added on the display
4. With the buttons still pressed, touch the receiver with the radio until you hear an audible warning.
The light on the receiver will blink slowly - this means it is successfully paired.
5. Try all the functions of the collar - sound, pulse and vibration.

Pairing the second (third) receiver

If you want to add another receiver to the radio, follow the same procedure as when pairing the first receiver. The only thing you change is **the dog's number on the radio**.

De-steaming the collar

If for some reason you need to unpair the receiver from the radio, proceed as follows:

1. Turn on the receiver and the radio using the appropriate button
2. On the radio, press and hold **the volume (bell) button** and **the pro button** at the same time
impulse (flash) – the numbers on the radio will change again.

3. With the button still pressed, touch the radio to the receiver - until you hear sound warning. Successful unpairing can be recognized by the rapidly flashing indicator light on the receiver.

Training guide

1. Putting on the collar

Place the collar around the dog's neck. The receiver should be located on the underside of the dog's neck, in some breeds it will naturally slide to the sides. The rubber cap should face backwards. Tighten the buckle and put on the collar so that it sits comfortably on the neck, but at the same time it is able to fulfill its function.

2. Stimulation

The device has 10 intensity levels. This allows you to find the right intensity to suit your dog's temperament. You can also choose between impulse or vibration according to your dog's needs and temperament.

Press the "+" or "-" buttons to select the intensity, then press and hold the " " button for 8 seconds of continuous stimulation; press once, for a short el. discharge



Press the "+" or "-" buttons to select the intensity, then press and hold the " " button for 8 seconds of continuous stimulation; press once for a short vibration.



Problem solving

Problem #1: No stimulation when pressing the button.

The receiver has not been activated. The receiver must be turned on or it will not work.

The receiver was not synchronized with the transmitter. Follow the pairing instructions.

Problem #2: The receiver makes no sound even when it is turned on.

Press the dog select button and select the correct number to which the receiver has been paired before pressing the sound button.

Problem #3: Stimulation is too high, not enough, or not at all.

The collar is not properly fitted. Make sure the electrodes are touching the dog's skin properly.

The intensity is not set correctly. Change the level. The batteries are dead. Recharge.

Problem #4: Receiver indicates discharge very quickly.

The device was left on during the break between training sessions. Make sure to turn off your device after exercising. You are exercising in very cold weather.

Problem #5: The receiver is not receiving or cannot receive any signal.

Check if the receiver is properly switched on. Check the transmitter, if the battery is low, recharge the transmitter first. Unpair the device and pair it again.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu