

# Dog Training Collar



**Please Read The Manual Before Use**

# Features

1. Rechargeable: rechargeable Remote and rechargeable Receiver
2. Waterproof Receiver: your pet can swim or walk in the rain with it
3. Adjustable Levels: You could adjust the level of Vibration mode and Shock mode from 1-99.
4. Four training mode: Shock/ Vibration / Light / Sound
5. Three Channels : Choose channel for max 3 Receivers with one Remote
6. Auto Power Save :The Remote and Receiver will go into standby mode if no operations within 5 minutes

# Tips

1. Please charge before first using
2. Eliminate one misbehavior or teach one obedience command at one time, if the training get too fast , your pet may become confused and rebel
3. Before using the Shock mode to your pet , you should try Vibration to your pet first .
4. Observing the dog's reaction , make sure the training intensity not too much.
5. Check your dog's skin , don't hurt it by shock.

# Key Definition

- ① **Antenna**: transmit the signal strongly
- ② **LED light** : Press ⑩ to light it , press ⑩ again to be off.
- ③ **LCD screen** : Show the modes , levels and channels
- ④ **Shock button** : Press to choose Shock mode, the screen show , press + or - button to adjust the levels from 0 -- 99 , press Shock button again to make the Receiver shock.
- ⑤ **Vibration button** : Press to choose Vibration mode, the screen show , press + or - button to adjust the levels from 0 -- 99 , press Shock button again to make the Receiver vibrate.
- ⑥ **Sound button** : Press to choose Sound mode , the screen show , don't need to adjust the levels , just press to make the receiver sound


Bee~~

⑦ **- button**: press - to reduce the levels.

⑧ **+ button**: press + to increase the levels.

⑨ **Channel button** : choose your training channel between Ch1/CH2 /Ch3 by press this button.

⑩ **Light button** : Press to light the LED of the Remote, press again , the LED will be off ; If you press this button 2 seconds, the white LED on the Receiver will be on, press 2 seconds again , the White LED will be off, if you don't press it

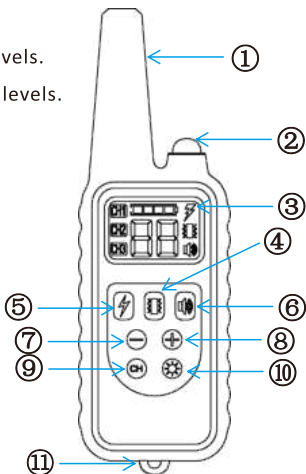

again , the White LED will be off auto matically after 10 seconds.

⑪**Charging** :hole of the Remote.

⑫**Power button**: press to turn on the Receiver , press again to turn off it

⑬**Charging**: hole of the Receiver.

⑭**Contact points**: to install the rubber cap, reach to pet's skin . Conduct the safe static.

⑮**Indicator light** : the light will flash when press the shock/vibration /sound button; when charging, it's on.



## Please charge the Remote and the Receiver before first use

1. Charge the Remote :

1. Plug the cable to the charging hole
2. Connect the USB charge adapter and plug it into outlet
3. When you charging , the battery icon in the screen will be flashing;

after charge fully , the battery icon stop flashing

2. Charge the Receiver :

- 1.Open the rubber cover of the receiver's charging hole



2. Plug the cable to the charging hole
3. Connect the USB charge adapter and plug it into outlet

4. The indicator green LED light will be flashing ;

after charge fully , the green LED light will stop flashing and always on.

## NOTE:

1. Please charge the Remote and Receiver more than 5 hours at first charging.
2. When charge the Receiver , it's in sleep mode, and can't receive the signal from the Remote.
3. There will be showing empty battery icon on the screen of the Remote if it's low battery.
4. If the Receiver is low battery , the indicator light will be on every 1 second.
5. Please charge them fully before you keep them idle for a long time , it's necessary to charge them every one month.

## Auto Power Saving Function :

1. If no operation on the Remote within 10 seconds , the back lit of screen will be off, and no operation within 30 seconds , the Remote will be sleep mode , the screen display will be shut off , press any button



**Press to turn off**

can activate the Remote.

2. If no signal to the Receiver within 5 minutes , it will go into standby mode;

you could press shock or vibration or sound button to activate it.

3. You could turn the Receiver OFF by pressing the power button of the Receiver

## Pair the Remote and Receiver

1. Press the shock button or vibration button to turn on the Remote

2. Choose a channel CH1 or CH2 or CH3 by press the CH button

3. Adjust the level by press + or - button , make sure the level above 01

4. Press the Power button of the Receiver by 3 seconds , you hear a sound like Bee~, and the indicator light is flashing; Now quickly, Press the vibration button or Shock button within 10 seconds after the sound Bee~, you can hear a sound Bee~ again , that means the pairing successful.

5. If you have 2 or 3 Receivers , just choose the different channel ,and pair as above same steps.

### Note:

please remember the channel you choose to pair , if you use another channel without pair , you can't control the Receiver.



# Test the training collar set (After paired successfully)

## 1. Test the Shock function

Take out the test bulb and put it on the

Receiver's contact point


Press the Shock button 

(make sure the level above 01)

The test bulb will be on



## 2. Test the Vibration function

Press the Vibration button  (make sure the level above 01)

The Receiver will vibrate

## 3. Test the Sound function

Press the Sound button  (don't need to adjust the level )

The Receiver will sound bi~bi~

# How to wear the Receiver to your pet

1. Put the Receiver on dog's neck



2. The contact point reach to the skin of dog ,  
you need to choose the suitable rubber cap.

3. Adjust the belt collar , make your  
dog comfortable.





## F.A.Q

---

Q: The length of the pu belt collar ?

A: The length of the collar is 27.5 IN (70 CM)

---

Q: How weight dogs does this training collar suits for ?

A: We suggest above 20 lb .

---

Q: Is the Receiver waterproof?

A: Yes , it's totally waterproof, your dog can swim with it.

---

Q: How long does my dog get training every time?

A: 10 - 15 min .

---

Q:What should i do if the training collar set don't work?

- A: 1. Check the battery power of the Remote and Receiver , if low battery, charge them.
2. Check the level , if you choose vibration mode or shock mode , adjust to above 001.
3. Check the Receiver , if you don't turn it on , press the Power button of the Receiver.
4. Check the channel , if you choose the different channel , press up/down button to adjust
5. Repair the Remote and the Receiver.
6. Check the metal screw cap if they are too short , change to install the longer cap.

Frequence : 915MHZ

Transmitter: 3.7V 300ma LIP

Receiver : 3.7 V 240ma LIP



Made in china

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: [www.electric-collars.com](http://www.electric-collars.com)  
Changes to technical parameters, properties and printing errors reserved.

### **Service center and distribution**

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: [info@electric-collars.eu](mailto:info@electric-collars.eu)