 


# User Manual

## Pet Water Fountain

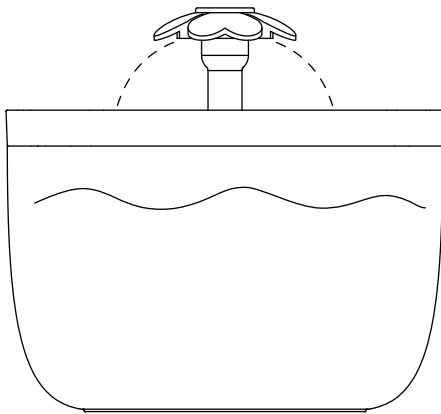

Please read the manual carefully before using this product.

## Caution

Read all instructions carefully before attempting to operate this device.

- Intended for use with dogs or cats ONLY.
- For indoor use ONLY!
- To avoid the possibility of the plug or outlet getting wet. Put power adapter in higher position of pet fountain unit.
- Runs on DC 5 V power adapter, other brand power adapter is prohibited.
- Do not allow the water level to fall below the pump, or the pump may run dry and burn out.
- Make sure the cord does not have any frayed or exposed wires due to pet's possibly chewing the cord.
- Place the pet fountain on a protective surface to guard floor against possible water damage from spillage.
- Dispose of all packaging material properly. Some items may be packed in poly bags; these bags could cause

## Q&A Troubleshooting

### ● How frequently do I need to change the filter?

The charcoal filter and foam filter should be changed every 2 to 4 weeks, depending on the number of pets using the fountain. Having more pets that use the fountain will increase the saliva content and debris in the water, so the filter will need to be changed more frequently.

### ● Why am I finding small black particles in my pet's fountain?

It is common for some residual charcoal dust to seep from the filter. This is perfectly normal and not harmful to your pet in any manner. To help prevent the charcoal dust from shedding, rinse the filter thoroughly under running water before placing inside the fountain.

 
### ● How often should I clean the fountain?

Fountain should be clean at least every two weeks. Please clean it once a week if you are living in hard water.

### ● Why so many bubbles in the water?



When water level falls below the pump, the pump sucks in air, creating bubbles.

## Components

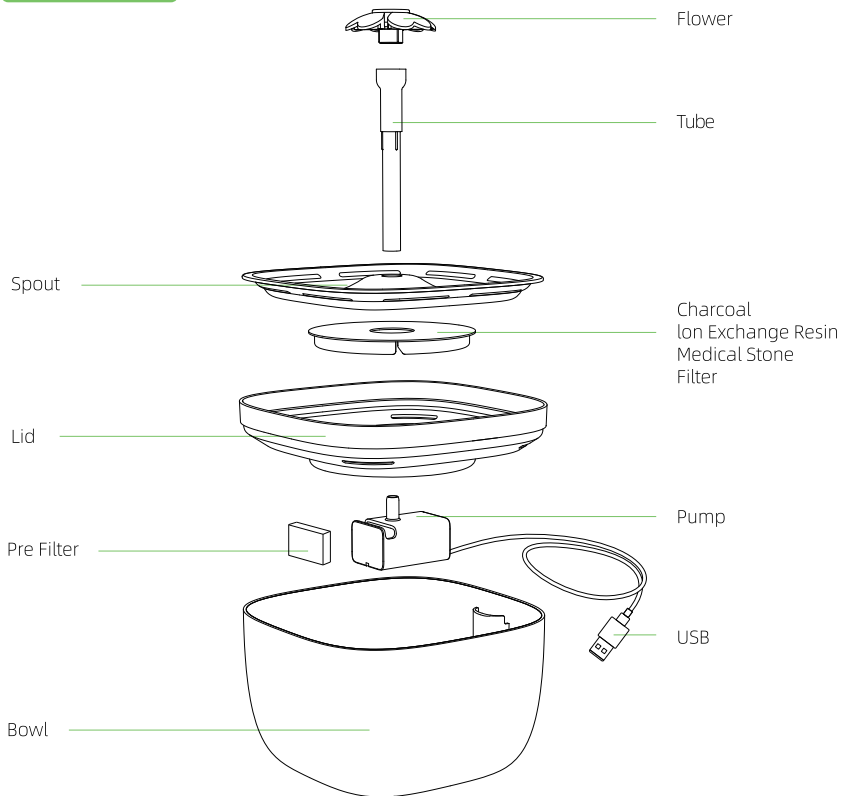


## Assemble Pump

  ① Take the bowl and place the pump inside the square indentation.

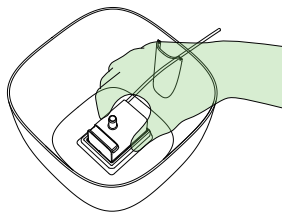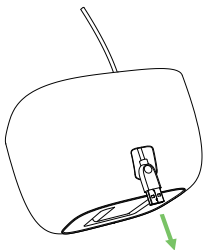

 
② Feed the in-line plug of the electrical power cord over and through the raised post.

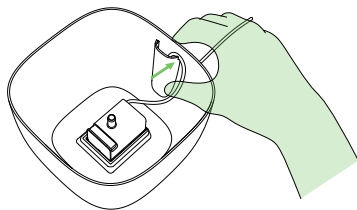


③ Place the power cord into the notch.

## Assemble Filter

 
Rinse the filter thoroughly in cold water to help remove any excess and loose charcoal dust.

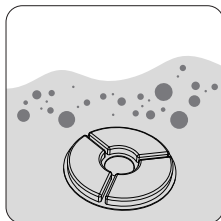

## Assemble Water Faucet and Power ON

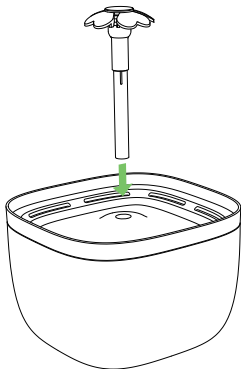 

Insert the water faucet.

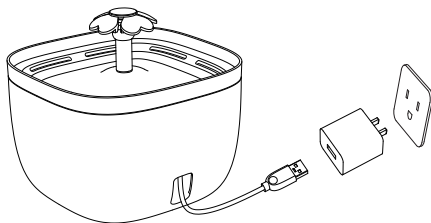 


Connect the power adaptor.

## Fountain Maintenance

 - Power off before fountain clean.
- Clean fountain by water or a foam with neutral detergent.
- Foam filter can only clean by water. Detergent is not allowed.
- Hot water, gasoline, alcohol or organic solvent is not allowed to clean the fountain.
- Dishwasher safe, but excluding pump.

## Pump Maintenance

- ① Remove the Pre-filter.
- ② Remove the pumpcover.
- ③ Remove the Impeller cap.
- ④ Remove the Impeller and clean the parts with soap and warm water.

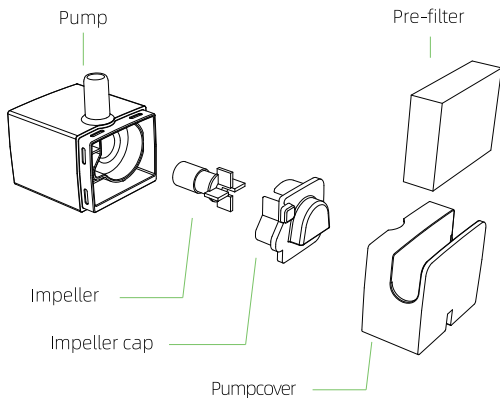

## Parameters

|                |                        |
|----------------|------------------------|
| Product Name   | Pet Water Fountain     |
| Product Model  | W7                     |
| Dimension      | 183mm*183mm*170mm      |
| Material       | Food-grade PP          |
| NW             | Around 0.65KG          |
| Capacity       | 2.0L                   |
| Pets Appliance | Cats & Small size dogs |
| Power          | USB 5V1A               |
| Rated Power    | 1.5W                   |

**The device has been approved for use in EU countries and is therefore provided with the CE mark.**

**All necessary documentation is available on the website:  
[www.electric-collars.com](http://www.electric-collars.com).**

**Changes to technical parameters, properties and printing errors reserved.**

**Service center and distribution**

Reedog, sro  
Sedmidomky 459/8  
101 00 Prague 10  
Phone: +1 646 980 4569  
Email: [info@electric-collars.eu](mailto:info@electric-collars.eu)