

# Petwant PWS 110

## **Top up the water frequently**

Keep the water level high.


When the fountain runs dry, the pump burns out.

## **Clean the pump and the fountain**

Clean your fountain every 2 or 4 weeks with soap. After cleaning, make sure that there is no soap stuck to the fountain.

## **Replace the filter**


You should change the activated carbon filter every 4 weeks. Foam filter every 2 months.

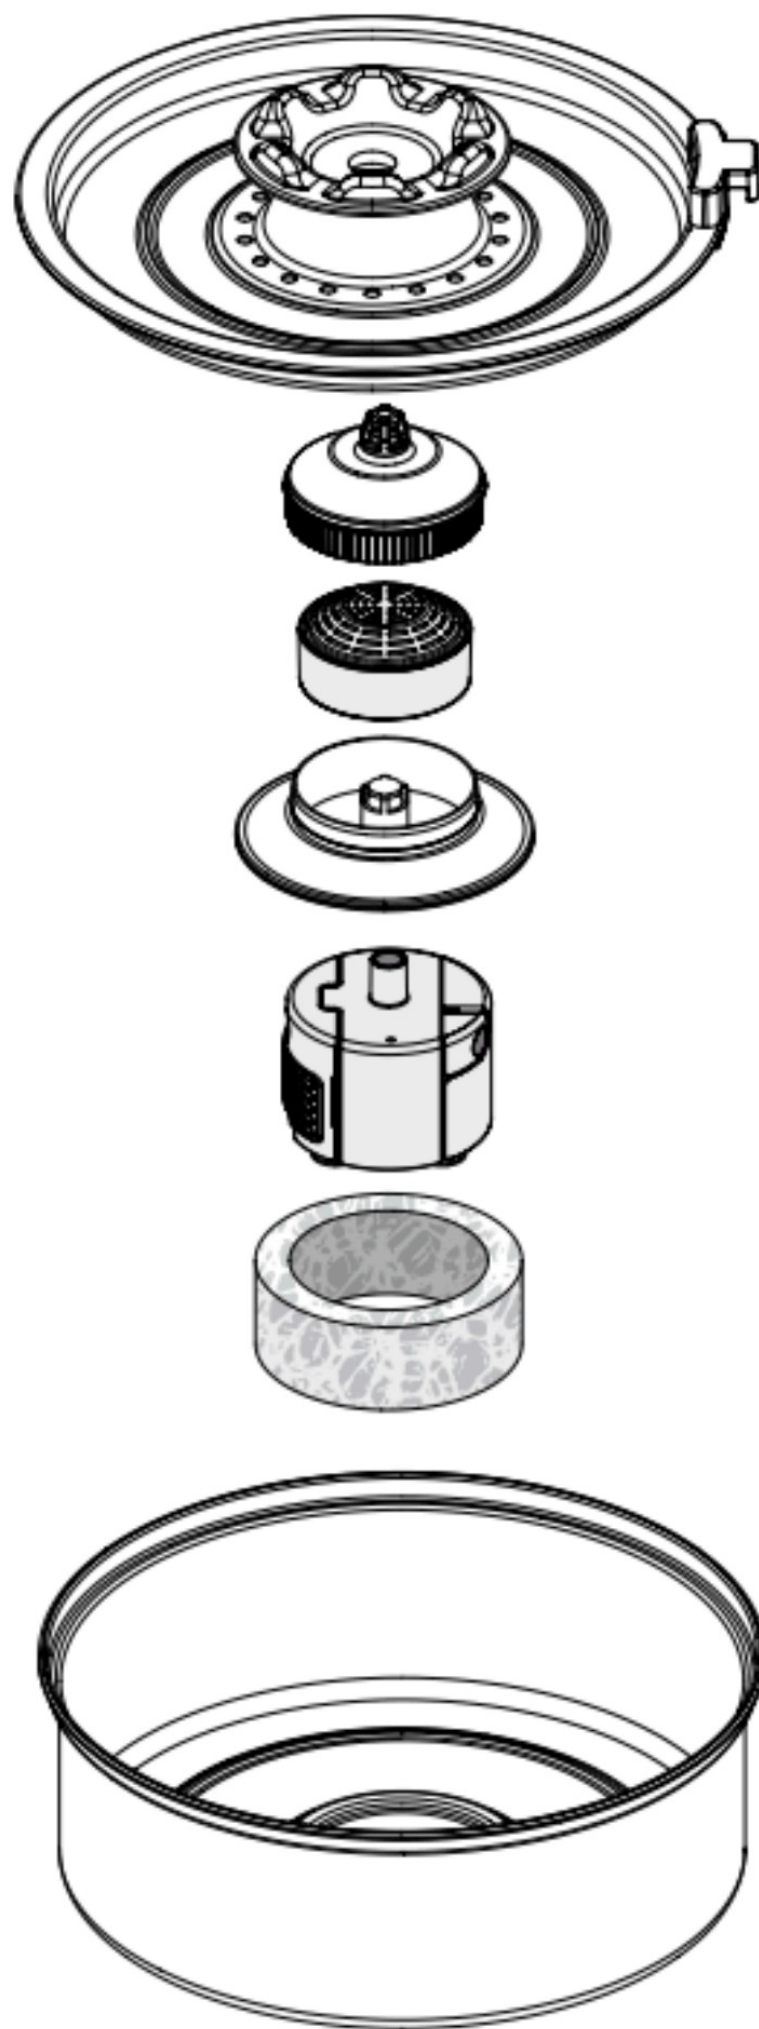



# Setting the fountain

## 1 Install the filters and pump

Wash the filter thoroughly with water before

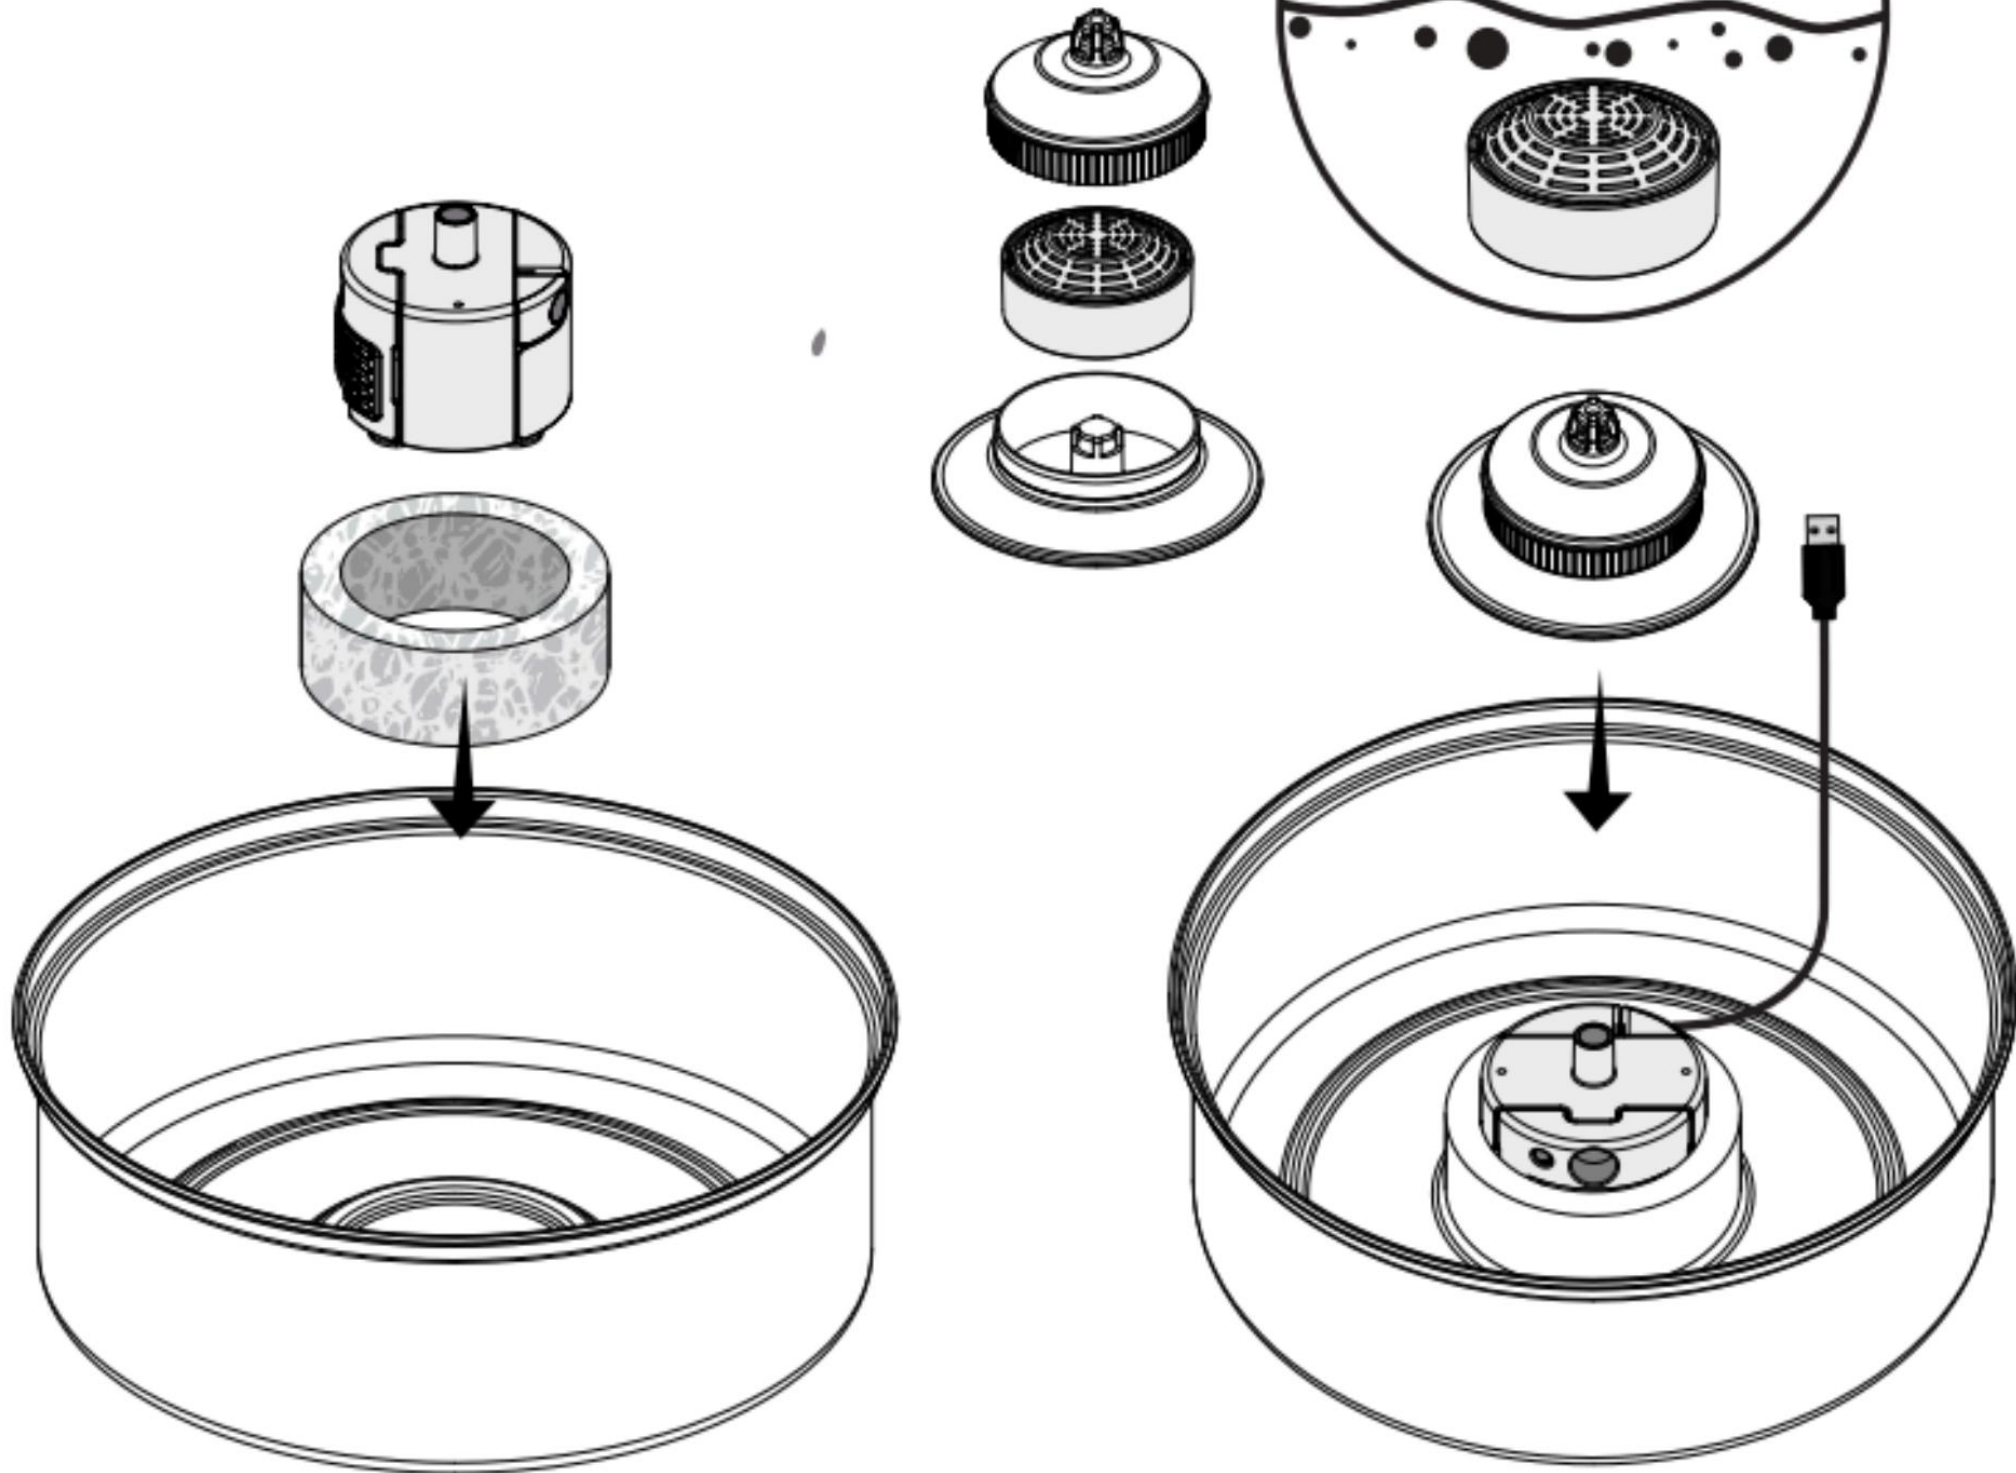


## ② Install the fountain cover

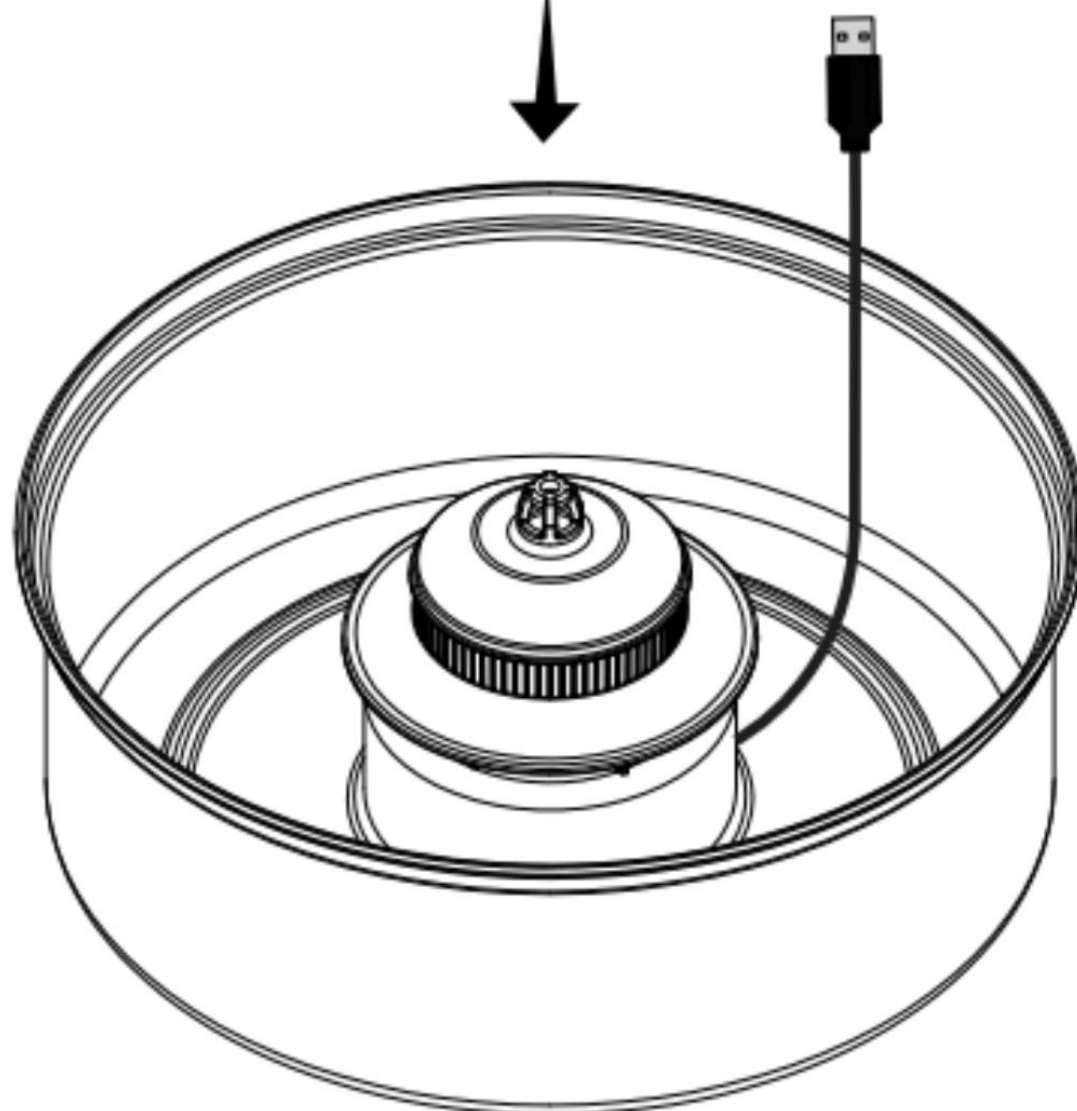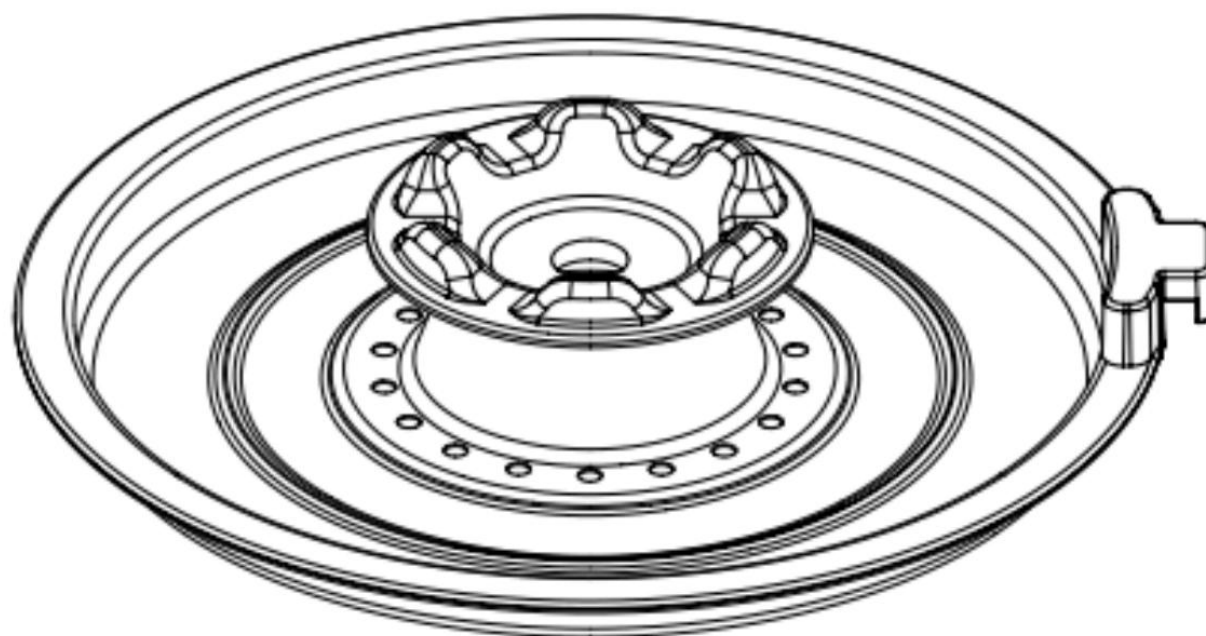




**3 Add water and then plug in**

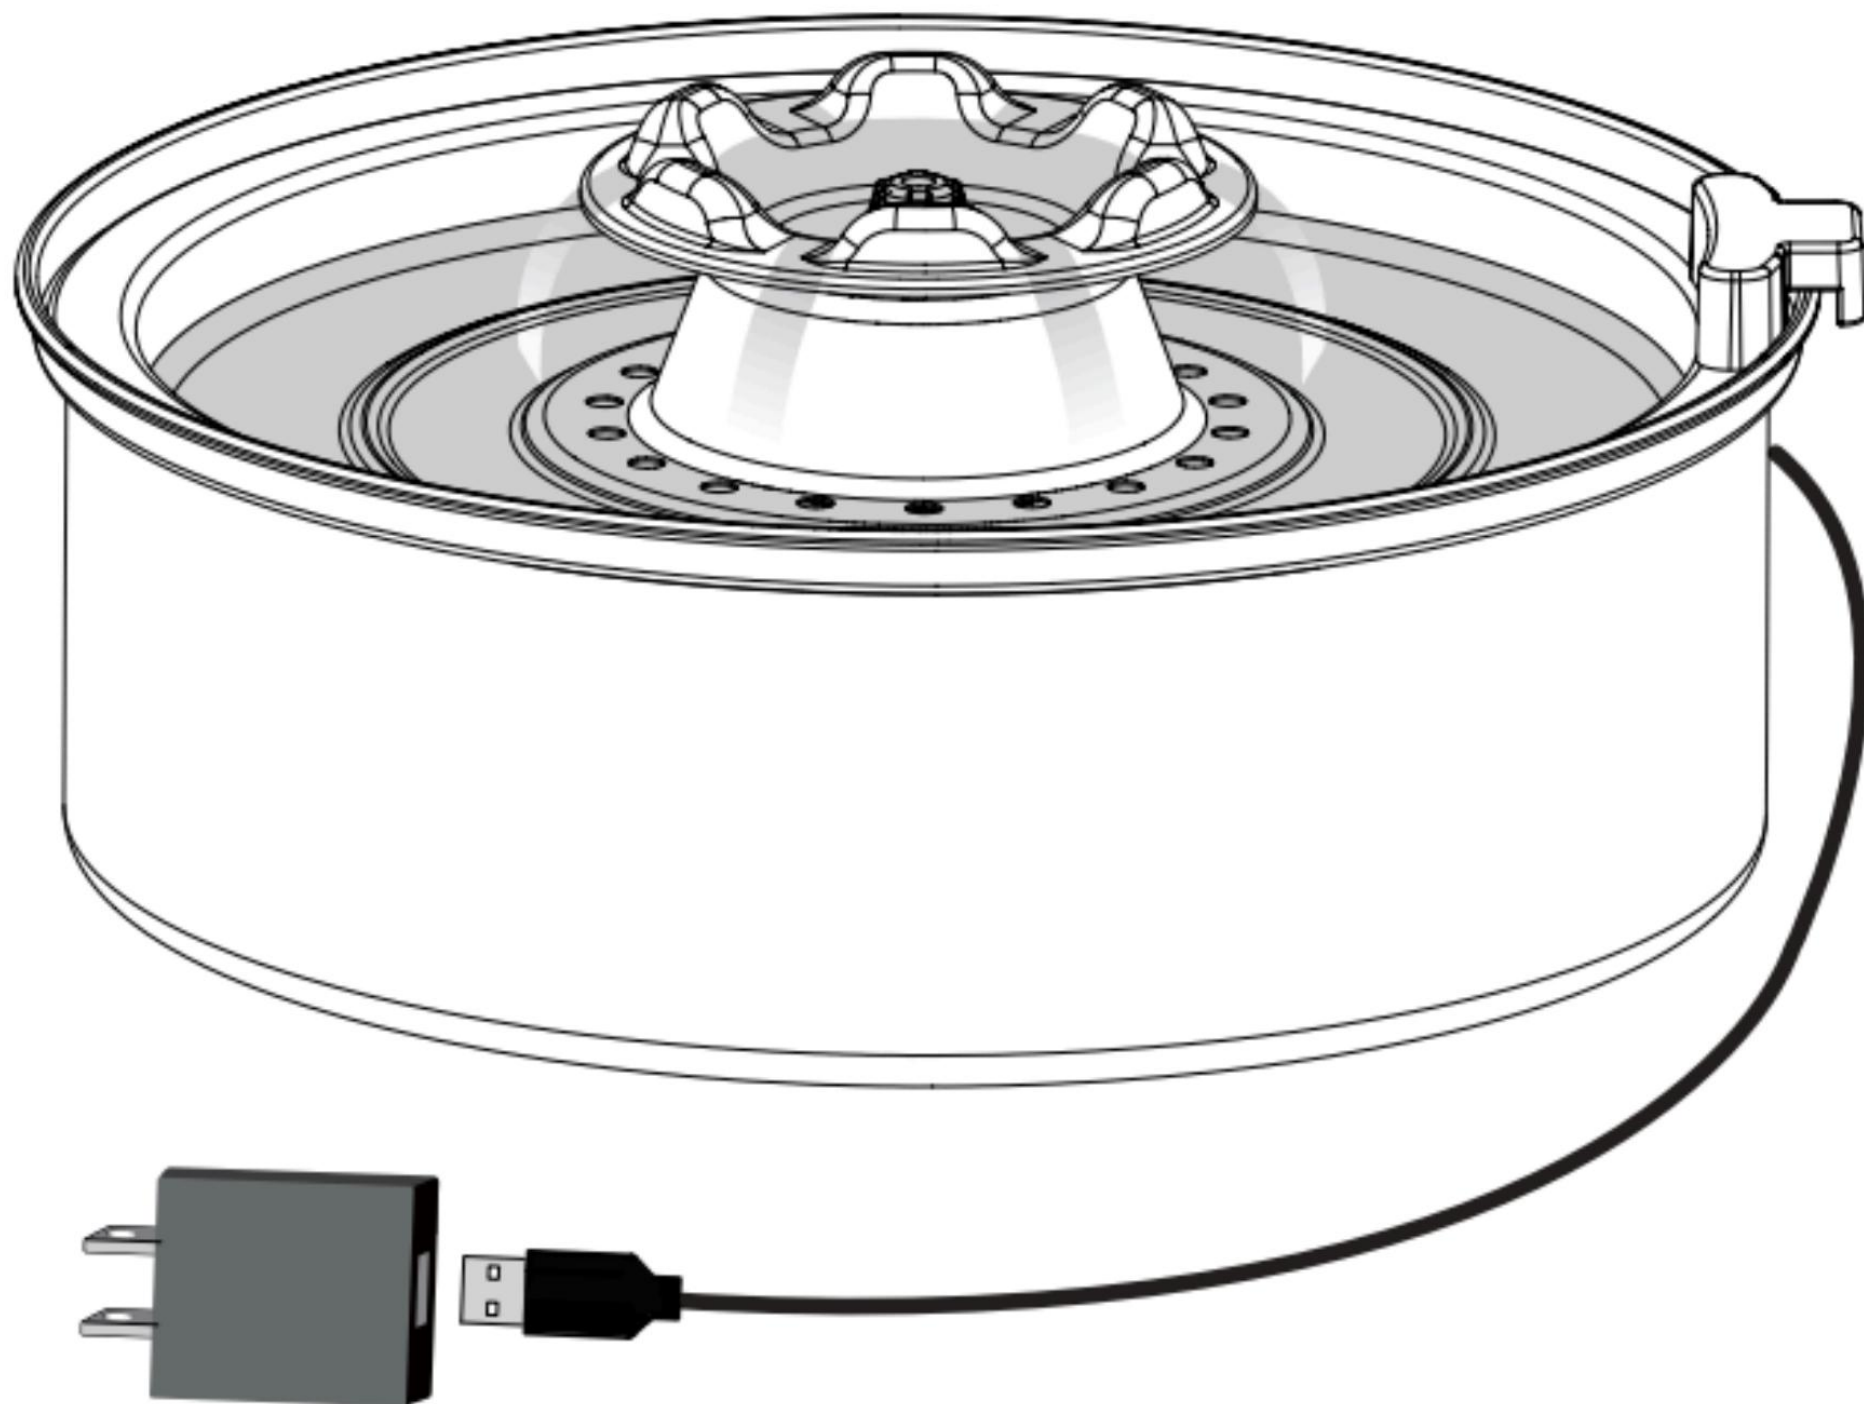

Clean the pump and fountain  
every two weeks.  
Remove the pump cover and rotor.  
Use a brush to clean the parts with water.

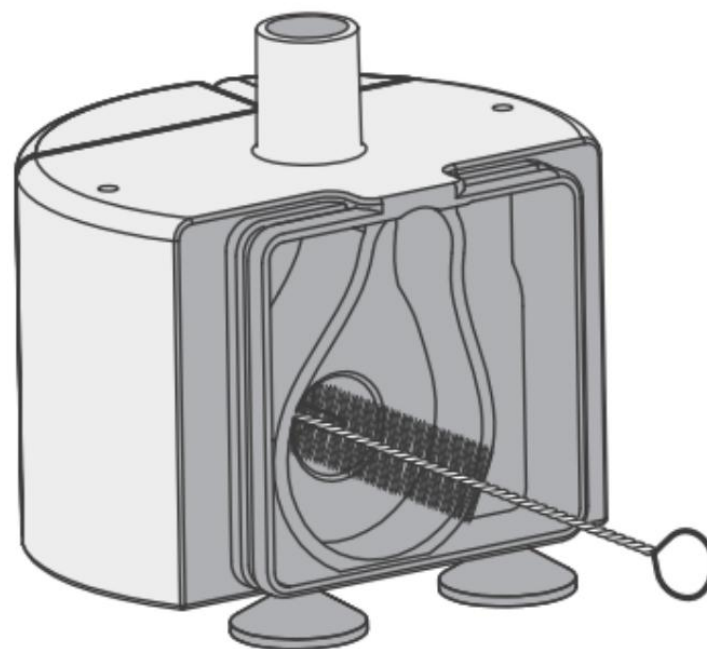

**Notice 1.**

Please remember to turn off and disconnect the power for safety reasons  
when the device is not in use. used.

2. This product is for indoor use only.
3. The power adapter and wire plug must not be flooded during cleaning.
4. This product must not be operated without water (can be ignored for models with automatic shut-off function without water).
5. Disconnect the power supply before maintenance and cleaning the machine.

**The device has been approved for use in EU countries and is therefore provided with the CE mark. All necessary documentation is available on the website: [www.elektro-objky.cz](http://www.elektro-objky.cz) Changes to technical parameters, properties and printing errors reserved.**

**Service center and distribution**

**Reedog, sro**

**Sedmidomky 459/8 101**

**00 Prague 10**

**Phone: +420 216 216 106**

**Email: [info@elektro-objky.cz](mailto:info@elektro-objky.cz)**