



User Manual

Pet Water Fountain

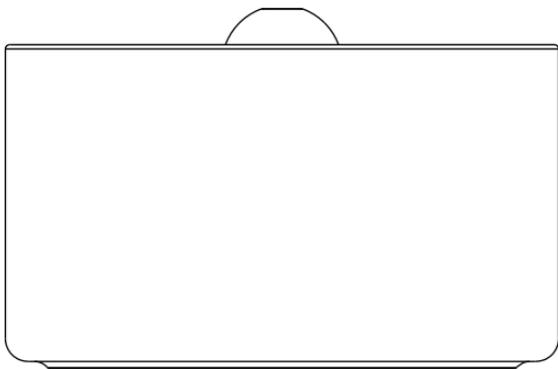



Please read the manual carefully before using this product.

Components

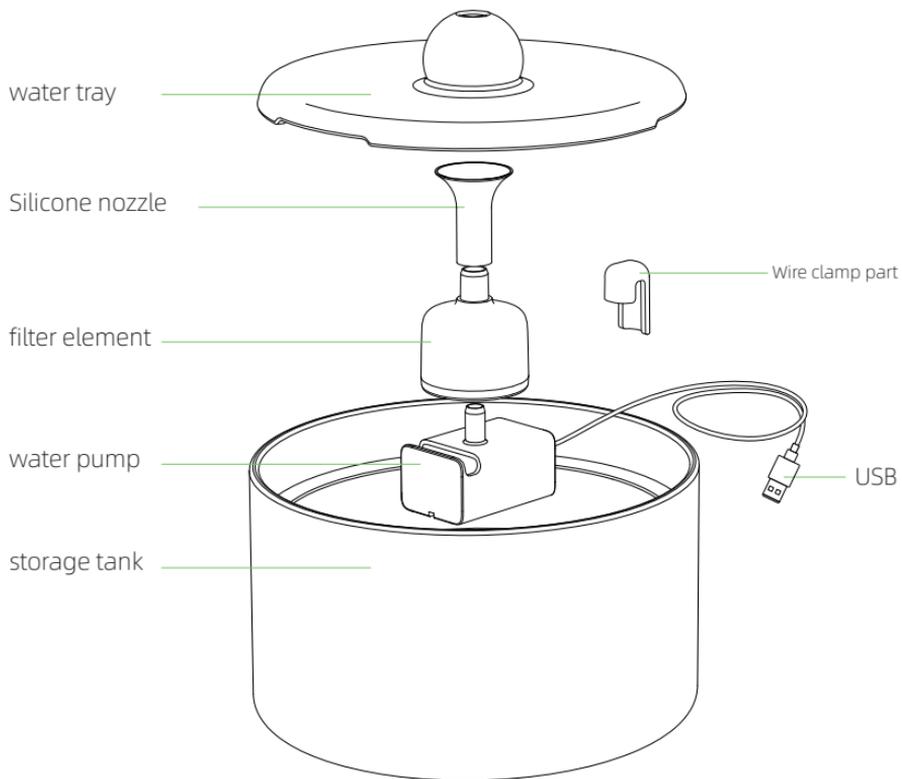



Assemble Pump

① Place the water pump in the water bowl, Aligning the water pump with the icon position on the button, press down the pump to make it tight.

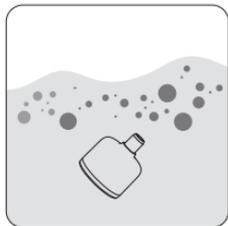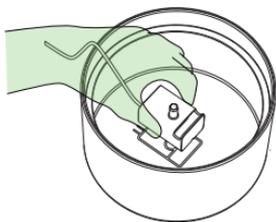


② The filter needs to be rinsed and soaked in water for 5 minutes then installed.

③ Place the soaked filter and silicone tube in sequence and connect to the water pump outlet.

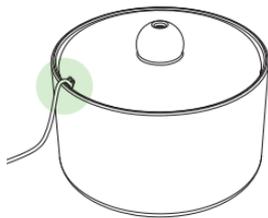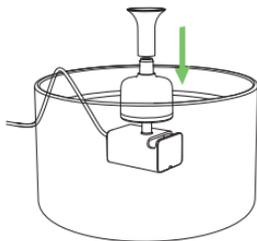

④ Filled with water, clamp the pump cable into the drinking water tank slot.

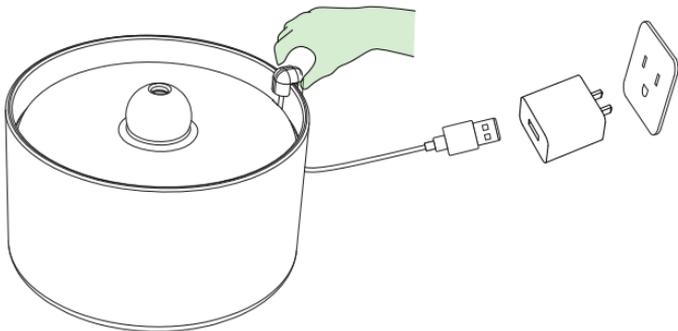


⑤ Connect the power supply

Fountain Maintenance

- Power off before fountain clean.
- Clean fountain by water or a foam with neutral detergent.
- Foam filter can only clean by water. Detergent is not allowed.
- Hot water, gasoline, alcohol or organic solvent is not allowed to clean the fountain.
- Dishwasher safe, but excluding pump.

Pump Maintenance

- ① Remove the Pre-filter.
- ② Remove the pumpcover.
- ③ Remove the Impeller cap.
- ④ Remove the Impeller and clean the parts with soap and iwarm water.

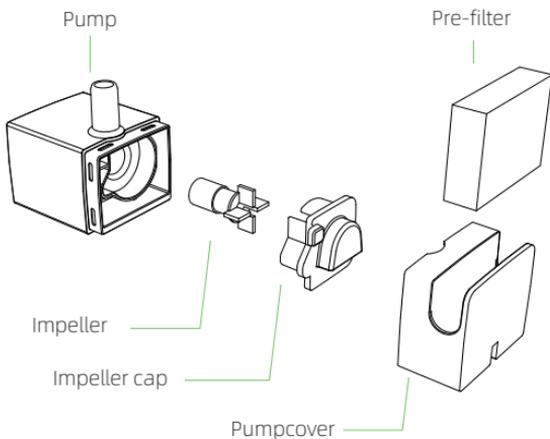

Parameters

Product Name	Pet Water Fountain
Product Model	W5
Dimension	193mm*193mm*126mm
Material	ABS、Ceramic
NW	Around 1.8kg
Capacity	2.0L
Pets Appliance	Cats & Small size dogs
Power Supply	USB 5V1A cable
Rated Power	1.5W

Caution

Read all instructions carefully before attempting to operate this device.

- The ceramic material is fragile and should be handled with care during cleaning or installation.
- When the device is not in use, the power should be cut off.
- Filled water should not exceed the water level in the bowl.
- It is recommended to replace the filter every 2-4 weeks
- Do not allow the water level to fall below the pump, or the pump may run dry and burn out.
- Excessive impurities in the water pump will reduce the penetration rate of water.

It is recommended to clean the water pump every two weeks.

- Please cut off the power supply before maintenance or cleaning the device
- The device is not allowed to be used without water.

Q&A Troubleshooting

- How frequently do I need to change the filter?

The charcoal filter and foam filter should be changed every 2 to 4 weeks, depending on the number of pets using the fountain. Having more pets that use the fountain will increase the saliva content and debris in the water, so the filter will need to be changed more frequently.

- Why am I finding small black particles in my pet's fountain?

It is common for some residual charcoal dust to seep from the filter. This is perfectly normal and not harmful to your pet in any manner. To help prevent the charcoal dust from shedding, rinse the filter thoroughly under running water before placing inside the fountain.

- How often should I clean the fountain?

Fountain should be clean at least every two weeks. Please clean it once a week if you are living in hard water.

- Why so many bubbles in the water?

When water level falls below the pump, the pump sucks in air, creating bubbles.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu