

PETWANT 102

USER MANUAL



- Capacitive touch buttons
- Blue backlight LCD display
- Easy setting
- Capacity: 4.3L
- Low power indicator
- Food shortage warnings system
- Battery and adapter dual power supply
- 10s voice recording
- feeding of 4 meals a day, each meal up to 10 portions (about 100 g)
- Saving feeding parameters automatically
- Suitable for 5mm to 15mm diameter dry pet food

Please read the manual carefully and keep the instruction for future reference.

SPECIFIC INSTRUCTIONS

1. Before using the appliance, make sure that the control panel is clean. In case of
If the screen does not work, check that the batteries and adapter are installed correctly and that the device turned on.
2. Use only high-quality alkaline batteries. Replace them when the battery level is low.
3. If the feeder is overfilled with feed, the passage and the device will become clogged.
and stops dispensing feed. Please remove feed from the passage.
4. If the display shows "EEEE", remove the feedhopper and check if the central rotating wheel is clogged with feed. If so, clean the hopper and return it to its original position.

PARAMETERS

Size: 24.5 x 30 x 38 cm

Capacity: 4.3L

Material: ABS

Weight: 2.1 kg

Power supply: D alkaline batteries (3 pcs) or adapter

Food: dry cat or dog food; do not use wet food or treats

Product Display



Operation Interface

 


Product Operation

MANAGING THE SETTINGS


SETTING THE TIME

1. Press the SET button. The hour digits will flash.
2. Press the ↑ or ↓ buttons to find the current time, and press SET again to save.
3. Once the time is saved, the minute digits will start flashing.
4. Press the ↑ or ↓ buttons to find the current minute, and press SET again to save.

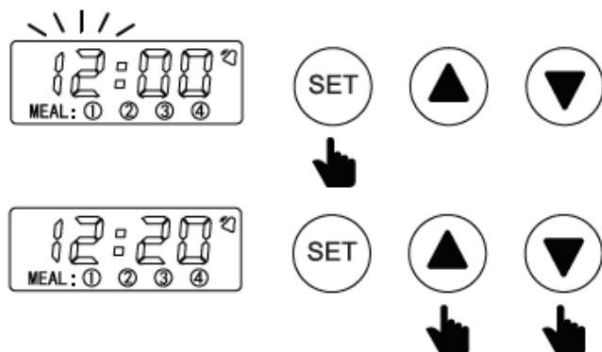


SETTING THE FIRST MEAL TIME

 1. Once the time is set, the unit will enter Meal Time Setting Mode. The LCD will display the 1 icon, and the hour digits will flash.
2. Press the ↑ or ↓ buttons to find the hour, and press SET again to save.
3. Once the time is saved, the minute digits will start flashing.
4. Press the ↑ or ↓ buttons to find the minute, and press SET again to save.
5. Repeat the steps above to set additional Meal Times (up to 4) or enter the Meal Portion Setting Mode.

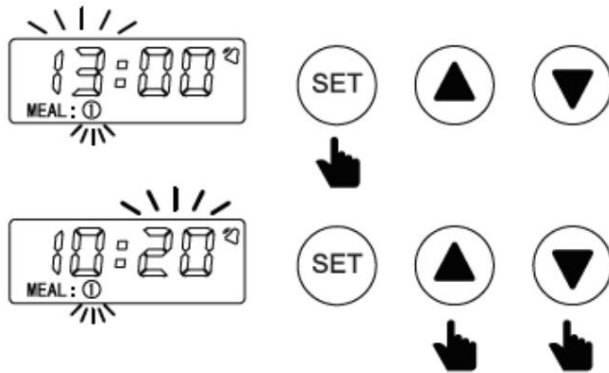

SETTING THE FIRST MEAL PORTION

 1. Once the time is set, the unit will enter Meal Time Setting Mode. The LCD will display the P, and the portion digits will flash.
2. Press the ↑ or ↓ buttons to set the portion size, and press SET again to save.
3. Repeat the steps above to set additional portions (up to 4).

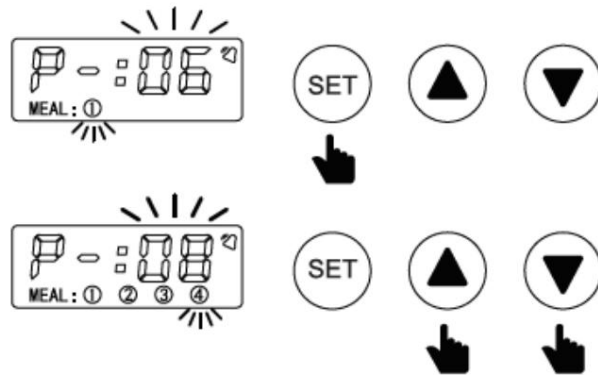

RECORDING MEAL CALL FOR YOUR PET

Follow the below steps to record your voice to call your pet when feeding.

1. Press and hold the REC button. The MIC light will display on the control panel.
2. Speak into the recording port (small hole by the MIC light) and record your message (up to 10 seconds).
3. Release the REC button when recording is finished. The MIC light will go off.
4. Press the PLAY button to listen to the message.

Note:

1. Unlocking the Screen: If no activity takes place in 25 seconds, the unit will shut down and enter standby mode. Press the SET button for three (3) seconds to unlock the screen and follow the instructions above to manage settings.
2. Manual Feeding: Unlock the screen and press the ↑ button to dispense one portion of food manually.
3. Resetting: Press and hold the SET key until the digits flash, then press the PLAY key to delete the previous setting.
4. Erase Alarm Sound: When there is no pet food dispensed through the food outlet, the device will beep to warn you there is enough food. If you would like to erase the beep sound, please fill enough food and dispense one portion manually or Press and hold the SET key for several seconds.
5. When Blocked: If a jam should occur, the unit will stop dispensing food. Clear any food from around the outlet and the unit should return to normal operation.
6. Exit: During setting (Digits on display are flashing), press and hold the SET key for 3 seconds to exit setting, and it will return to the timer interface. The program you set will be saved automatically before exiting.

Assemble & Disassemble



Assemble & Disassemble food tank:

Hold both sides of the food tank and lift upwards for removal; for installation, rotate the central rotary impeller to align the bottom slot.

Assemble & Disassemble food tray:

Hold buckles on both sides of the food tray and push the tray towards the body. Pull the tray outwards for removal.

Device Cleaning

1. Please cut off and unplug the device before cleaning.
 2. Clean the unit with a damp cloth rather than a soaked cloth.
 3. The food tray and food tank can be removed for cleaning.
 4. The base cannot be immersed in water at any time, or it may cause short-circuit of the device.
 5. The food tank and food tray can be cleaned in the automatic dishwasher.
 6. It needs to be wiped clean and completely dried before refilling the food.
-

Operation Instructions

- The product is only designed for cats and dogs. Please don't let children reach it.
- Please replace the battery in advance when the low power indicator flashes. Avoid using rechargeable batteries.
- The product is only for indoor use, which should be placed horizontally.
- Please check the remaining food in the food tank regularly and give a refill in time. It is normal that the food at the bottom will not be consumed completely.

Special Instructions

- When operating the device, please make sure that the touch panel is clean and put your finger on the touch keys. In case the screen is not working during your first operation, please check if the batteries and adapter are installed correctly. if the bottom switch is turned on.
- Please use quality alkaline batteries. The clock may go slow when the machine has run for some time, which may be caused by the low-power batteries. In this case, please timely replace the batteries and reset.
- Both sides of the food outlet are set with an infrared radio tube. If the food is excessively stacked in the food tray, the food outlet will be clogged, it may cause the failure in receiving the infrared radiation, and the device will automatically enter the protection status and stop the current food discharging. In this case, please clean out the food at the outlet. After the infrared radiation can be normally received, the device will continue executing the next feeding program.
- When the display shows „EEEE“, it indicates that the motor has entered the automatic protection state. In this case, please remove the food tank that is stuck by food and then clean up and mount it back to the food tank. Then try manually feeding once, so as to check whether the motor is in normal operation to clear the display of error status.
- The device supports dual power supply. Adapter mode is default setting, which will be automatically switched to battery mode during power failure. The feeding program still works.

Standard Parameters

Size: 24.5 x 30 x 38 cm

Capacity: 4.3L

Material: ABS

Net Weight: 2.1 kg

Power supply: 3 "D" size alkaline batteries or DC adapter

DC Power: DC 5V/1A standard power supply

Food Category: Dry cat food and dog food, no wet food or snacks

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu