

# **640X**

## **Owner's Manual**

Please read this manual thoroughly  
before operating the 640X training collar.

# IMPORTANT SAFETY AND PRODUCT INFORMATION

## WARNING

Read all safety and product information below before using Dogtra products. Failure to follow these safety instructions could result in injury to you, your dog, and/or damage to Dogtra products or other property.

## PRODUCT SAFETY

### Training Methods

Dogtra products can be used with a variety of training methods. However, each dog may respond differently to training methods and Dogtra products. Observe your dog closely when determining the correct training method to use with Dogtra products.

### Aggressive Dogs

Do not use Dogtra products on aggressive dogs. Such dogs may react adversely and cause injury to people or other dogs. When dealing with an aggressive dog, seek the help of a dog training professional or veterinarian.

### Children and the disabled

Dogtra products are not toys. Adult supervision and extreme caution are required when Dogtra products are used by or near children.

## PRODUCT DAMAGE

### Electrical Product

Dogtra products include electrical components and batteries. Do not use or store the product near heat or flammable substances. Such use or storage may damage the product or cause fire, explosion, personal injury, or property damage.

## Medical Device Interference

Dogtra products contain electrical and magnetic components that emit low levels of electromagnetic radiation and radio frequencies. These electromagnetic waves or radio frequencies may interfere with pacemakers, defibrillators, or other medical devices. Consult your physician or medical device manufacturer before using any medical device with Dogtra products. If you think Dogtra products may interfere with your pacemaker, defibrillator, or other medical device, stop using Dogtra products.

## Inadvertent Activation

The digital microprocessor offers thousands of unique codes to eliminate frequency match-up with other Dogtra e-collars. The Constant button will automatically shut down after being held down for 12 seconds or more as a safety feature.

## Charging

Only charge Dogtra products with Dogtra Branded batteries and device chargers. Do not charge the product by any other means or at temperatures below 0°C (32°F) or above 45°C (113°F).

## Unauthorized use

Dogtra products should only be used in a humane manner to train and educate dogs. Dogtra products are not intended for use in any other way and are not intended for use on other animals or humans.

## Battery removal and disposal

Dogtra products include batteries. Be careful when removing or installing the battery as your fingers may be caught. Dispose of batteries according to local regulations. Do not disassemble, crush, heat or modify the battery. Fire, injury or property damage may result.

# CONTENTS

AT A GLANCE .....	48	8. BATTERY CHARGE .....	72
MAIN FEATURES .....	49	9. ATTACHING THE BELT CLIP .....	74
OVERVIEW .....	50	10. USING THE TEST LIGHT .....	75
UNDERSTANDING YOUR TRAINING SYSTEM		GENERAL TRAINING TIPS .....	77
1. TURNING THE PRODUCT ON/OFF .....	52	MAINTENANCE .....	79
2. DEFAULT BUTTON SETTINGS .....	53	TROUBLESHOOTING GUIDE .....	80
3. SIDE BUTTON .....	54	WARRANTY AND REPAIR INFORMATION .....	82
4. SAFETY STIMULATION LEVEL LOCK .....	58		
5. EXPANDABLE 3-DOG SYSTEM .....	58		
6. HOW TO ADD AN ADDITIONAL RECEIVER DEVICE .....	59		
7. X-SHIELD .....	60		
8. HANDSFREE SQUARE INFORMATION .....	61		
HOW TO USE THE RECEIVER			
1. RECEIVER FITTING .....	64		
2. HOW TO INSERT THE STRAP .....	65		
3. OBTAINING MAXIMUM DISTANCE .....	66		
4. FINDING THE RIGHT STIMULATION LEVEL ....	68		
5. NON-STIMULATION CONTACTS .....	69		
6. LED INDICATOR .....	70		
7. CARE FOR LCD TRANSMITTERS IN COLD TEMPERATURE .....	71		

## AT A GLANCE



### Optional Accessories

#### Auto Charger

The input of the auto charger for 640X is 12V ~ 24V and the output is 5V 1000mA.

To purchase accessories, visit [www.dogtra-europe.com](http://www.dogtra-europe.com) or call customer service at +33 (0) 130-62-65-65.

## MAIN FEATURES

- Maximum range 600 metres
- Expandable to a 3-dog system
- IPX9K waterproof certified transmitter and receiver
- 100-level stimulation with Rheostat Dial and LCD screen for precise control
- Safety Stimulation Level Lock
- Constant stimulation with customizable Boost button for instant level increase
- LCD screen display for stimulation level and battery life
- Nick/Constant stimulation
- XPP (Extreme Performance Pager) Vibration
- Audible Tone
- Beacon & Locate LED Light
- Low/High output receiver
- 2-hour rapid charge batteries for transmitter and receiver
- USB C-TYPE Charging
- Compatible with Dogtra's handsfree system (sold separately)

 
# OVERVIEW



**640X  
Transmitter**



**640X  
Transmitter LCD Screen**

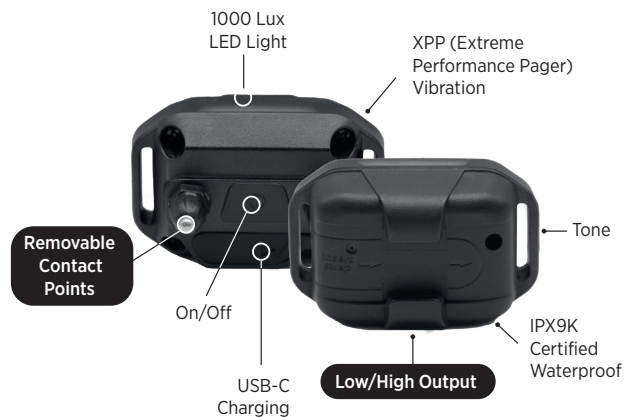

**640X  
Receiver**

# UNDERSTANDING YOUR TRAINING SYSTEM

## HOW TO USE THE TRANSMITTER

### 1. TURNING THE PRODUCT ON/OFF



The remote transmitter's power button is located on the bottom right. Press and hold the power button for 2 seconds to turn it on or off. (Press the power button briefly to turn on the backlight.)



The receiver's collar power button is located between the contacts. Press and hold the power button for 2 seconds to turn it on or off. The LED indicator will turn solid green with a tone when the unit powers on and a red light with a tone when it powers off.

### 2. DEFAULT BUTTON SETTINGS

#### Front button (Nick or Constant)

The front button can be selected as Nick/Constant. The stimulation type indicated at the top of the display is applied. (Factory set to Nick mode)



#### Front button settings

#### (PROGRAMMING BETWEEN NICK AND CONSTANT)



- 1) Set the stimulation level to "0".
- 2) Hold both the main front button and side power button together for 5 seconds to program Nick or Constant mode. The selected mode will be displayed on the top of the LCD screen.

### 3. SIDE BUTTONS



#### Boosted Constant

Apply Constant boost stimulation for up to 12 seconds at a pre-selected boost level. The stimulation level can be quickly increased without the user having to manually increase the level. Users can customize their desired jump level by pressing Boosted Constant.

$$\text{Base Displayed Level} + \text{Incremental Amount} = \text{Boosted Constant Output}$$

#### Example

 
Selecting “5” as the Incremental Amount for the Boosted Constant button will apply the output level of displayed level + 5, as shown below.

Base Displayed Level	Incremental amount (Boost amount)	Boosted Constant Output
1	+5	6
5	+5	10

Applies Displayed Base Level.  
In this case, level 5 'Nick' will apply.



Applies 'Boosted Constant' for up to 12 seconds.  
In this case, level 10 'Constant' will apply.

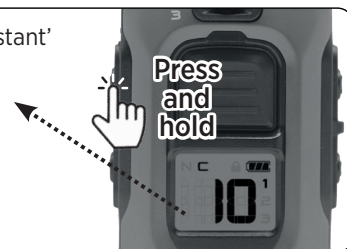

## Setting up Boost feature



1. Set the stimulation level to zero.



2. **Hold the Boosted Constant button for 5 seconds until the LED light blinks; then release it.**



3. Turn the Rheostat Dial to **select the incremental Boost amount** as shown on the LCD screen.

**Note:** Set the Boost level to 0 to use the Constant stimulation without Boost.



4. Tap the Boosted Constant button to save the setting.

**Note:** The saved setting will remain even if the unit is turned off. To reset the setting, repeat the steps above.

## Non-Stimulation Features



### XPP (Extreme Performance Pager) Vibration

Provides vibration for up to 12 seconds when held.



### Tone

Provides an audible tone for up to 12 seconds when held.



### LED Locate Light

Uses a 1000 lux LED Light on the receiver to locate your dog in the dark.

- For continuous blinking, every 4 seconds, tap the Locate Light button once.

To disable the continuous blinking, tap Locate button again.

- To manually enable the continuous blinking, press and hold the Locate Light button which can stay blinking for up to 12 seconds.



 


#### 4. SAFETY LEVEL LOCK



To prevent the stimulation level from changing unintentionally, press and hold the top of the Rheostat dial for more than 2 seconds to lock it. When locked, a lock icon will appear on the LCD screen. To release lock mode, press and hold the top of the volume again for more than 2 seconds until the lock icon disappears.

#### 5. EXPANDABLE 3-DOG SYSTEM

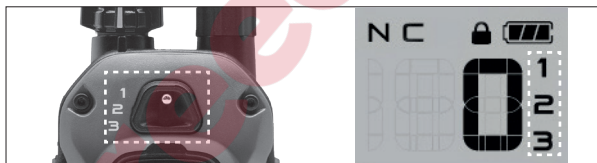

If you purchase an additional receiver, you can use the front toggle switch to select the dog you want to stimulate. You can check the selected dog on the LCD screen.

#### 6. HOW TO ADD AN ADDITIONAL RECEIVER DEVICE



1. Turn on the transmitter and set the stimulation level to "0". Use the toggle to select the desired dog (1,2 or 3).



2. To begin pairing, receiver must be off. Initiate pairing mode by pressing and holding the power button for 5 seconds until the LED starts blinking and then release.




3. Simultaneously press the front transmitter button and side Boost button until the screen reads "CD\*\*\*\*" then release. Confirm successful pairing by pressing Pager vibration.


**Repeat the pairing process if the pager vibration test is unsuccessful.  
The pairing between the devices has timed out or failed.**

## 7. X-SHIELD INSTALLATION

 
Additional X-SERIES case covers, X-Shields are sold separately.

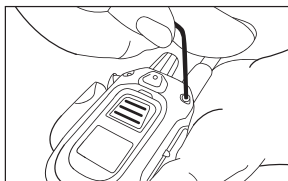

 
1. Use the included tool to loosen the four screws.

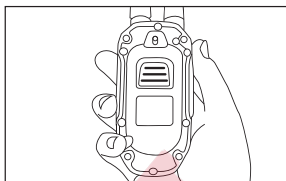

 2. Remove the front case.

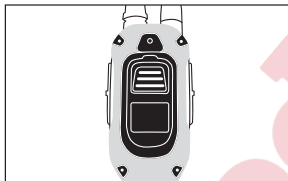


 3. Place the new X-SHIELD on top of the unit to align with the screw holes.

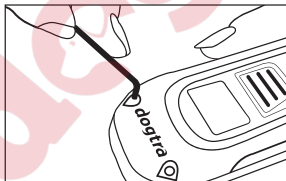

4. Use a tool to tighten the screws into the four holes.


## 8. HANDSFREE/PLUS SQUARES PAIRING

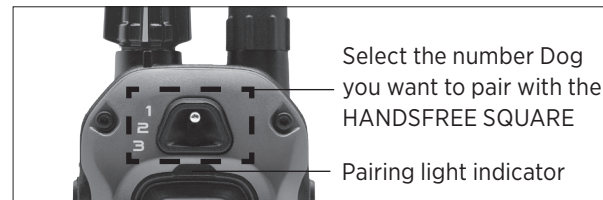 

Select the number Dog you want to pair with the HANDSFREE SQUARE

Pairing light indicator

### HANDSFREE SQUARE PAIRING: NICK OR CONSTANT

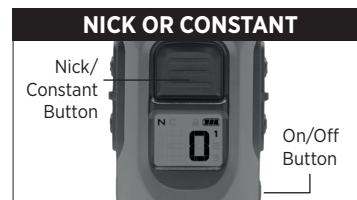 

1. Turn on the remote and set the stimulation level to 0.
2. Select Nick or Constant by pressing and holding the POWER + CENTER (N/C) button for 5 seconds.
3. Once your desired function appears on the screen, **turn off** the remote transmitter.
4. Press and hold the POWER + CENTER button until the light blinks rapidly.
5. Press and hold the HANDSFREE SQUARE button to code the desired function.


## HANDSFREE SQUARE Pairing:
 
### All other Functions

1. Begin with the remote transmitter turned off.
2. Press and hold the ON/OFF button + your desired function until you see the rapid light blink.
3. Press and hold the HANDSFREE SQUARE to code the desired function



1. Set desired BOOST level
2. Hold down the on/off button and the Boosted constant button.

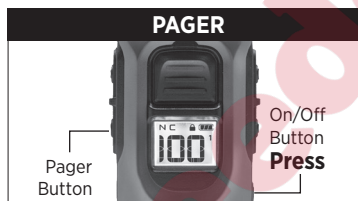

Hold down the on/off button and the Pager button.



Hold down the on/off button and the Tone button.



Hold down the on/off button and the Light button.

### Range

The HANDSFREE SQUARE will need to be within 10 meters of the transmitter to work.

### Battery Life

The LED on the HANDSFREE SQUARE will blink when the button is pressed. Replace the battery in the HANDSFREE SQUARE when the LED no longer blinks.

### Caution!

Only 14 HANDSFREE SQUARES can be paired. When a 15th HANDSFREE SQUARE is paired, the initial 14 that were paired will reset and need to be paired again.

# HOW TO USE THE RECEIVER

 
## 1. RECEIVER FITTING

### Improper Fit

A loose fit can allow the receiver to move around on the dog's neck. When this happens, the contact points may rub against the skin and cause irritation. If the receiver is too loose, the contact will not be consistent and cause the corrections to be inconsistent. Dogtra uses medical grade stainless steel contact points and anti-microbial plastic to protect the dog's skin.

### Proper Fit


The receiver should be fitted so that the anti-microbial plastic contact points press firmly against the dog's skin. You should be able to fit two fingers underneath the collar strap. The Best location is on either side of the dog's windpipe.

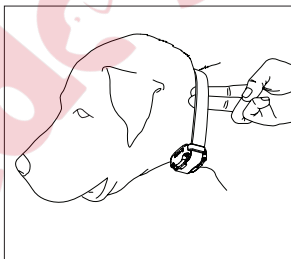



### Attention!

Leaving the receiver in the same location on the dog's neck for an extended period of time can cause skin irritation due to the sensitivity from the contact points. If the dog is to wear the receiver for long periods, occasionally reposition the receiver every few hours so that the contact points are moved to a different location on the dog's neck and remove the receiver after 8 hours of usage. Make sure you check for skin irritation each time you use the unit.
 
## 2. HOW TO INSERT THE STRAP

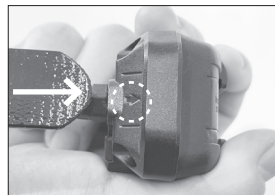

  1. Insert the strap by looking at the direction of the arrow on the receiver.

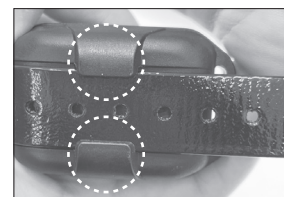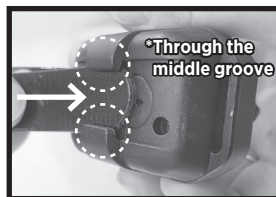


2. Make sure to connect the middle groove of the receiver.




3. Attach the receiver to the strap by threading the strap through the opposite hole.

### 3. OBTAINING MAXIMUM DISTANCE

 
The maximum range of the 640X is 600 metres. Depending on how you use the transmitter, the range of your transmitter may vary. For maximum range, hold the transmitter away from your body and avoid touching the antenna. Charge your device properly to maximize signal strength.

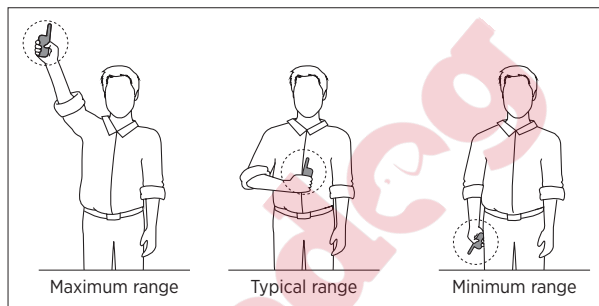

 The range is reduced when the handheld transmitter's antenna is covered or in contact with your body. Refer to the following carrying methods for optimal range.

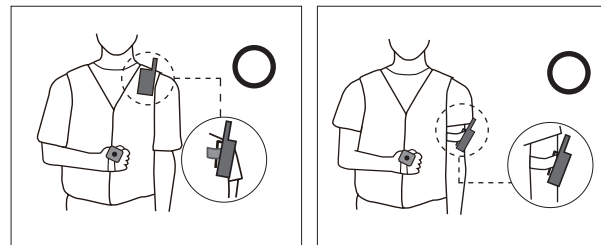


 Carry the handheld transmitter with the antenna facing away from you.

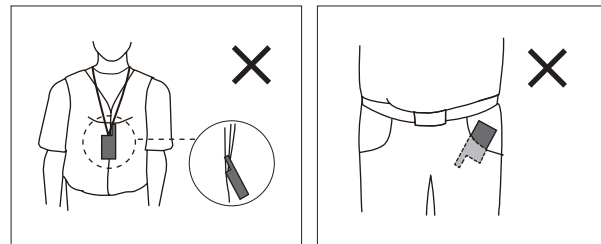

Do not place the handheld transmitter with the antenna touching your body or facing downwards.

#### 4. FINDING THE RIGHT STIMULATION LEVEL

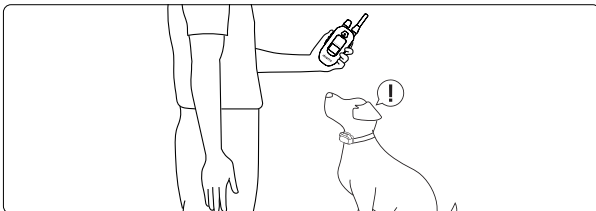 


The 640X has a rheostat dial on the top of the transmitter. Always start at the lowest level and work your way up. You will find the right level when your dog responds to the stimulus with a mild response. You may also need to adjust intensity levels as your dog's demeanor changes, especially during times of increased excitement or distraction.

	<b>640X</b>	<b>Equivalent stimulation levels</b>	
		<b>640C</b>	<b>1200S</b>
Max	<b>100</b>	-	84
	<b>90</b>	-	76
	<b>80</b>	127	69
	<b>70</b>	111	58
	<b>60</b>	102	54
	<b>50</b>	91	46
	<b>40</b>	65	34
	<b>30</b>	45	27
	<b>20</b>	33	21
	<b>10</b>	23	11
Min.			

#### 5. NON-STIMULATION CONTACTS



 1. Please turn the contact points and remove them.

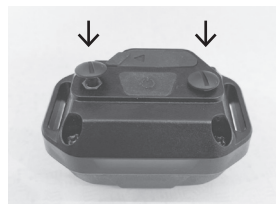

2. Place non-stimulation contacts in each place



3. Press non-stimulation contacts to secure the non-stimulation contacts

## 6. LED INDICATOR

The LED indicator flashes every 4 seconds when the receiver is on and ready for use. The LED indicator will blink on both the transmitter and the receiver when the transmitter buttons are pressed.

 
The LED indicator color indicates the battery life level.

**Green = Full charge**

**Amber = Medium charge**

**Red = Needs charge**

If the unit is used while the LED indicator is red, it may shut down automatically.

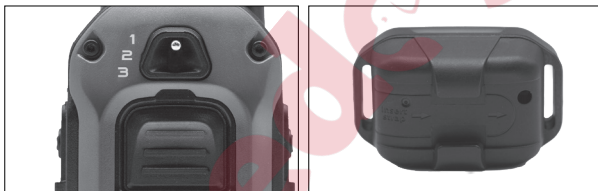


### Receiver Indicator Light

When the Constant button on the transmitter is pressed, the receiver indicator light will glow steadily (either green, amber, or red based on the remaining battery life), as long as you hold the button down, for up to 12 seconds. When the Nick button is pressed, the light comes on for a fraction of a second.

## 7. CARE FOR LCD TRANSMITTERS IN COLD TEMPERATURE

In cold temperatures (below minus 12°C), the transmitter's liquid crystal display (LCD) may appear dim or unresponsive. Wait until you see the display before selecting your training level. Even if the LCD screen goes dark or becomes unresponsive when you press a button, the transmitter still functions properly. In very cold weather, the LCD screen may take some time to respond, which may cause the intensity level to become stuck at the current level. Turning the rheostat dial will not change the level on the screen, but will change the actual intensity of the receiver.
 
## 8. BATTERY CHARGE

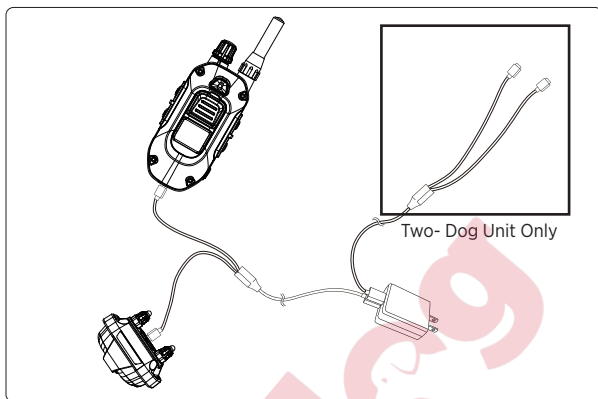

Dogtra 640X uses a lithium polymer battery. If the light is red, the device does not turn on, or the system does not stay on when you press the button, recharge the device.

**NOTE 1:** Use only Dogtra approved batteries, chargers and accessories with the Dogtra e-collar. This will prevent any damage that may occur if you try to use a different charger.

**Note 2:** The device will be partially charged when leaving the Dogtra facility. When you receive the system, be sure to give it an initial charge of 2 hours before using it for the first time in an area away from flammable materials.

**Note 3:** When the charger is not in use, unplug it from the power source. If the device will be stored unused for more than 3 months, fully charge the battery.

### To charge your system, follow the steps below:

1. Open the rubber plug on the battery charging port and connect the charging cable.
2. Connect the charger to a 220V wall outlet or, if using an automatic charger, to a cigarette lighter specifically designed for lithium polymer batteries. When connected properly, all lights will glow red and the device will automatically turn off during the charging process. After the device is fully charged and unplugged from the battery cable, the device must be turned on again before use.
3. The lithium polymer battery is fully charged within 2 hours. The light stays red while charging and turns green when the device is fully charged.
4. After charging, cover the battery charging socket with a rubber plug.

### Recharging is required in the following cases:

- The LED on the transmitter or receiver is red.
- The LED on the transmitter or receiver does not light.
- A low-battery sound occurs when the transmitter or receiver is powered off.

### Charger Info

Manufacturer: E-SUN

Manufacturing country: CHINA

 
Model name: MKC-0502500VEUT

INPUT: 100-240V-50/60Hz 0.4A

OUTPUT: 5V 2500mA



## 9. ATTACHING THE BELT CLIP

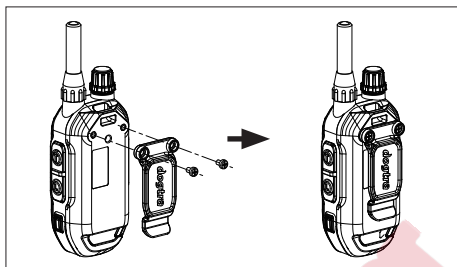

To attach the included belt clip, follow the instructions below.

1. Align the belt clip with the groove on the back of the transmitter.
2. Use a screwdriver to firmly tighten the screw of the belt clip.

### Caution

Firmly tighten both screws of the belt clip. Be careful not to overtighten.

## 10. USING THE TEST LIGHT



1. Turn on the receiver by pressing and holding the on/off button in the center of the contact terminal. The receiver's light will briefly turn on and then blink once every 4 seconds to indicate that the receiver is ready to use (if the light is red, the receiver needs to be charged).
2. Turn on the transmitter by pressing and holding the on/off button on the right side of the transmitter. The LED blinks every 4 seconds and the remaining battery life is displayed on the LCD screen. (If the battery icon on the LCD transmitter screen shows only 1 bar, it needs to be charged.)
3. Place the test light included in the package onto the contact points as shown.
4. Press the Nick button on the transmitter and observe the test light. It should only be on for a moment. (The higher the intensity, the brighter the test light.)
5. Observe the test light while pressing the Constant button on the transmitter. The button should light up as long as you hold it down. However, as a safety feature, if you press the Constant button for more

than 12 seconds, the receiver will automatically stop stimulation.

6. Turn the rheostat dial on the transmitter clockwise and then counterclockwise. The test light shines brighter at higher stimulus levels and dimmer at lower levels.

**Note:** The test light may not be visible if the intensity level is set below level ten.

reedog

## GENERAL TRAINING TIPS

Your dog must know some basic obedience commands before beginning training with the 640X. A dog learns by first being shown a command, followed by lots of repetition over an extended period. As the dog becomes proficient at these commands, the trainer can introduce distractions and different locations to strengthen the commands.

### Obedience Training on the Leash

Your dog must fully understand the obedience commands (sit, stay, here, heel, and kennel) before using the e-collar for reinforcement of these commands. A leash attached to a standard collar is used to "teach" the dog the basic obedience commands (sit, stay, here, heel, and kennel). A tug on the leash/collar is used to reinforce the command. When the dog complies with the command, use positive reinforcement/praise. Once the dog understands these commands, the e-collar can be used to reinforce them.

### Beginning E-Collar Training

When you feel your dog understands the obedience commands on the leash we can now start with the e-collar training. With the dog on the leash and wearing the e-collar, continue with your obedience drills. Apply light stimulation (Nick or Constant) when a command is given; the stimulation can be removed as the dog complies. Through repetition, the dog learns to perform the command.

The final step is the avoidance phase in which the dog learns that he can avoid the stimulation altogether by performing your commands. When these training procedures are complete, the e-collar is used as a reminder when the dog does not comply with your

commands at home or in the field. Keep your initial training sessions short and positive as dogs have a short attention span.

### **How Much Stimulation to Use**

Always start with low levels of stimulation and work your way up depending on the disposition of your dog and the given situation. By using the correct amount of stimulation to get your point across, you will have a more controllable environment and a dog that is under less stress. Animals (and humans) perform better in a less stressful environment.

***For more training information, please consult with a professional dog trainer***

## **MAINTENANCE**

### **Basic Maintenance**

Make sure the rubber charging cap is securely in place when the system is in use. After each training session, carefully inspect the unit for any missing parts or damage to the casing. Damaged or broken casing may affect the waterproof guarantee on the unit. After confirming that there is no damage to the casing, rinse the receiver and clean out any dirt or debris.

### **Storage Maintenance**

The unit should be fully charged before storing for extended periods. While in storage, the unit should be given a full charge once a month and before the first use. Store the units in at room temperature. Do not keep the units exposed to extreme climates.

### **Troubleshooting**

If the unit is malfunctioning, please refer to the “Troubleshooting Guide” before sending it to Dogtra for service. If you have any questions or concerns, you may email them to [Info@dogtra-europe.com](mailto:Info@dogtra-europe.com), or call customer service at +33-130-62-65-65.

# TROUBLESHOOTING GUIDE

## 1. My dog is not reacting to the system.

- Make sure the receiver and transmitter are on.
- Make sure the collar strap is tight enough so both contact points are touching the dog's skin.
- The contact points may be too short for your dog's thick or long coat. You might need to trim down the hair on the dog's neck, so both contact points are touching the skin.
- The intensity level may be too low for your dog. Keep increasing the stimulation until the dog responds usually by neck movement, head shaking, looking over his shoulder, etc. (response may be very subtle so pay attention.)

## 2. The LED indicator light comes on, but I do not feel any stimulation.

- The battery may be low, so check the LED light for battery life.

## 3. The transmitter has no range or stimulation is less when the dog is farther away.

- The antenna(s) may be damaged. To order parts, please contact customer service at +33-130-62-65-65 or go to [www.dogtra-europe.com](http://www.dogtra-europe.com).
- The range indicated on the unit's box is for flat terrain. Heavy brush, trees, hills, or moisture will affect the range of your unit. For best range, hold the transmitter vertically above your head, and/or try moving to higher ground.
- Any electrical conductors will affect the range, such as cars, chain-link dog runs, metal structures, and radio towers. For best results, operate away from these objects.

## 4. My units are not holding a charge.

- The batteries might not be charged properly, or the charger, splitter, and the charging port may not be functioning properly. You can send in your charging units to have us inspect them.
- The charging pin may be damaged. Inside the charging port, there is a metal pin that should be standing straight up and stiff. If the pin is wobbling, broken, or missing, you will need to send the unit in to the Repair Department. The charging port must be clean prior to charging; clean the dirt out with a cotton swab and some rubbing alcohol. If the dog is in saltwater, be sure to rinse the receiver and charging port with clean water.
- If the above does not resolve your issues, contact Dogtra customer service at [info@dogtra-europe.com](mailto:info@dogtra-europe.com) or +33-130-62-65-65.

## 5. My dog has skin irritation.

- This may be due to an improper fit or from wearing the unit too long. If your dog exhibits signs of skin irritation, consult with a veterinarian. Once the dog's skin returns to a normal condition, continue to use the receiver and check your dog's neck each time you use the unit.

# DOGTRA PRODUCT WARRANTY

## LIMITED WARRANTY

**For Dogtra Products Purchased from Dogtra Authorized Dealers**

### Two-Year Limited Warranty

Dogtra-Europe provides the original purchaser with a 2-YEAR LIMITED WARRANTY for the products sold by Dogtra-Europe and its authorized distributors/retailers. The warranty begins from the date of the original purchase. The replaceable batteries of YS100, iQ No Bark Collar, iQ CLIQ and BALL TRAINER are not covered by Warranty.

\* The cost of shipping products under warranty back to Dogtra-Europe is the customer's responsibility. Dogtra-Europe will provide/pay (via regular ground service) the shipping cost back to the customer. Any expedited shipping service will be at the customer's expense. If a repair is not covered by warranty, the cost of Parts, Accessories, Labor fees, and Shipping fees incurred are the customer's responsibility. Labor fees will be variable depending on the extent of the work required.

### To Qualify for the Dogtra Warranty

A proof of purchase is required to initiate repair work under warranty. We strongly recommend keeping the original receipt.

### Not Covered Under Warranty

Dogtra-Europe DOES NOT cover the cost of repairs and replacements due to misuse by the owner or dog, improper maintenance, and/or lost units. Any water damage on the Water Resistant Transmitters of the Dogtra 175NCP, 180NCP, 200NCP, 400NCP, 410NCP, iQ PLUS, iQ CLIQ and BALL TRAINER and the Water Resistant Receivers of the RRS, RRD, RR Deluxe and BALL TRAINER, will not be covered. All replacement costs for either the transmitter or receiver will be

### WARRANTY AND REPAIR INFORMATION

66 67 the owner's responsibility. The warranty does not cover failure resulting from damage, abuse or loss of parts. The warranty is void if the unit has been altered or an unauthorized person has damaged the unit while attempting repair work. Battery replacement by the customer during the warranty period is not recommended. If the customer chooses to replace the batteries, any damage to the unit during the change-out by the owner will void the warranty. The removal of serial numbers from any Dogtra products will void the warranty. Dogtra reserves the right to retain and discard any parts or accessories that have been found damaged upon replacement and repair.

### Out of Warranty Repair Work

For repair work that is no longer covered by warranty, the cost of repair will include parts, labor and shipping. The owner will be informed about the repair costs before the product is repaired. Write a note briefly explaining the problem. Include your name, address, city/zip code, phone number and email address. Procedure for Repair Work If the unit is malfunctioning, please refer to the "Troubleshooting Guide" in the Owner's Manual and contact customer service by phone at +33 (0)1 30 62 65 65 or by email at info@dogtra-europe.com, for technical support, before sending it to Dogtra-Europe for Service. The cost of shipping products under warranty back to Dogtra-Europe is the customer's responsibility. Dogtra-Europe is not responsible for units damaged or lost in transition to Dogtra. Dogtra-Europe is not responsible for loss of training time or inconvenience while the unit is in for repair work. Dogtra-Europe does not provide loaner units or any form of compensation during the repair period. A copy of the sales receipt showing the purchase date is required before warranty work is initiated. Please include a brief explanation outlining the problem and include your name, address, city/state/zip code, daytime phone number, evening phone number, and email address. If the repair costs are not covered under warranty, we will call you for payment information and authorization. For any questions concerning your Dogtra products, call us at +33 (0)1 30 62 65 65, or email us at sav@dogtra-europe.com.

**Send repair units to  
Dogtra-Europe  
12-14, Rue Augustin Fresnel  
78310 Coignières, FRANCE**

The diagrams and representations in the manual may differ slightly from the actual product depending on the model type.

# EU DECLARATION OF CONFORMITY

1.Product model: TD22UT

2.Name and address of the manufacturer or his authorized representative:

DOGTRA EUROPE  
12-14 Rue Augustin Fresnel, 78310 Coignières, FRANCE

3.This declaration of conformity is issued under the sole responsibility of the manufacturer.

4.Object of the declaration:

Equipment : DOG TRAINING DEVICE

Brand name : DOGTRA

Model/type : TD22UT

Family Model : 640X, 642X, 640X FREE PLUS, 642X FREE PLUS, 640X FREE, 642X FREE, 640X HANDSFREE, 642X HANDSFREE, 640X HANDSFREE PLUS, 640X FREE PRO, 640XTRA HANDSFREE, X1 additional Transmitter

Frequency Band(s) : 27.195 MHz

Output Power : 21dBm

5.The object of the declaration described above is in conformity with the relevant

Union harmonization legislation:

Radio Equipment Directive (RED) 2014/53/EU,

Electromagnetic Compatibility Directive (EMC) 2014/30/EU

Low Voltage Directive (LVD) 2014/35/EU

6.References to the relevant harmonized standards used or references to the other technical specifications in relation to which conformity is declared:

RED:	EN 300 220-1 V3.1.1 EN 300 220-2 V3.1.1
EMC:	ETSI EN 301 489-1 V2.3 (2019-11) ETSI EN 301 489-3 V2.3.2 (2023-01)
LVD:	IEC 62368-1:2018

Signed for and on behalf of DOGTRA EUROPE

Authorized Signatory :

Nombre/Puesto : H.K. YANG / CEO Coignières, 25 December, 2024

12-14, Rue Augustin Fresnel, 78310 Coignières, France

T. + 33 (0)1 30 62 65 65 E. info@dogtra-europe.com W. www.dogtra-europe.com



# EU DECLARATION OF CONFORMITY

1.Product model:TD22UR

2.Name and address of the manufacturer or his authorized representative:

DOGTRA EUROPE  
12-14 Rue Augustin Fresnel, 78310 Coignières, FRANCE

3.This declaration of conformity is issued under the sole responsibility of the manufacturer.

4.Object of the declaration:

Equipment : DOG TRAINING DEVICE

Brand name : DOGTRA

Model/type : TD22UR

Family Model : 640X, 642X, 640X FREE PLUS, 642X FREE PLUS, 640X FREE, 642X FREE, 640X HANDSFREE, 642X HANDSFREE, 640X HANDSFREE PLUS, 640X FREE PRO, 640XTRA HANDSFREE, 640X ADDITIONAL RECEIVER, 640X FREE PLUS ADDITIONAL RECEIVER, 640X FREE ADDITIONAL RECEIVER, 640X HANDSFREE ADDITIONAL RECEIVER

Frequency Band(s) : 27.195 MHz

Output Power : N/A (Receive only)

5.The object of the declaration described above is in conformity with the relevant

Union harmonization legislation:

Radio Equipment Directive (RED) 2014/53/EU,

Electromagnetic Compatibility Directive (EMC) 2014/30/EU

Low Voltage Directive (LVD) 2014/35/EU

6.References to the relevant harmonized standards used or references to the other technical specifications in relation to which conformity is declared:

RED:	EN 300 220-1 V3.1.1 EN 300 220-2 V3.1.1
EMC:	ETSI EN 301 489-1 V2.3 (2019-11) ETSI EN 301 489-3 V2.3.2 (2023-01)
LVD:	IEC 62368-1:2018

Signed for and on behalf of DOGTRA EUROPE

Authorized Signatory :

Nombre/Puesto : H.K. YANG / CEO Coignières, 25 December, 2024

12-14, Rue Augustin Fresnel, 78310 Coignières, France

T. + 33 (0)1 30 62 65 65 E. info@dogtra-europe.com W. www.dogtra-europe.com



## EN How to separate the batteries from the units before disposal

1. Remove the collar strap from the receiver.
2. Open the unit case by loosening the screws on its back or front.
3. If necessary, remove the PCB to access the battery.
4. Disconnect or cut the wires linked to the battery and carefully remove the battery.
5. Discard units and batteries separately and according to your local regulations.

⚠ **Warning:** Do not disassemble, crush, heat or otherwise alter any batteries!

## DE Angabən zur sicheren Entnahme der Akkumulatoren vor Entsorgung des Gerātes

1. Ziehen Sie das Halsband vom Empfānger ab.
2. Öffnen Sie das Gehāuse, indem Sie die Schrauben auf dessen Vorder-/Rückseite lösen.
3. Entnehmen Sie falls nōtig die Platine, um an den Akku zu kommen.
4. Ziehen/durchtrennen Sie die mit dem Akku verbundenen Drāhte und entnehmen Sie diesen.
5. Entsorgen Sie Gerāte und Akkus getrennt und gemāß der für Sie gūltigen Gesetzgebung.

⚠ **Warnhinweis:** Akkus nicht zerlegen, zerdrücken oder erhitzen!

## FR Comment retirer les accumulateurs en toute sūcūritū avant la mise au rebut d'un appareil

1. Retirer la sangle du rēcepteur.
2. Ouvrez le boītier en retirant les vis se trouvant sur le cōtē avant/arriēre.
3. Si nēcessaire, retirez la carte ēlectronique pour atteindre l'accu.
4. Dēconnectez ou coupez les fils reliēs ā l'accu et enlevez l'accu.
5. Jeter appareils et accus sēparēment et conformēment ā votre rēglementation locale.

⚠ **Attention:** Ne pas dēmonter, ēcraser, chauffer ou altērer d'une quelconque faēon les accus!

## ES Como quitar las baterías en toda seguridad antes de desechar el aparato

1. Quitar la correa del receptor.
2. Abrir el mando/el receptor quitando los tornillos encontrāndose en la frente/ detrās de la carcasa.
3. Si necesario, quitar la placa electrōnica para poder quitar la batería.
4. Desenchufar o cortar los hilos vinculados a la batería y quitarla.
5. Deshacerse del aparato y de las baterías separadamente y segūn la legislaciōn local.

⚠ **Atenciōn:** No desmontar, aplastar, calentar o alterar de cualquier manera las baterías.

## IT Come separare le batterie dalle unitā prima dello smaltimento

1. Rimuovere la cinghia dal collare ricevitore.
2. Aprire la cassa del ricevitore o del trasmettitore allentando le viti sul retro o sul davanti degli stessi.
3. Se necessario, rimuovere il circuito stampato per accedere alla batteria.
4. Scollegare o tagliare i fili collegati alla batteria e rimuovere con attenzione la batteria.
5. Smaltire le unitā e le batterie separatamente e secondo le normative locali.

⚠ **Avvertenza:** non smontare, schiacciare, riscaldare o alterare in alcun modo le batterie!

## EN INFORMATION ABOUT BATTERIES CONTAINED IN EQUIPMENT

## DE INFORMATIONEN ŪBER DIE IM GERĀT ENTHALTENEN BATTERIEN

## FR INFORMATIONS SUR LES BATTERIES CONTENUES DANS L'APPAREIL

## ES INFORMACIONES SOBRE LAS BATERIAS CONTENIDAS EN EL APARATO

## IT INFORMAZIONI SULLE BATTERIE CONTENUTE NELLE APPARECCHIATURE

Unit	Model	Battery Type	Chemical System
Receiver	iQ MINI, YS300, E-FENCE 3500	3.7V 200mAh	Lithium-Polymer
Receiver	ARC800(2), ARC800 CAMO	3.7V 280mAh	Lithium-Polymer
Receiver	610(2)C, 640(2)C, YS VIBE, iQ PLUS(DUO)	3.7V 330mAh	Lithium-Polymer
Receiver	YS600	3.7V 440mAh	Lithium-Polymer
Transmitter	iQ PLUS(DUO), iQ MINI, 610(2)C, 640(2)C	3.7V 500mAh	Lithium-Polymer
Receiver	PATHFINDER MINI	3.7V 1300mAh	Lithium-Polymer
Receiver	PATHFINDER	3.7V 2400mAh	Lithium-Polymer
Transmitter	PATHFINDER, PATHFINDER MINI	3.7V 2400mAh	Lithium-Polymer
Receiver	ARC1200(2)S	7.4V 400mAh	Lithium-Polymer
Receiver	3500(2)NCP, RB1000(2), StB-Hawk, 2600(2)T&B, 4500(2,3,4)EDGE	7.4V 500mAh	Lithium-Polymer
Transmitter	ARC800(2), ARC800 CAMO, ARC1200(2)S	7.4V 600mAh	Lithium-Polymer
Transmitter	2600(2)T&B, 4500(2,3,4)EDGE	7.4V 800mAh	Lithium-Polymer
Transmitter Receiver	3500(2)NCP, RB1000(2) BALL TRAINER PRO	7.4V 1000mAh	Lithium-Polymer
Receiver	600(2)M, 400NCP	3.6V 1.26wh	Nickel-MH
Transmitter	600(2)M, 400NCP	4.8V 400mAh	Nickel-MH
Receiver	RR DELUXE	7.2V 750mAh	Nickel-MH
Transmitter	RR DELUXE	7.2V 400mAh	Nickel-MH



## Elektro- und Elektronikgeräte Informationen für private Haushalte Hersteller-Informationen gemäß § 18 Abs. 4 ElektroG

1. Besitzer von Altgeräten haben diese einer vom unsortierten Siedlungsabfall getrennten Erfassung zuzuführen. Altgeräte gehören insbesondere nicht in den Hausmüll, sondern in spezielle Sammel- und Rückgabesysteme.
2. Besitzer von Altgeräten haben Altbatterien und Akkumulatoren, die nicht vom Altgerät umschlossen sind, im Regelfall vor der Abgabe an einer Erfassungsstelle vom Altgerät zu trennen. Dies gilt nicht, soweit Altgeräte einer Vorbereitung zur Wiederverwendung unter Beteiligung eines öffentlich-rechtlichen Entsorgungsträgers zugeführt werden.
3. Besitzer von Altgeräten aus privaten Haushalten können diese bei den Sammelstellen der öffentlich-rechtlichen Entsorgungsträger oder bei den von Herstellern oder Vertreibern im Sinne des ElektroG eingerichteten Rücknahmestellen unentgeltlich abgeben.
4. Rücknahmepflichtig sind Geschäfte mit einer Verkaufsfläche von mindestens 400 m<sup>2</sup> für Elektro- und Elektronikgeräte sowie diejenigen Lebensmittelgeschäfte mit einer Gesamtverkaufsfläche von mindestens 800 m<sup>2</sup>, die mehrmals pro Jahr oder dauerhaft Elektro- und Elektronikgeräte anbieten und auf dem Markt bereitstellen. Dies gilt auch bei Vertrieb unter Verwendung von Fernkommunikationsmitteln, wenn die Lager- und Versandflächen für Elektro- und Elektronikgeräte mindestens 400 m<sup>2</sup> betragen oder die gesamten Lager- und Versandflächen mindestens 800 m<sup>2</sup> betragen. Vertreiber haben die Rücknahme grundsätzlich durch geeignete Rückgabemöglichkeiten in zumutbarer Entfernung zum jeweiligen Endnutzer zu gewährleisten. Die Möglichkeit der unentgeltlichen Rückgabe eines Altgerätes besteht bei rücknahmepflichtigen Vertreibern unter anderem dann,

wenn ein neues gleichartiges Gerät, das im Wesentlichen die gleichen Funktionen erfüllt, an einen Endnutzer abgegeben wird. Außerdem besteht die Möglichkeit der unentgeltlichen Rückgabe bei Sammelstellen der Vertreter unabhängig vom Kauf eines neuen Gerätes für solche Altgeräte, die in keiner äußeren Abmessung größer als 25 Zentimeter sind, und zwar beschränkt auf drei Altgeräte pro Geräteart.

5. Datenschutz-Hinweis: Bitte beachten Sie, dass für die Löschung personenbezogener Daten auf zu entsorgenden Altgeräten der Endnutzer selbst verantwortlich ist.
6. Das auf Elektro- und Elektronikgeräten regelmäßig abgebildete Symbol einer durchgestrichenen Mülltonne weist darauf hin, dass das jeweilige Gerät am Ende seiner Lebensdauer getrennt vom unsortierten Siedlungsabfall zu erfassen ist.



La présence de ce symbole sur le produit ou son emballage signifie que le produit ne doit pas être éliminé avec les déchets ménagers. Il est de votre responsabilité d'apporter vos équipements usagés dans un point de collecte prévu pour le recyclage d'équipements électriques et électroniques usagés. Dans la plupart des Etats membres de l'UE, les consommateurs peuvent également rapporter l'équipement usagé au distributeur lors de l'achat d'un équipement neuf (base 1 contre 1). Les grands distributeurs (dont l'espace dédié à la vente d'équipement électronique dépasse 400 m<sup>2</sup>) doivent également permettre aux consommateurs de rapporter des produits DEEE de petite taille (dont aucun côté extérieur ne dépasse 25 cm) sans obligation d'achat d'un nouveau produit (base 1 contre 0). Pour en savoir plus sur les centres de collecte et de recyclage des appareils usagés, contactez les autorités locales dans votre pays.



## EN



This symbol on the product or on its packaging indicates that this product must not be disposed of with your household waste. It is your responsibility to dispose of your waste equipment by handing it over to an authorized collection point for the recycling of waste electrical and electronic equipment. In most EU Member States, consumers may also return waste equipment to the retailer when buying a new one (1 for 1 basis). Large retailers (with sales area dedicated to selling electronic equipment over 400m<sup>2</sup>) should also allow consumers to return small WEEE (products having no external side bigger than 25cm) without a new product purchase obligation (1 for 0 basis). For more information about where you can drop off your waste equipment for recycling, please contact your local authorities.

## ES



Este símbolo en el producto o en su envase indica que no debe eliminarse junto con los demás residuos domésticos. El usuario se deberá responsabilizar de reciclar el equipo usado transportándolo a un punto de recogida autorizado para el reciclaje de residuos de aparatos eléctricos y electrónicos. En la mayoría de los Estados miembros de la UE, los consumidores pueden devolver los residuos al minorista a cambio de adquirir uno nuevo (1 por 1). Los grandes minoristas (con áreas dedicadas a la venta de equipos electrónicos cuya superficie supere 400 m<sup>2</sup>) deben permitir a los clientes devolver pequeños residuos (productos que no tengan ningún lado exterior más largo de 25 cm) sin obligación de adquirir un producto nuevo (1 por 0). Para obtener más información sobre los puntos de recogida de residuos eléctricos y electrónicos para su reciclaje, póngase en contacto con su ayuntamiento.

## IT



Questo simbolo presente sul prodotto o sulla sua confezione indica che il prodotto non può essere smaltito insieme ai rifiuti domestici. L'utente è responsabile di smaltire le apparecchiature dismesse consegnandole al punto di raccolta autorizzato per il riciclaggio dei rifiuti elettrici ed elettronici. Nella maggior parte degli Stati membri dell'UE, i consumatori possono anche restituire le apparecchiature dismesse al rivenditore in cambio dell'acquisto di un nuovo prodotto (1 per 1). I rivenditori più grandi, con area dedicata alla vendita delle apparecchiature elettroniche superiore a 400 m<sup>2</sup>, devono inoltre permettere ai consumatori di restituire prodotti RAEE di piccole dimensioni (con lato esterno non superiore a 25 cm) senza costringere l'utente ad acquistare un nuovo prodotto (1 per 0). Per ulteriori informazioni su dove depositare le apparecchiature destinate al riciclaggio, contattare gli enti della propria città.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: [www.electric-collars.com](http://www.electric-collars.com)  
Changes to technical parameters, properties and printing errors reserved.

**Service center and distribution**

Reedog, sro  
Sedmidomky 459/8 101  
00 Prague 10  
Phone: +1 646 980 4569  
Email: [info@electric-collars.eu](mailto:info@electric-collars.eu)

reedog