



Petwant PWS-162B

Pet Fountain

Before we start: Care Instructions

In order to provide your pet with fresh and clean water continuously, please remember these three simple tasks:

Refill often.

Keep the water level. The pump is designed to work in water at least one inch deep. If the pump dries, it may malfunction.

Clean your pump and your fountain.

Take your pump and fountain apart to clean with soap and water every two to four weeks. Be careful not to get soap in the filters, as it will not rinse out.

Replace your filters.

Replace the carbon filter every four weeks when you clean your fountain.
Replace the foam filter every two months.

What you have:

2 Put back the cover.

Put back the cover to form a seal.

3 Insert the water faucet.

Insert the water faucet.

Connect the power adaptor.

Use Instructions

Clean the pump and fountain every two weeks.

Take off the pump cover and rotor. Use the brush to clean the parts with water.

Cautions

1. Be sure to shut down and disconnect the power supply for safety when the equipment is not in use.
2. This product is for indoor use only.
3. The power adapter and wire plug must not be flooded during cleaning.
4. This product is not allowed to run without water (models with automatic shutdown function without water can be ignored)
5. Please disconnect the power supply before maintaining and cleaning the machine.

Keep health and happiness flowing!

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties, and printing errors are reserved.

Service center and distribution

Reedog s.r.o.

Sedmidomky 459/8

Praha 10 - Michle, 101 00

Phone: +1 646 980 4569

Email: info@reedog.eu

