



Užívateľská príručka
Užívateľská príručka

SEDONA-PG-CA-17


SEDONA-PG-UK-17

SEDONA-PG-AU-17

SEDONA-PG-EU-19

Sedona - Fontána pre zvieratá

Sedona - Fontána pre zvieratá

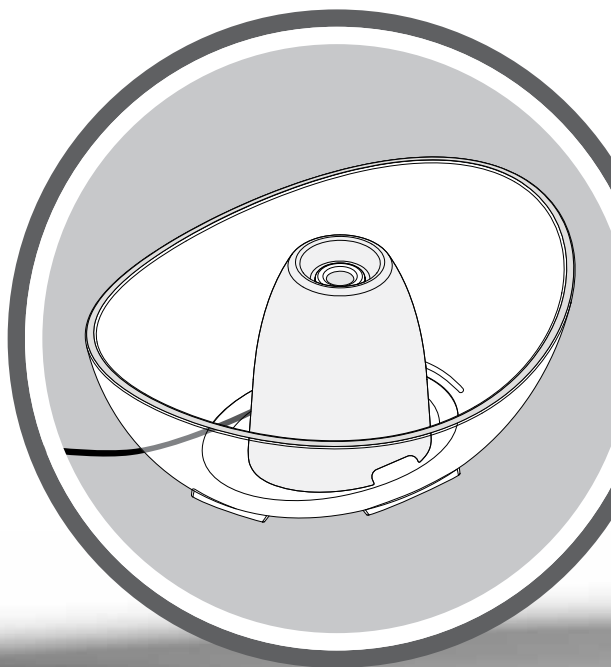

protect. teach. love.®

Prosíme o prečítanie si celej tejto príručky predtým než začnete
Prosíme o prečítanie si celej tejto príručky predtým než začnete

Radio Systems Corporation, Radio Systems PetSafe Europe Ltd., Radio Systems Australia Pty Ltd. A každá iná pobočka alebo značka Radio Systems Corporation bude ďalej nazývaná kolektívne ako "My".

DÔLEŽITÉ BEZPEČNOSTNÉ INFORMÁCIE

Vysvetlenie upozorňujúcich slov a symbolov v tejto príručke

⚠ WARNING

VAROVANIE Označuje hazardnú situáciu, ktorej ak sa nevyhnete, môže spôsobiť smrť alebo zranenie.

CAUTION

OPATRNOSŤ Použité bez symbolu bezpečnostného upozornenia, označuje nebezpečnú situáciu, ktorej ak sa nevyhnete, môže spôsobiť zranenie vášho domáceho miláčika.

NOTICE

VŠIMNITE SI tento symbol označuje praktiky bezpečného používania, nesúvisí so zranením osôb.

⚠ WARNING

Pri používaní elektronických zariadení, by ste vždy mali dodržiavať predbežné bezpečnostné opatrenia. Znížite tak riziko požiaru, elektrického šoku a/alebo zranenie osoby:

- Aby ste znížili riziko zranenia, je nevyhnutné dohliadať na deti, vždy keď sú v blízkosti zariadenia keď sa používa alebo keď ho používajú.
- Aby sa predišlo elektrickému šoku, nepokladajte zástrčku ani kábel do vody alebo iných tekutín.
- Nepoužívajte vonku. Nespúšťajte nasucho. IBA PRE POUŽITIE V INTERIÉRI.
- Neodpájajte zariadenie zo zásuvky zatiahnutím za kábel.
- Pre odpojenie, uchopte zástrčku, nie kábel.
- Nepoužívajte žiadne zariadenie, ktoré má poškodený kábel alebo zástrčku, alebo ak nefunguje správne, alebo ak bolo poškodené. Okamžite zavolajte do centra zákazníckeho pre ďalšie inštrukcie.
- Pre prenosné zariadenie – aby sa znížili riziko elektrického šoku, nepokladajte ani neskladujte zariadenie na mieste, z ktorého môže spadnúť do vane alebo umývadla.
- Zariadenie vždy odpojte z elektrickej siete, ak sa nepoužíva, pred nasadením alebo odňatím nejakých častí a pred čistením.
- Zariadenie používajte výhradne pre účely, na ktoré bolo vyrobené.
- Ak sa zástrčka zariadenia dostane do kontaktu s vodou, vypnite prívod elektriny do steny, kde je zariadenie zapojené. Nepokúšajte sa zariadenie odpojiť.
- Prehliadnite zariadenie po inštalácii. Nezapájajte do siete, ak je na káblí alebo zástrčke voda.
- Zariadenie vždy odpojte z elektrickej siete, ak sa nepoužíva, pred nasadením alebo odňatím nejakých častí a pred čistením. Nikdy neodpájajte zariadenie zo zásuvky zatiahnutím za kábel.

CAUTION

- Nedovoľte zvieratám žuť alebo prehltnúť žiadne časti zariadenia. Ak máte obavy ohľadom elektrického kábla, môžete si zakúpiť inštaláciu trubice (ochranná trubica z tvrdého plastu) v ľubovoľnom železiarstve alebo domácich potrebách.
- Plastové časti fontány neobsahujú BPA (BPA-FREE). Avšak, niektoré zvieratá môžu byť háklivé na plastové misky na jedlo a vodu. Ak váš miláčik vykazuje znaky alergickej reakcie na plast, prestaňte používať zariadenie a navštívte veterinára.

NOTICE

- Zariadenie je navrhnuté na nepretržité používanie (vždy zapojené do elektriny), ale musíte udržiavať hladinu vody a zariadenie pravidelne čistiť. Pravidelne kontrolujte fontánu a predídete tak poškodeniu pumpy, pretože voda sa môže minúť alebo vypariť a pumpa by bežala nasucho. Nikdy nezapájajte fontánu do siete ak nie je naplnená dostatočným množstvom vody.
- Nepokúšajte sa opravovať motor čerpadla svojpomocne.
- Aby ste sa vyhli situáciám, kde sa kábel alebo zástrčka zamokria, zásuvka v stene by vždy mala byť vyššie ako je fontána.
- Ak potrebujete predlžovací kábel, mali by ste použiť predlžovací kábel s vhodnými technickými parametrami.
- Spotreba elektriny tohto zariadenia je 2.5 wattov.
- Použitie prípojok alebo prídavných zariadení, ktoré nie sú odporúčané alebo predávané výrobcom, môže byť nebezpečné. Nemodifikujte zariadenie.
- Nemontujte ani neskladujte zariadenie na miestach, kde by bolo vystavené počasiu alebo teplotám nižším ako 4.5°C.
- Prečítajte si všetky dôležité upozornenia na zariadení a balení.
- Nikdy neumývajte filtre mydlovou vodou, čiastky mydla by presiakli do filtrov a nebolo by možné ich vybrať. Vyplachujte filtre iba vodou.
- Používajte iba autorizované náhradné filtre značky PetSafe®. Ak použijete neautorizované filtre, môžete zrušiť záruku.

USCHOVAJTE SI TIETO INŠTRUKCIE

Ďakujeme vám, že ste si vybrali značku PetSafe®. Vy a váš domáci miláčik si zaslúžite spolupatričnosť, ktorá zahŕňa nezabudnuteľné momenty a vzájomné porozumenie. Naše produkty a tréningové pomôcky podporujú vzťah medzi domácimi miláčikmi a ich majiteľmi.

Ak máte akékoľvek otázky o našich produktoch alebo tréningu vášho psa, prosím navštívte našu stránku www.petsafe.net alebo kontaktujte centrum zákazníckeho servisu. Pre zoznam telefónnych čísel navštívte www.petsafe.net.

Aby vás záruka čo najviac ochránila, registrujte prosím váš produkt do 30 dní na www.petsafe.net. Registráciou a uschovaním účtenky, si užijete plnú záruku produktu a ak by ste niekedy potrebovali zavolať zákaznícky servis, budeme vám schopní pomôcť rýchlejšie. Najdôležitejšie, PetSafe® nikdy neodovzdá ani nepredá vaše osobné informácie. Kompletné informácie o záruke sú dostupné online na www.petsafe.net.


Obsah

Komponenty	5
Vlastnosti	5
Kľúčové definície	6
Zloženie fontány	6
Nastavenie a pridanie vody	8
Rozloženie a čistenie fontány	9
Údržba čerpadla	11
Ako znovu zložiť fontánu	12
Fontána a vaše prostredie	13
Všeobecné rady	13
Riešenie problémov	14
Záruka	15
Dôležité rady o recyklácii	17
Súlad	17
Podmienky použitia a limitovaná záruka.	17


Komponenty

SK

CZ





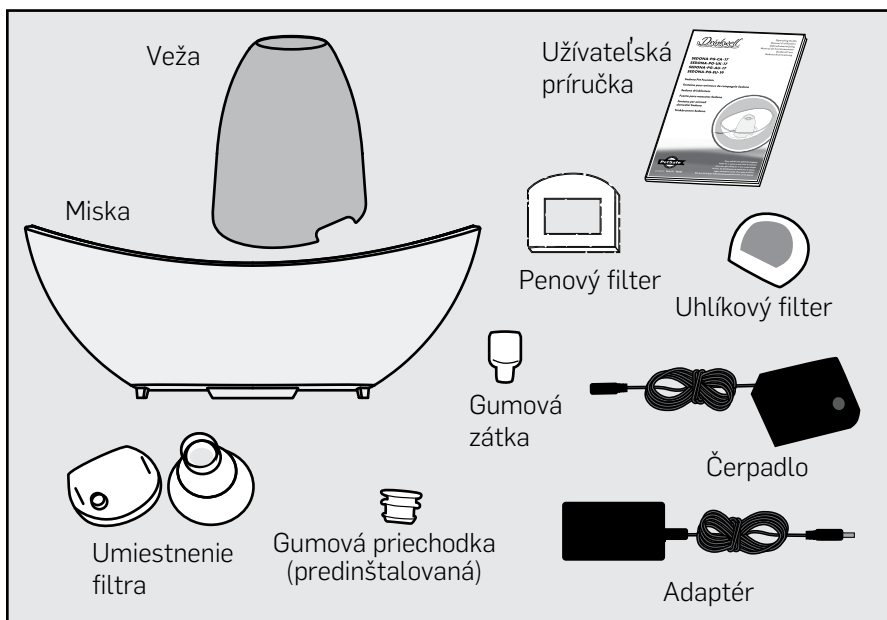


Vlastnosti

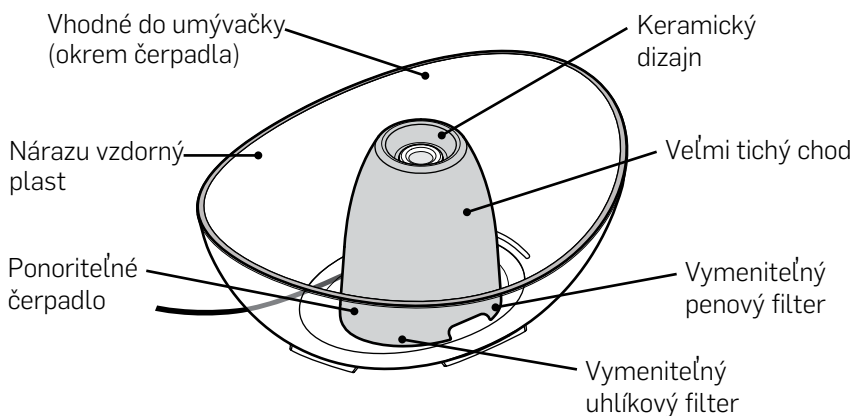


Kapacita vody: 3L
Nízko napätový (12V) systém

4. Position the bowl so that the raised post should be to the right of the square indentation (**Fig. 2**). Place the Pump inside the square indentation so the Pump outflow, the circular opening on the top of the Pump, is positioned in the bottom left corner of the square (**Fig. 3**).
5. Press down on the Pump to engage the suction cups. Once the Pump is securely in place, feed the in-line plug of the electrical power cord over and through the raised post and out the notch on the base of the Bowl (**Fig. 4**). There are four notches to choose from.
6. Remove the extra slack from the electrical power cord and insert the Rubber Cap into the raised post. Make sure the cord channel on the Rubber Cap is aligned with the electrical power cord, then insert your finger into the Rubber Cap and push all the way down (**Fig. 5**).
7. Fold the top of the Rubber Cap over the raised post to seal off the Bowl (**Fig. 6**).
8. Rinse the Charcoal Filter thoroughly under cool water before placing it into the Filter Housing. This will remove any loose charcoal dust, which is harmless. A small amount of charcoal dust may be released for the life of the filter. This is normal and is not harmful to your pet.

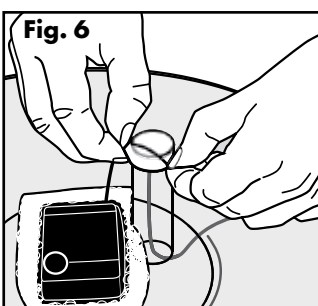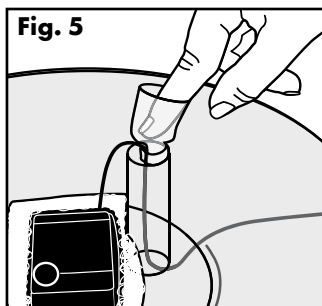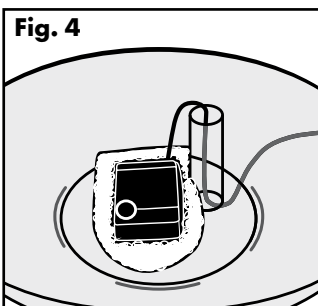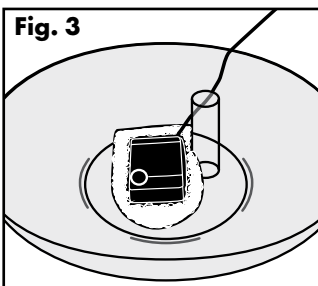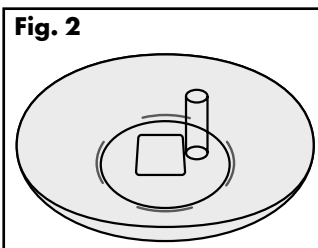


9. Detach the lid from the base of the Filter Housing. Once rinsed off, place the Charcoal Filter inside the base of the Filter Housing with the larger side of the filter facing down. The filter will only fit inside the base of the Filter Housing one way. If it does not fit, flip it over (**Fig. 7**).


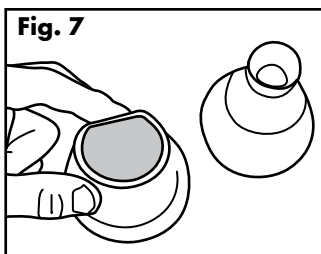


10. Attach the lid to the base of the Filter Housing. Press down until you hear it snap in place.

11. Attach the Filter Housing to the Pump by inserting the round notch under the base into the circular opening on top of the Pump (**Fig. 8**). The opening on top of the Filter Housing should be right next to the sealed raised post (**Fig. 9**).

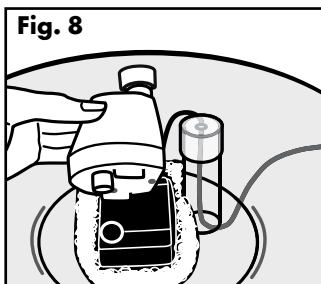

12. Place the ceramic Tower inside the Bowl. The Rubber Grommet will create a seal between the Filter Housing and the Tower. Carefully lower the Tower until it rests flat (**Fig. 10**).

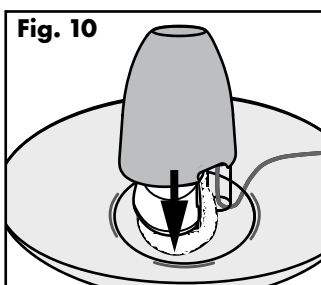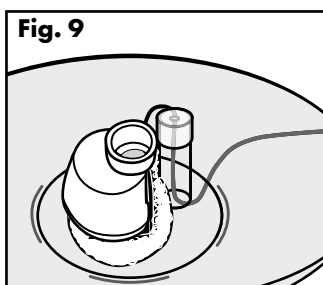

Set Up and Add Water

- Place the Pet Fountain in desired location. Do not pick up a full fountain by the Tower piece. To properly pick up the Pet Fountain, use both hands and grip the sidewalls of the Bowl and lift up.
- Fill the Pet Fountain by pouring water directly into the Bowl. Leave at least 1.27 cm of space between the water level and the rim of the Bowl to help control spills and splashing. To protect your floor always use a protective mat, such as a towel or water resistant placemat. This will help protect your floor from splashing or spills caused by your pet.
- Before you plug in the Pet Fountain, make sure the electrical power cord, the adaptor and your hands are completely dry. Connect the in-line plug and make sure no silver is showing, then plug the adaptor into a wall outlet.
- Add water to the Bowl as needed. Never let the water level fall below 2.54 cm from the base of the Bowl or you might risk Pump failure. Replacement Pumps are sold separately by contacting the Customer Care Centre.

Fountain Disassembly and Cleaning

SK

CZ

NOTICE

- Pet Fountain must be cleaned to continue working normally.
- Never wash the filters with soapy water, as the soap residue will seep into the filters and cannot be removed. Only rinse the filters with water.
- Use only PetSafe® brand authorised replacement filters. If unauthorised filters are used it may void the warranty.

Note: Use a soft cloth or sponge to prevent scratching the Bowl.

CHARCOAL FILTER: Replace Charcoal Filter every two to four weeks.

- Always rinse the Charcoal Filter prior to use.
- A small amount of charcoal dust may be released for the life of the filter, this is normal and is not harmful to your pet.
- Replace filters more frequently when using the fountain for multiple pets or pets that produce a lot of saliva.

FOAM FILTER: Replace the Foam Filter every four to six weeks.

If you do not intend to replace the filter at the time of cleaning, rinse the Foam Filter thoroughly with fresh water.

PET FOUNTAIN: Clean the Pet Fountain once a week.

1. Unplug the Pet Fountain and disconnect the in-line plug (**Fig. 11**).
2. Carefully lift the Tower and allow the water to slowly pour back into the Bowl. Once all the water has been emptied into the Bowl, set the Tower aside for cleaning (**Fig. 12**).
3. Take the Tower and turn upside down to remove the Rubber Grommet. Grab the Rubber Grommet from inside and pull straight out, set aside for cleaning (**Fig. 13**).

Fig. 11

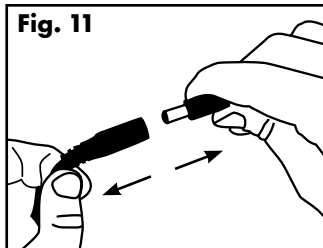


Fig. 12



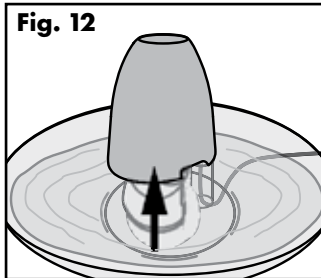



Fig. 13

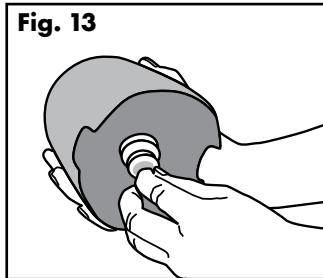

4. Remove the Filter Housing from the Pump by lifting straight up (**Fig. 14**).
5. Open the Filter Housing and remove the Charcoal Filter from inside and dispose. Set the lid and base of the Filter Housing aside for cleaning.
6. Remove the Rubber Cap affixed to the raised post by inserting a finger under the lip and pull straight up to remove (**Fig. 15**).

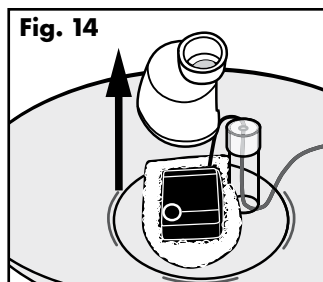

7. While securely holding the electrical power cord and the bottom of the Bowl with both hands, pour out the remaining water inside the Bowl into a sink.

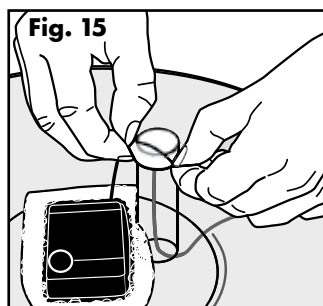

8. With the in-line plug disconnected and water removed, grab the Pump and lift straight up to disengage the suction cups. Continue pulling the Pump's electrical power cord up and out through the raised post in the center of the Bowl. Once the Pump is completely removed from the Bowl, separate the Foam Filter and set aside for proper cleaning.

9. Once the Pet Fountain is completely disassembled, you will have: the Bowl, Tower, two rubber pieces, the Filter Housing, Foam Filter and the Pump.

10. Rinse the Foam Filter with water only or replace it with a new one.


11. See the "Pump Maintenance" section of this Operating Guide for detailed instructions on how to properly clean your Pump. **DO NOT PLACE PUMP IN DISHWASHER!**

12. Hand wash all other fountain parts with warm water and soap. Be sure to rinse thoroughly with fresh water. You can also put the Pet Fountain in the top rack of the dishwasher. If possible, it is recommended that you turn down the heat of the water inside the dishwasher.





13. If you have trouble reaching certain spots or hard-to-reach areas, try using a cotton swab or purchase the Drinkwell® Cleaning Kit, a 3-Piece Brush Kit. To purchase a Cleaning Kit, visit our website at www.petsafe.net to locate a retailer near you or contact the Customer Care Centre.

Pump Maintenance

Important: Cleaning the Pump is essential to the longevity of the Pet Fountain, as well as the cleanliness of the water. Clean the Pump every two weeks. Warranty may be voided if the Pump's motor is not cleaned regularly.





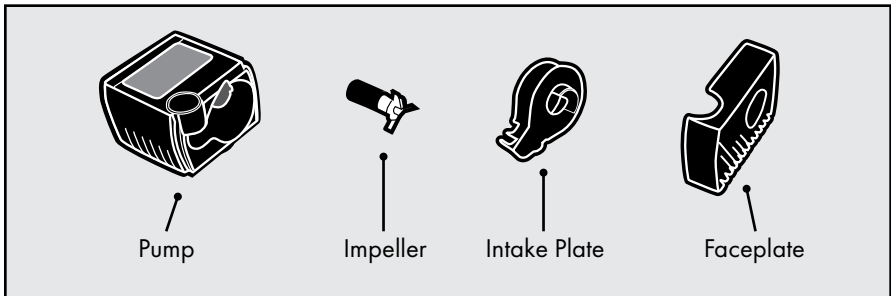


1. Remove Pump from the Pet Fountain as explained in the "Fountain Disassembly and Cleaning" section.
2. Remove the Faceplate by using your thumb and forefinger to gently squeeze on both sides of the Faceplate and pull off. It may be necessary to insert a fingernail into the seam of the Faceplate to pry it off (**Fig. 16**).
3. Next, remove the Intake Plate by placing your fingernail underneath the small lip located on the narrow side of teardrop-shaped Intake Plate (**Fig. 17**) and pull out to remove.
4. Once the Intake Plate is removed, remove the Impeller (white, 3-bladed propeller). The Impeller is held in place by a magnet, simply use a fingernail to get underneath the blade and lift out (**Fig. 18**).
5. Once the Pump is completely disassembled, you can clean the parts with warm water and soap. Use a cotton swab or the "motor brush" from the Drinkwell® Cleaning Kit to clean inside the Pump's motor cavity and remove any build-up (**Fig. 19**). For added disinfecting and hard water removal, clean the Pump's motor with a diluted white vinegar solution (20% white vinegar and 80% water).
6. Once the parts are clean you can reassemble the Pump for use.
 - a) Replace the Impeller.
 - b) Replace the Intake Plate.
 - c) Replace the Faceplate.

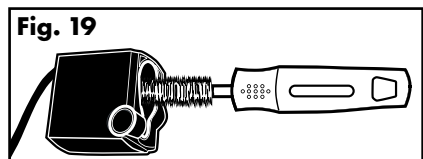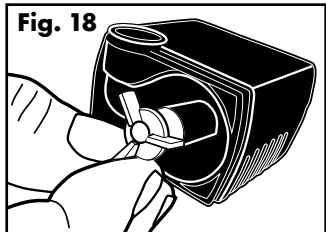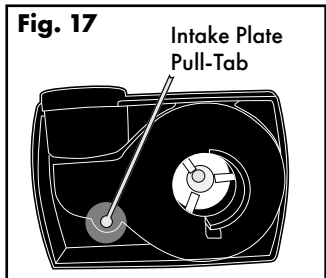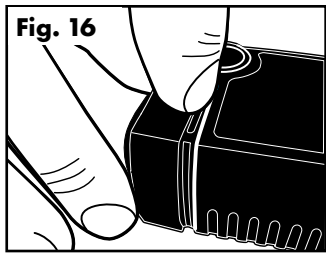


Fountain Reassembly

1. Place the Foam Filter around the Pump and make sure the electrical power cord rests on top (**Fig. 20**).
2. Position the bowl so that the raised post should be to the right of the square indentation. Place the Pump inside the square indentation so the Pump outflow, the circular opening on the top of the Pump, is positioned in the bottom left corner of the square (**Fig. 21**).
3. Press down on the Pump to engage the suction cups. Once the Pump is securely in place, feed the in-line plug of the electrical power cord over and through the raised post and out the notch on the base of the Bowl. (**Fig. 22**) There are four notches to choose from.
4. Remove the extra slack from the electrical power cord and insert the Rubber Cap into the raised post. Make sure the cord channel on the Rubber Cap is aligned with the electrical power cord, then insert your finger into the Rubber Cap and push all the way down.
5. Fold the top of the Rubber Cap over the raised post to seal off the Bowl (**Fig. 23**).
6. Rinse a new Charcoal Filter thoroughly under cool water before placing it into the Filter Housing. This will remove any loose and excess charcoal dust, which is harmless.
7. Detach the lid from the base of the Filter Housing. Once rinsed off, place the Charcoal Filter inside the base of the Filter Housing with the larger side of the filter facing down. The filter will only fit inside the base of the Filter Housing one way. If it does not fit, flip it over.
8. Attach the lid to the base of the Filter Housing. Press down until you hear it snap in place.
9. Attach the Filter Housing to the Pump by inserting the round notch under the base into the circular opening on top of the Pump. The opening on top of the Filter Housing should be right next to the sealed raised post (**Fig. 24**).

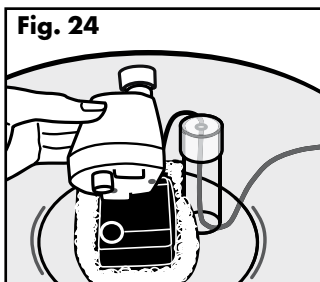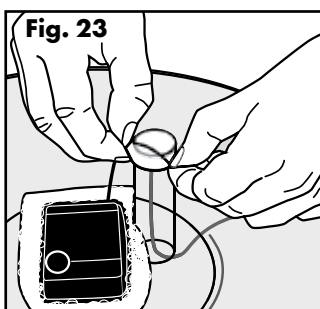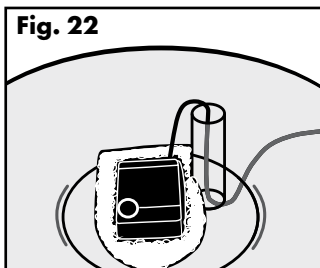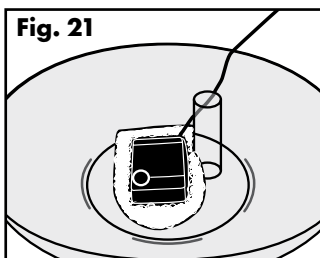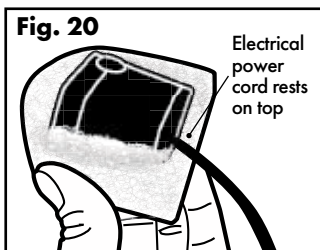


10. Place the ceramic Tower inside the Bowl. The Rubber Grommet will create a seal between the Filter Housing and the Tower. Carefully lower the Tower until it rests flat (**Fig. 25**).

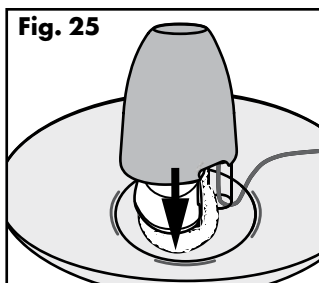

11. Place the Pet Fountain in desired location. Do not pick up a full fountain by the Tower piece. To properly pick up the Pet Fountain, use both hands and grip the sidewalls of the Bowl and lift up.

12. Fill the Pet Fountain by pouring water directly into the Bowl. Leave at least 1.27 cm of space between the water level and the rim of the Bowl to help control spills and splashing. To protect your floor always use a protective mat, such as a towel or water-resistant placemat. This will help protect your floor from splashing or spills caused by your pet.

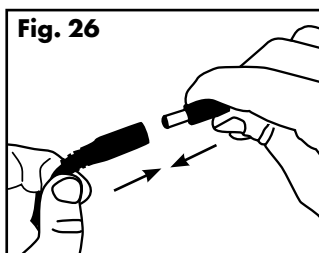

13. Before you plug in the Pet Fountain, make sure the electrical power cord, the adaptor and your hands are completely dry. Connect the in-line plug and make sure no silver is showing, (**Fig. 26**) then plug the adaptor into a wall outlet.

The Pet Fountain and Your Environment

If you live in a humid environment and have problems with mold or algae, soak all fountain parts in a diluted vinegar solution (20% white vinegar and 80% water) for 10 minutes after regular cleaning. Also, pour the diluted vinegar solution into the Pump's motor cavity. If you have hard water, small white mineral deposits may form on or inside the Pump. This can eventually prevent the impeller from turning properly. To avoid replacement or damage to the Pump, please take the following precautions:

- Clean the Pump more frequently.
- Clean the Pump with a diluted vinegar solution weekly.
- Use bottled water instead of tap water.

General Tips

- When being introduced to the Pet Fountain, your pet may be cautious of this new and unusual object. After beginning operation of your Pet Fountain, simply allow your pet to adjust at his or her own pace. Some pets may take several days or longer to begin use, while others will start right away.

- Your pet may prefer that the Pet Fountain be placed away from their normal feeding area.
- Add ice cubes to the Bowl for refreshing, ice-cold running water.

Troubleshooting

The answers to these questions should help you solve most problems you may have with the Pet Fountain. If they do not, please contact our Customer Care Centre.

TROUBLESHOOTING	
PROBLEM	SOLUTION
Pump is not working or the water is not flowing as much as it used to.	<ul style="list-style-type: none"> • Never let the water in the Bowl get below the minimum fill level. This can cause the Pump to overheat and stop functioning. • When refilling the Bowl, make sure to add water before turning the fountain on. • Lack of regular cleaning may result in the Pump becoming clogged with pet hair and food debris. The Pump must be cleaned every 2-4 weeks to ensure proper function. • A video detailing how to properly clean the Pump is available on our website at www.petsafe.net. • Fill the Pet Fountain with water up to the max fill line.
Pet Fountain is loud.	<ul style="list-style-type: none"> • A low humming noise is normal, but it should not be loud. Check the water level. If water level is too low then the Pump will have to work harder causing it to be louder than normal. • Unplug the Pet Fountain for 15 seconds. If the noise does not stop when plugged back in, it's possible that some debris is caught on the Impeller. Remove the Pump and clean the Impeller. Try rubbing a small amount of vegetable oil onto the magnetic pin with a cotton swab to lubricate the Impeller.
There are black particles in the Bowl.	<ul style="list-style-type: none"> • This is loose granulated carbon dust from the filter and is completely harmless for your pet to drink. Rinse the filter in cold water before placing it in the Pet Fountain to prevent this.

The Pet Fountain feels slimy.	<ul style="list-style-type: none"> • If you have multiple pets or dogs using the Pet Fountain, the slimy feeling may be caused by your pet's saliva. Change the water and clean your fountain more frequently to prevent this. • Make sure the Pet Fountain parts are rinsed thoroughly after cleaning the fountain. Soap residue may cause the sliminess.
The adaptor is warm to the touch.	<ul style="list-style-type: none"> • Unplug the Pet Fountain and plug it into a surge protector.
The Pet Fountain is leaking.	<ul style="list-style-type: none"> • Sometimes water around the Pet Fountain is caused by pets drinking. Some pets are prone to spilling. Watch your pet when he drinks to see if this is the cause. If it is, you can purchase a fountain mat or other water-resistant mat to place under the Pet Fountain.
The Pet Fountain seems dirty even after cleaning.	<ul style="list-style-type: none"> • If there is a white chalky substance in the Pet Fountain, your fountain may have a mineral deposit build-up from hard water. To remove these deposits, clean the fountain parts with a 80% water and 20% vinegar solution. Rinse all parts thoroughly afterwards. Use filtered or purified water instead of hard tap water to prevent this.

Warranty

Two Year Non-Transferable Limited Warranty

This Product has the benefit of a limited manufacturer's warranty. Complete details of the warranty applicable to this Product and its terms can be found at www.petsafe.net and/or are available by contacting your local Customer Care Centre.

Europe – Radio Systems PetSafe Europe Ltd., 2nd Floor, Elgee Building, Market Square, Dundalk, Co. Louth, Ireland

Canada – Radio Systems Corporation, 10427 PetSafe Way, Knoxville, TN 37932 USA

Australia/New Zealand – In compliance with the Australian Consumer Law, Warranties Against Defects, effective January 1, 2012, warranty details of this Product are as follows: Radio Systems Australia Pty Ltd. (hereinafter referred to as "Radio Systems") warrants to the original retail purchaser, and not any other purchaser or subsequent owner, that its Product, when subject to normal and proper residential use, will be free from defects in material or workmanship for a period of two (2) years from the purchase date. An "original retail consumer purchaser" is a person or entity who originally purchases the Product, or a gift recipient of a new Product that is unopened and in its original packaging. When serviced by Radio Systems Customer Service, Radio Systems covers labour and parts for the first two years of ownership; after the first

two years, a service or upgrade charge will apply relative to replacement of the Product with new or refurbished items at Radio Systems' sole discretion.

The limited warranty is non-transferable and shall automatically terminate if the original retail consumer purchaser resells the Radio Systems Product or transfers the property on which the Radio Systems Product is installed. This Limited Warranty excludes accidental damage due to dog chews; lightning damage; or neglect, alteration, and misuse. Consumers who purchase products outside of Australia, New Zealand, or from an unauthorised dealer will need to return the Product to the original place of purchase for any warranty issues.

Please note that Radio Systems does not provide refunds, replacements, or upgrades for change of mind, or for any other reason outside of these Warranty terms.

Claims Procedure: Any claim made under this Warranty should be made directly to Radio Systems Australia Pty. Ltd. Customer Care Centre at:

Radio Systems Australia Pty. Ltd.

PO Box 7266, Gold Coast Mail Centre QLD 9726, Australia

Australia Residents: 1800 786 608

New Zealand Residents: 0800 543 054

Email: info@petsafeaustralia.com.au

To file a claim, a proof of purchase must be provided. Without a proof of purchase, Radio Systems will not repair or replace faulty components. Radio Systems requests the Consumer to contact the Radio Systems Customer Care Centre to obtain a Warranty Return number, prior to sending the Product. Failure to do so may delay in the repair or replacement of the Product.

If the Product is deemed to be faulty within 30 days from date of original purchase, Radio Systems will organise for a replacement to be sent in advance of returning the faulty Product. A Post Bag will be included with the replacement Product for the return of the faulty Product. The Product must be returned within 7 days of receiving the replacement. If the Product is deemed to be faulty after 30 days from the date of original purchase, the consumer will be required to return the Product to Radio Systems at the consumer's own expense. Radio Systems will test and replace the faulty unit or its components and return to the consumer free of charge, provided the Product is within its said warranty period. This warranty is in addition to other rights and remedies available to you under the law. Radio Systems goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the good repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should you have any queries or require any further information, please contact our Customer Care Centre on 1800 786 608 (Australia) or 0800 543 054 (New Zealand).



Important Recycling Advice

Please respect the Waste Electrical and Electronic Equipment regulations in your country. This equipment must be recycled. If you no longer require this equipment, do not place it in the normal municipal waste system. Please return it to where it was purchased in order that it can be placed in our recycling system. If this is not possible, please contact the Customer Care Centre for further information.

SK

CZ

Compliance

CE

This equipment has been tested and found to comply with the requirements of the relevant European directives. Before using this equipment outside the EU countries, check with the relevant local authority. Unauthorised changes or modifications to the equipment that are not approved by Radio Systems Corporation may violate EU regulations, could void the user's authority to operate the equipment, and will void the warranty.

IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

ACMA

This device complies with the applicable EMC requirements specified by the ACMA (Australian Communications and Media Authority).

Terms of Use and Limitation of Liability

1. Terms of Use

Use of this Product is subject to your acceptance without modification of the terms, conditions and notices contained herein. Use of this Product implies acceptance of all such terms, conditions and notices. If you do not wish to accept these terms, conditions, and notices, please return the Product, unused, in its original packaging and at your own cost and risk to the relevant Customer Care Centre together with proof of purchase for a full refund.

2. Proper Use

If you are unsure whether this Product is appropriate for your pet, please consult your veterinarian or certified trainer prior to use. Proper use includes, without limitation, reviewing the entire Operating Guide and any specific safety information statements.

3. **No Unlawful or Prohibited Use**

This Product is designed for use with pets only. Using this Product in a way that is not intended could result in violation of Federal, State or local laws.

4. **Limitation of Liability**

In no event shall Radio Systems Corporation or any of its associated companies be liable for (i) any indirect, punitive, incidental, special or consequential damage and/or (ii) any loss or damages whatsoever arising out of or connected with the misuse of this Product. The Purchaser assumes all risks and liability from the use of this Product to the fullest extent permissible by law.

5. **Modification of Terms and Conditions**

Radio Systems Corporation reserves the right to change the terms, conditions and notices governing this Product from time to time. If such changes have been notified to you prior to your use of this Product, they shall be binding on you as if incorporated herein.

PetSafe® products are designed to enhance the relationship between you and your pet. To learn more about our extensive product range which includes Containment Systems, Training Systems, Bark Control, Pet Doors, Health & Wellness, Waste Management and Play & Challenge products, please visit www.petsafe.net.

Les produits PetSafe® sont conçus pour améliorer la relation entre vous et votre animal de compagnie. Pour en savoir plus sur notre vaste gamme de produits, comprenant des systèmes de confinement, de dressage, de contrôle de l'aboiement, des chatières, des produits consacrés à la santé et au bien-être, de gestion des déjections, ainsi qu'au jeu et aux défis, rendez-vous sur notre site www.petsafe.net.

PetSafe®-producten zijn ontworpen om de relatie tussen u en uw huisdier te verbeteren. Bezoek onze website op www.petsafe.net voor meer informatie over onze uitgebreide productreeks die onder meer omheiningssystemen, trainingssystemen, blafbeheersing, kattenluiken, gezondheid en welzijn, afvalbeheersing en producten voor spel en uitdaging omvat.

Los productos PetSafe® están diseñados para mejorar la relación entre usted y su mascota. Para saber más acerca de nuestra amplia gama de productos, que incluyen limitadores de zona, sistemas de adiestramiento, control de ladridos, puertas para mascotas, salud y bienestar, gestión de residuos y productos de juego y reto, visite www.petsafe.net.

I prodotti PetSafe® sono progettati per migliorare la qualità della relazione tra voi e il vostro cane. Per ulteriori informazioni sulla nostra estesa gamma di prodotti comprendente sistemi antifuga, soluzioni per l'addestramento, controllo dell'abbaio, porte per animali domestici, i prodotti della linea salute e benessere, gestione dei rifiuti e gioco e prova, visitare: www.petsafe.net.

PetSafe® Produkte sind darauf ausgelegt, die Beziehung zwischen Ihnen und Ihrem Haustier zu verbessern. Um mehr über unsere breite Produktpalette zu erfahren, die Rückhaltesysteme, Trainingssysteme, Bellkontrolle, Haustiertüren, Gesundheit & Wellness, Haustiertoiletten und Sport und Spiel umfasst, besuchen Sie bitte uns auf www.petsafe.net.

Radio Systems Corporation
10427 PetSafe Way
Knoxville, TN 37932
(865) 777-5404

Radio Systems PetSafe Europe Ltd.
2nd Floor, Elgee Building, Market Square
Dundalk, Co. Louth, Ireland
+353 (0) 76 892 0427

www.petsafe.net

400-2031-19

©2016 Radio Systems Corporation