

正面

Pet Fountain

Before we start: Care instructions

To keep providing fresh, clean water for your pet, remember these three simple tasks:

Refill often. Keep the water level up. The pump is designed to work in at least one inch of water. The pump can fail if it runs dry.

Clean your pump and your fountain. Take your pump and fountain apart to clean with soap and water every two to four weeks. Be careful not to get soap in the filters, as it will not rinse out. The plastic filter housing, stainless bowl, and stainless tower are dishwasher safe.

Replace your filters. Replace the carbon filter every four weeks when you clean your fountain. Replace the foam filter every two months.

What you have:

Setup instructions

1 Install the foam filter and the pump:

Rinse charcoal filter in running water to help remove any excess charcoal dust.

Assemble the filter holder on the pump, place the charcoal filter at the side of the filter holder. Place the foam filter surrounds the pump and the charcoal filter.

背面

2 Install the filter / Pump in the bowl :

Insert the pump into the foam filter and set both down into the square inside the bowl. Press down so the suction cups attach.

Feed the cord down into the tube and out between the feet on the bowl's base.

3 Install the rubber cap and the tower:

Insert the silicone cap and fold its top edge down over the top of the tube. This holds the cord in place and prevents leaks.

Set the tower down over the filter housing and press down on the silicone gasket to form a seal. Connect the power adaptor.

Use instructions

Place the fountain where your pet will use it. Fill the bowl with water, leaving a half inch of space between the water and the rim. Make sure your hands, the cord and the power adaptor are dry, then plug the fountain into an outlet.

Keep health and happiness flowing!

To extend product life, please clean the pump every 2 weeks.

1. Remove the Pump Cover
2. Remove the Impeller cap by placing your fingernail underneath the small lip located.
3. Remove the Impeller and clean the parts with soap and warm water.

Cautions

1. Be sure to shut down and disconnect the power supply for safety when the equipment is not in use.
2. This product is for indoor use only.
3. The power adapter and wire plug must not be flooded during cleaning.
4. This product is not allowed to run without water (can be ignored for models with the function of outage automatically without water).
5. Please disconnect the power supply before maintaining and cleaning the machine.