


Fresco Mini Plus Fountain

**User Manual • Uživatelský manuál •
Užívateľský manuál • Használati utasítás •
Benutzerhandbuch**

Meet your Smart Fountain

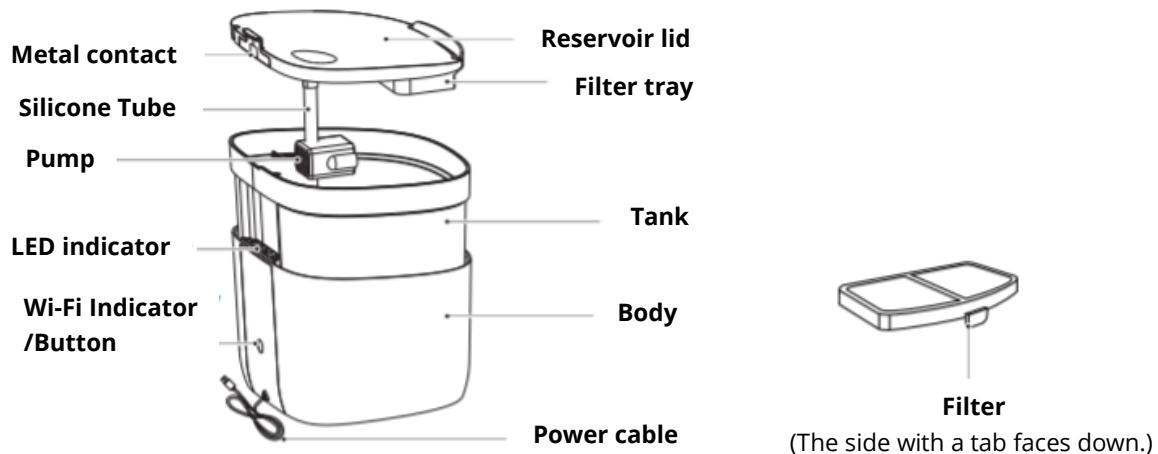

Operations

1) Clean up

Clean the tank and reservoir lid. Do not flush the metal contacts directly or soak in the water. After rinsing the filter, soak it in clean water for 5 minutes! Clean the body using a dry cloth.



2) Fill up


Pour water into the tank. Do not exceed the max water level.

*The first time after fill-up, the pump will automatically extract the air before it pumps water. In this process, the water flow will gradually increase to stabilize.



3) Assemble


Please put the tank, reservoir lid and filter the right places according to the illustration.

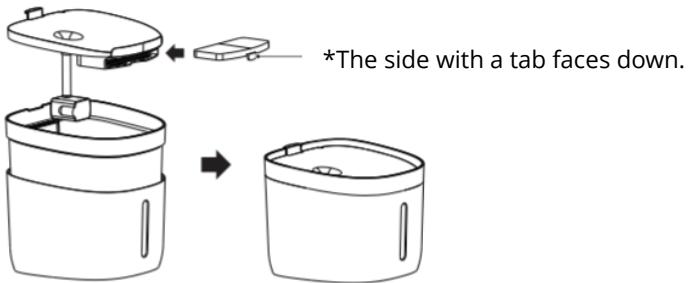

4) Power on

Connect the USB cable to a 5V/1A power supply, then connect A/C adapter to the wall outlet. The fountain starts working, after the indicator flashes in red and blue alternatively once.


*USB Power Adapter is not included.

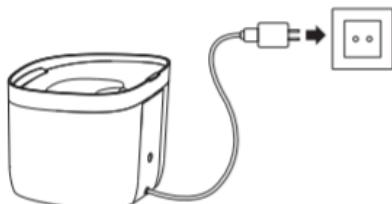

5) Filter replacement

It is recommended to replace the filter every 30 days!

*After rinsing the filter, soak it in clean water for 5 minutes!

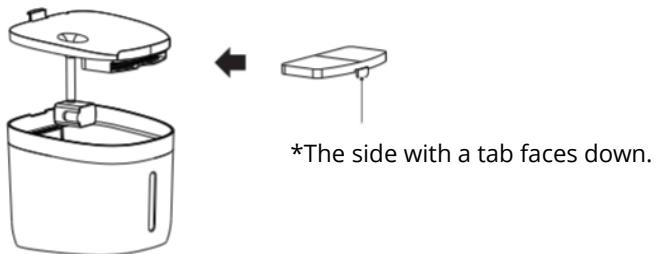

Quick setup

1. **Scan the QR code** on the right and download the Petoneer App, which is available on App Store and Google Play. Click Sign up to get walked through to create your Petoneer account.



2. **Power on** and ensure the Wi-Fi Indicator LED is flashing slowly, reflecting the device is ready for joining the Wi-Fi. Open the Petoneer App and click the '+' button and get walked through the SET-UP steps.

Notice:

1. The fountain doesn't support the 5 GHz Wi-Fi, please make sure your Wi-Fi is 2.4 G.
2. If the Wi-Fi indicator is not blinking fast after power-on, please long press and hold the manual feed button until the indicator blinks quickly.

Troubleshooting

Problem	Possible reason
Blinking red & no water coming out	The reservoir lid is not placed properly, or the metal contacts are not in place.
	Fountain is out of water, please refill.
Red/Blue flashing alternatively & water not steady coming out	Fountain is running out of water, please refill.

LED status

LED Indicator	Steady blue	Working
	Blinking blue	The filter has been used for 30 days! Time to change!
	Blinking red	Low water
	Red/Blue flashing alternatively once	Self-test on power-up
Wi-Fi Indicator	Fast blinking (3 times/second)	Ready for set-up in SmartLink mode
	Slow blinking (1 time/2 seconds)	Ready for set-up in AP mode
	Steady on	Device has properly been setup
Button	Short press when blinking blue	Reset filter
	Long press for 5 seconds	Factory reset (Wi-Fi LED blinking fast)
		Switch between SmartLink and AP modes

Specification

Input:	DC 5 V 1 A	Size:	7.09 x 6.89 x 5.79 inches (180 x 175 x 147 mm)
Capacity:	1.9 L	Weight:	26.46 oz (750 g)
Cable length:	3.9 ft (1.2 m)	Communication:	Wi-Fi (2.4 GHz)

Precautions

- 1. Please use** it in the indoor environment.
- 2. When cleaning** the fountain, **do disconnect** the power supply. Do not flush the metal contacts directly or soak in the water. Clean the body using a dry cloth.
- 3. Do keep** the contacts DRY. If the contacts are dirty, wipe them with a cloth.
- 4. Children must** use the unit under the guidance of an adult.
- 5. Please place** the unit on the flat ground to prevent accidental overturning, causing the fountain to sprinkle or not work correctly.
- 6. Please shield** or organize the power cord well to prevent the pet from biting the cable.
- 7. This fountain** is suitable for cats or small and medium-size dogs.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro
Sedmidomky 459/8 101
00 Prague 10
Phone: +1 646 980 4569
Email: info@electric-collars.eu