

Remote Dog Trainer Operation Guide

Thank you for choosing Trainertec, the best electronic training collar. We want to ensure your pet's safety by providing you with the tools and techniques to successfully train your pet.

Please read the operation guide carefully before start to train your pets .

This instruction is suitable for Remote dog training collar DT400 and DT1200.

Table of Contents

Components.....	2
How the system works.....	2
Main Features	3
Transmitter.....	4
Receiver Collar.....	6
Setting Up Multi-dog System.....	7
Charging	8
Training Guide	9
Troubleshooting Guide.....	10

Components



How the System Works

The Remote Dog Trainer has been proven safe, comfortable, and effective for all pets over 10 pounds. This system assists you in controlling your pet without a leash in a long distance range . At the push of a button, the Remote Transmitter sends a signal, activating the Receiver Collar. Using the Remote Trainer consistently and correctly, many misbehaviors that your pet exhibits can be corrected or any basic obedience commands can be taught


 
Important: The Remote Trainer actual distance depending on the way you hold the Remote Transmitter, the range may vary. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation , Vehicle , Building, transmission from other radio devices, and other factors will affect the range of your Remote Trainer.


Main Features


1. Range in open field: DT1200 is up to 1200 meters, DT400 is up to 400 meters
2. Train up to 3 dogs from the same transmitter
3. 10 levels each of continuous and momentary static shock
4. “Buzz” sound activated with a separate button
5. Two buttons “+” and “-” allow you to set your intensity
6. Dog Selection Button allow you to select your dog
7. Lcd digital display for 10 shock levels and dog ID
8. Memorize shock level in transmitter for different dogs
9. Easy to operation with rubber button
10. Waterproof transmitter and receiver . Dog can swim freely.
11. Rechargeable 3.7V Li-ion battery for transmitter and receiver
12. Strong TPU Collar Strap
13. Led low power indication, red light will flash when battery level is low.
14. Full functional multi-dog training system
15. Around 8 seconds safe static shock protection


Transmitter



“” and “” **buttons**: press these buttons to adjust the shock intensity from 1 to 10 level

“” **button**: it is the power switch; hold this button for 4 seconds to switch on power, then LCD will display the default “A01”. You may change Dog ID by press the relative buttons. If you want to switch off the power, hold this button for 4 seconds to switch off power.

“” **button**: no-stimulation warning buzz

“” **button**: continuous stimulation for around 8 seconds

“” **button**: momentary stimulation

“**A,B,C**” **buttons**: Dog selection button , default is “**A**” . Your transmitter is capable of training up to three dogs with optional receiver collars. You select **A** dog, LCD display dog ID “**A XX**”. If you want to train **B** dog, press “**B**” button , LCD will display “**BXX**” If you want to train **C** dog, press “**C**” button again, LCD will display “**C XX**”. “**XX**” is for showing the shock level .

The transmitter has the memory functions to keep up the suitable shock levels for different dogs.

10 levels of continuous stimulation, 10 levels of momentary stimulation. One tone

NOTE: The red Led light will flash when the battery is low power. Recharge the battery at once.

Receiver Collar


NOTE: CHARGE RECEIVER BEFORE FIRST USE

LED Light

Indicate the working status, Low battery ,Charging status

Contact Prong

Choose short or long prong to match the dog's coat type

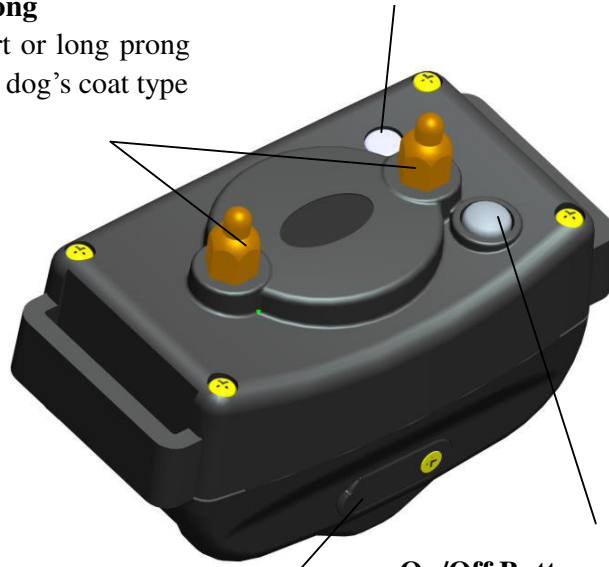

On/Off Button


Press and hold on 4 seconds to turn the collar on. Two confirming tones will sound and the collar green Led light will flash 1 time per 5 seconds.

Press and hold on 4 seconds to turn the collar off. One long tone will sound and the green Led light will stop flashing and off .

Turn the collar off when not in use to conserve battery

DC Jack Cover

Open the Rubber Cover and insert the adaptor plug into DC Jack to charge .

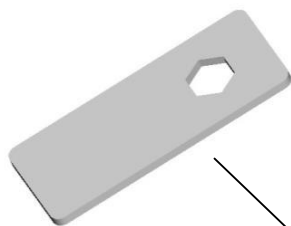

Spanner

Change the Contact Prong basing on the pet's coat type .


Notes: If the Contact Prong is tight , Continue to turn the spanner clockwise , The Contact Prong will be broken . Never turn the contact prong too tightly .


Setting Up Multi-dog System

You can expand your one-dog Remote Trainer into multi-dog Remote Trainer by yourself. Simply purchase extra receiver collar and add them to your system.

1. Match a Receiver collar To add a Receiver collar to your remote dog training system, following the below steps:.

Step 1 : Take out 1 Pcs unmatched receiver collar . Press and hold “ON/OFF” button .after two “beep” sound ,then release , receiver is power on ,Green Led flash frequently .(Note : never open 2 or more unmatched receivers .)


Step 2 : Take out the transmitter that you want to match receiver . Press and hold on “


Step 3 : Press and hold “

Step 4 : Take the transmitter to close the unmatched receiver 50~100mm .

Step 5 : Press and hold on the Dog selection button .If you match “A” dog, Press “A” button ; If you match “B” Dog , Press “B” button ; If you match “C” dog , Press “C” button .After listen to 3 “beep” sound from receiver and see green Led flash slow down , Then release .

Special note: You must confirm that listen to 3 sound “beep” from unmatched receiver and see green Led flash slow down first , then release dog selection button . If you match receiver failure , you need to cancel the failure matched receiver first, then re-match again. .


Step 6 : Press and hold “



Step 7 : Test matched Receiver---Chose dog first, then press “

Note: After matched receiver collar , the dog selection button will return to “A’ default . Before test the matched collar , Please chose dog first .

2. Cancel a matched Receiver Follow up the below steps one by one to cancel the matched Receiver:



Step 1 : Take out 1 Pcs matched receiver . Press and hold “ON/OFF” button .after two “beep” sound , receiver is power on ,Green Led flash 1 time per 5 second .

Step 2 : Press and hold “” button until LCD display occur then release , Transmitter is power on .

Step 3: Press and hold “” button and “” button at the same time ,until the digital number on the LCD display change automatically ,then release. Enter cancel matched receiver mode . The number changes like “08,09,10,11.....”, increasing automatically

Step 4 : Close the Receiver Collar 50~100mm, Press the dog selection Button one time (You can press “A” or “B” or “C” freely, It is same). You can listen to 2 “beep” sound from receiver.

Step 5 : The green Led light of Receiver flash frequently . Congratulate You cancel the matched Receiver successfully .

Step 6 : Press and hold “” button and “” button at the same time again ,until the digital number on the LCD display no change ,then release .Exit the cancel matched receiver mode .

Charging

The transmitter and receiver charge rapidly – about 2 hours are needed.

The transmitter and receiver collar can be charged at same time

Common adaptor for transmitter and receiver charging

To recharge, Open the Rubber Cover first . plug the Adaptor Contact Pin into household AC power outlet and insert the Adaptor Plug into Receiver DC Jack .

The Transmitter and Receiver Collar can be charged by connecting USB Cable and other 5V DC power supply ,such as Cell phone Adaptor , Notebook , Computer .

Do not charge batteries in especially hot areas , far away from a fire.

1. Receiver Collar Charging

The red Led light is on when charging .

The green Led light is on and the red Led light is off when the receiver collar is full charged

The Receiver red Led light will flash when the battery is low power. Recharge the battery at once.

2. Transmitter Charging

The LCD display is “CHA” when charging.

The LCD display is “FUL” when the transmitter is full charged

Important : When stock the products for 4~5 weeks , Please give a full charge for Transmitter and receiver collar.

Training Guide

1. Fitting Collar on the Dog



Place the collar strap in the middle of the dog’s neck. The receiver should be on the underside of his neck although on some dog’s necks the receiver will naturally seek a slightly off-center position. The Rubber Cover should face backwards(toward the dog’s chest).

Tighten the buckle by holding it with two fingers as you pull the strap snug. Remote training collars must be put on a dog quite snugly to ensure consistent contact and reliable stimulation.

Do not put any fingers under the strap as you tighten it.

2. Stimulation

Your Remote Trainer has 10 levels of intensity . So you can find the best level for your dog’s temperament and the type of training your dog. You may also select either continuous or momentary stimulation, depending on your dog’s temperament and your training purpose.

You may press “+” or “-“ button to select suitable shock level, then press the “” button for around 8 seconds continuous stimulation, or press “” button for momentary shock.

Troubleshooting Guide

Problem#1: No stimulation when a transmitter button is pressed.

The receiver has not been activated. The receiver must be turned on otherwise it won't work at all.

The receiver has not been set to your transmitter. Follow the instruction to match.

Problem#2: The Beeper of Receiver doesn't make any sound when the Receiver is turned on.

Press dog selection button to choose correct Dog ID before press transmitter buzz control button.

The Beeper component is loose , send to service center to repair .

Problem#3: The stimulation seems too high, not high enough or no feeling at all

The collar strap is not tight enough. Make sure the contacts points connect the dog's skin well.

The intensity level is not correct. Change the shock level.

The batteries are dead. Recharge as needed.

Problem#4: The receiver light changes color to indicate low battery very quickly

The unit has been left turned on between training session. Make sure the receiver is turned off after use.

You are training in very cold weather.

Problem#5: The Remote Trainer doesn't have range or the range is significantly reduced.

Either you or the dog is shielded by a metal structure. Operate it far away from these structure.

The receiver is on backwards. For best range, position the receiver so that the light face toward the dog's nose.

Radio Interference. Wait a short while then try again, or move to another area.


Problem#6: The receiver seems can't receiver any signal or can not work at all

Check the receiver on/off button, make sure the receiver is turned on.

Check the transmitter , If it is low battery, charge transmitter first .

Cancel the receiver match , then re-match it with transmitter . If receiver can not work too, send back to service center to repair or replace .

Shenzhen Trainertec Electronic Co., Ltd

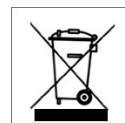

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu