


petwant

 
User Manual

Smart Pet Feeder

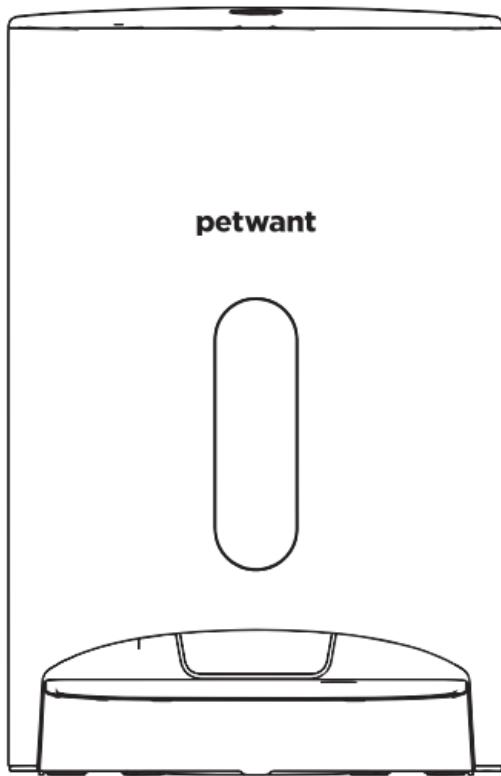

THANKS FOR CHOOSING OUR AUTOMATIC PET FEEDER


Components




1. Main Body



 2. Food Bowl



 3. Power Adapter




4. Desiccant




5. Manual

Features

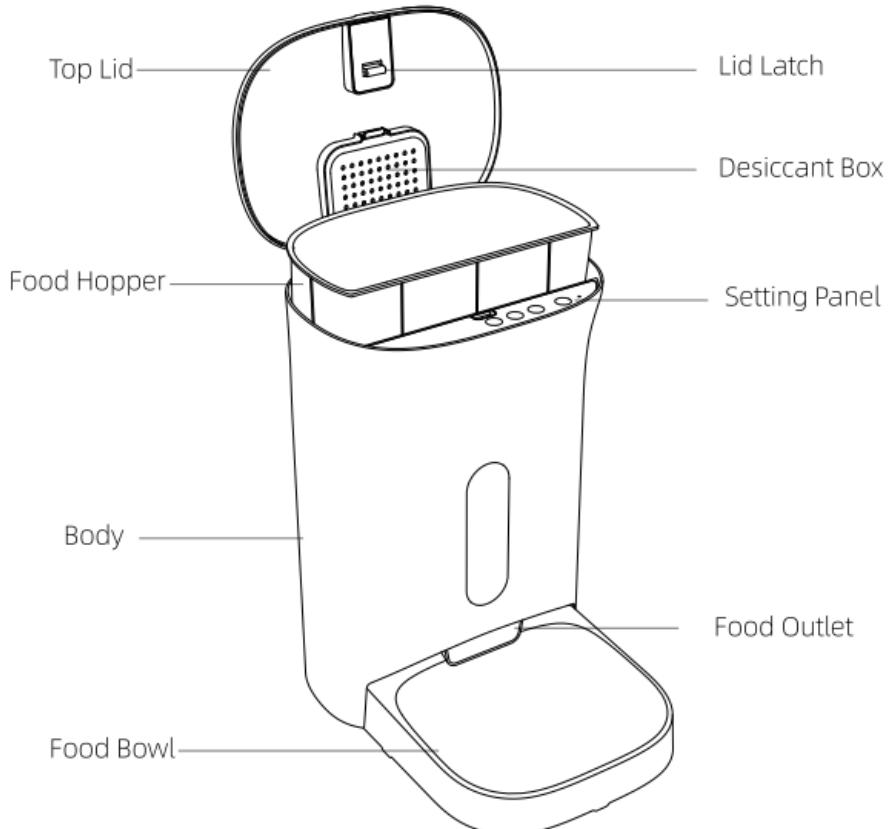

Features

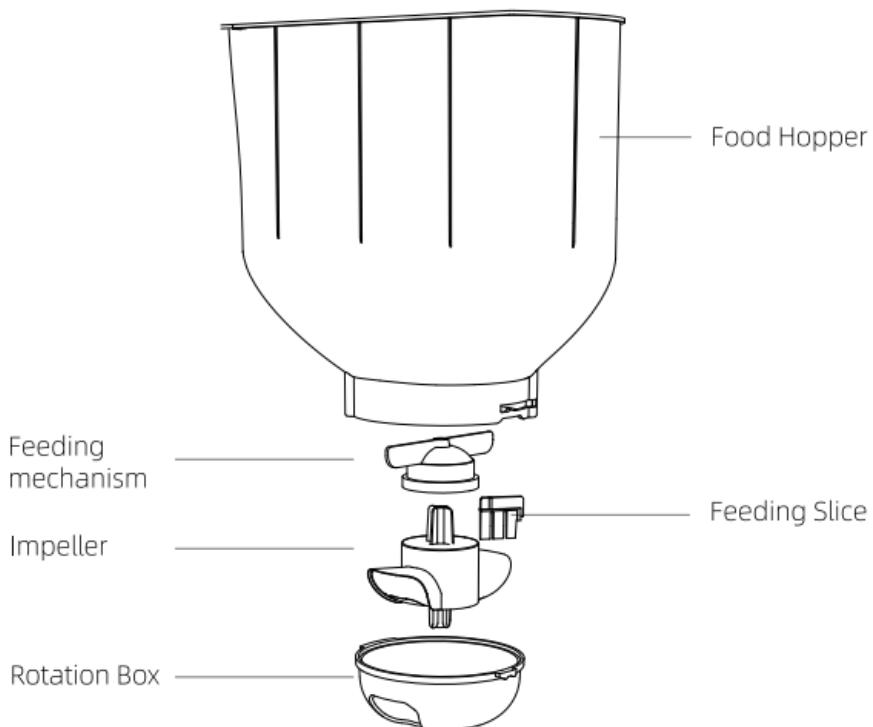

Parameters

| Name | Parameters |
|---------------------|--|
| Product Name | Smart Pet Feeder |
| Product Model | F11-L |
| Dimension | L317mm*W240mm*H370mm (With Food Tray) |
| Color Box Size | L195mm*W245mm*H390mm |
| Material | Food-grade ABS |
| NW | Around 2.6KG |
| Food Appliance | 5~15mm Dry Food |
| Pets Appliance | Cats & Small size dogs |
| Capacity | 4.5L |
| Power | DC 5V1A Adapter / 3 * D Size Batteries |
| Rated Voltage | DC 5V |
| Rated Power | 0.5W |
| Working Temperature | 5°C~50°C |

Setup and Assemble Feeder

Lift The Latch

Hold the latch with your index finger and lift it up to open the lid.

Place Desiccant

Open the desiccant box on top lid, tear off the transparent wrapping paper of the desiccant bag, place it into the box and close it.

Plug in Power Adapter

①Battery power supply: remove the battery cover by releasing the retaining clip, insert 3 good quality alkaline "D" batteries and reinstall the battery cover.

Note: Please use safe and standard alkaline batteries. Do not mix batteries of different specifications and models.

②Power adapter supply: plug in the power adapter and connect the power cable into the L-shaped card slot.

Install Food Bowl


Tilt the base unit back slightly, align the buckle of the food bowl with the base unit to install; the same steps to disassemble.

Fill Pet Food

Open the lid, fill the hopper with a suitable quantity of dry food well in excess of a daily amount. To maintain maximum food freshness, we recommend that a maximum of 10 days food is loaded.


Note: The device only support 5-15mm dry pet food.

Grain Size Self-check:

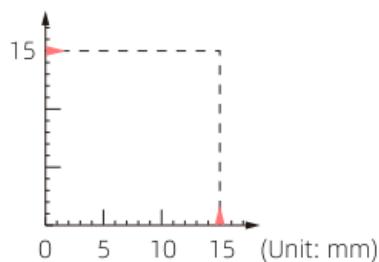

Product Introduction

Display Panel

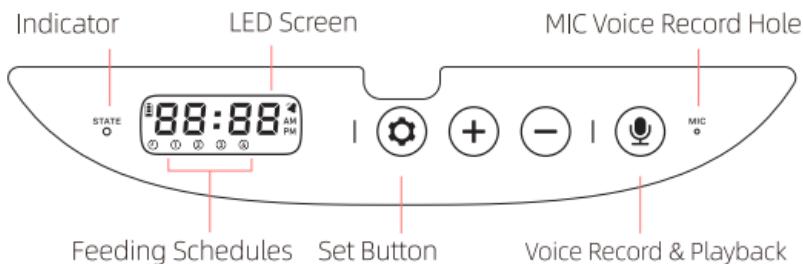

Unlock The Screen

Press "  " button to unlock (Display on) or lock (Display Off) the panel.

Set Clock

- ①Unlock the panel,Press "  " button to enter setting.
- ②Set Time: Press"  "or"  " to select 12H or 24H, Press"  "button to confirm.
- ③Set Clock: Press "  " or "  " to adjust hours, Press "  " button to confirm. Press "  "or"  " to adjust minutes, Press "  " button to confirm.

Program Feeding Schedule

- ①Program Meal Time: "  " icon flash means setting the first meal Press "  "or"  " to adjust hours and minutes, Press "  " button to confirm.
- ②Meal Size: LCD display goes into meal size set mode after setting the meal time " P-00" icon illuminate, press "  "or"  " to select desired meal size, Press "  " button to confirm.
- ③Repeat this process for as meal times portions desired (Up to 4 meals and 10 portions).

Note: Manual Feeding will not reduce or affect future programmed meal times or meal sizes.

Other Settings

Manual Feed

Unlock the panel, press and hold "  " button for 3 seconds to feed one portion around 10g;

Record

Unlock the panel, press and hold "  " to enter recording mode, the "STATE" indicator light is on and record voice toward the "MIC" hole for up to 10 seconds. The recording will be end with released button, then "  " icon will be shown on the display when completed the recording.

Note: If you need to record again, repeat the above steps.

Play Record

Unlock the panel, press "  " to play record once, no play if no record.

Cancel Feeding Schedule

Set the meal time and meal size to be "00:00" and "P-00", then no feed anymore.

Default Meal Settings

Unlock the panel, press "  " and "  " button at the same time for 3 seconds to default meal settings(delete all feeding schedules and record)

Disassemble & Clean

Power Off


Unplug and take out the alkaline batteries.

Clean the Food Hopper


- ①To disassemble, hold both sides of the food bucket and lift upwards.
- ②Disassemble the impeller/ feeding slice and feeding mechanism.
- ③The main body of the feeder is not dish washer-safe. Do not immerse the main body in water. This could damage the internal electronics and cause the batteries to short out, create an electrical shock, or catch fire.
- ④Make sure all parts of the feeder are completely clean and dry before filling with food.

Assemble the Food Hopper

- ①Align food hopper with slots in the main body and press down.

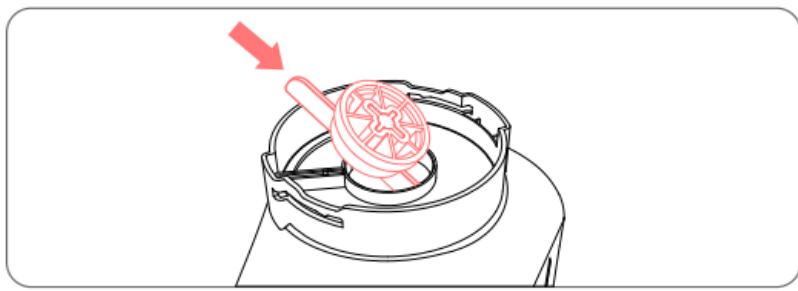

- ②Fix the feeding slice and impellers as the above picture shows. (Please pay attention to " + " shape directions.)
- ③Align the impeller bottom cover with slots and rotate in anticlockwise direction until you hear the crack sound.
- ④Adjust the impellers and make the rubber parts cover the food outlet shows in the picture.

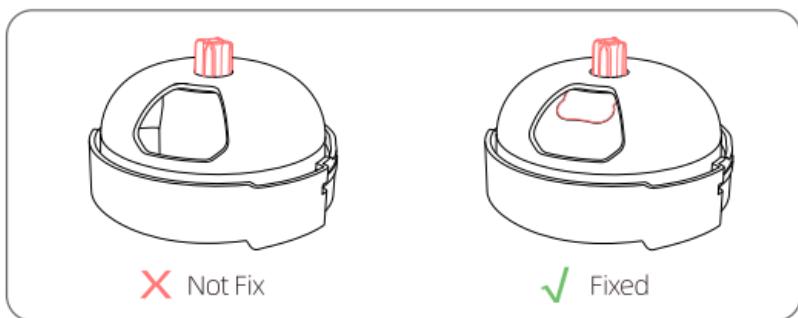

If the impellers are not well fixed, it may cause the device not able to dispense the food.

Clean the Food Bowl

The food bowl is dishwasher-safe once removed from the main body.

Clean the Body

Use the dry soft cloth to wipe it, the body is not waterproof, please do not use wet cloth.

Replace the desiccant pack

Open the desiccant box cover and replace the desiccant pack. It is suggested to replace it every one or two months.

Replace Alkaline Batteries

Unplug and open battery lid at the bottom, then you can replace the batteries.

Replace Alkaline Batteries

Take out the food hopper and empty the food hopper then fill the fresh food and proceed instant feeding once.

Warnings

- ①Please keep the food hopper dry after cleaning it.
- ②Please replace the food on a regular basis if your pets did not eat up.(For time period, please refer to the food packing instruction)
- ③Please clean and maintenance your device on a regular basis to prolong the using period of your pet feeder.

Device Maintenance

Indicator Information

| | | |
|------------|-------------|-------------------|
| STATE ○ | OFF | Unplug |
| | | Stand-by |
| STATE ● | Green Flash | Voice Recording |
| STATE ● | Red Flash | Device Faulty |
| | | Low Battery Power |

LED Screen Icons Information

| | | |
|--|-------|---------------------|
| | OFF | Battery Uninstalled |
| | ON | With Battery Inside |
| | Flash | Low Battery Power |
| | OFF | No Voice Record |
| | ON | Voice Recorded |
| | FLASH | Timer Setting |
| | ON | Meal ON |
| | OFF | Meal OFF |
| | FLASH | Next Meal |

FAQ

| What happened to your device | How to check by yourself | How to solve it |
|-------------------------------|--|---|
| No display on LED Screen | Not plug or battery inside | Plug in or install batteries |
| Unable to fix the food hopper | Impellers are not well fixed | Check and rotate the impeller |
| E1 -- Display | Impurities inside food hopper | Clean the impurities inside of food hopper |
| | Food size inapplicable | Ensure to use 5-15mm dry food |
| E2 JA Display | Excessive food in food tray | clean the food left in the food bowl |
| | Food stuck near the food outlet | Ensure to use 5-15mm dry food |
| | Food block near the food outlet | Clean the food outlet |
| | The food dispense structure is not clean | Use the soft cloth to clean the food dispense structure |
| | Infrared sensor faulty | Contact After-sale service |
| E3 LA Display | Lack of food | Supplement the food and instant feed once |
| | Food hopper not fix well | Disassemble the food hopper and refix it. |
| E4 -- Display | Photoelectric sensor faulty | Contact After-sale service |
| | Motor faulty | Contact After-sale service |
| E5 LP Display | Dry batteries low power | Replace the new dry batteries. |

Safety Precautions

Read all instructions carefully before attempting to operate this device.

Ensure power supply

1. Please check the power supply before going out.
2. Device has RTC time saving function, timer will not stop working when switch off.
3. Please pay attention to the battery display when powered by batteries, users need to replace the batteries when " E5:LP" shows on device screen;
4. It's suggested to replace the batteries once a year if you do not get the device work by batteries, for the power will be running off with time goes by.
5. When powered by batteries, it is normal for the electric quantity icon to fluctuate occasionally because of the large transient current.

Keep Device

1. Device need to be placed horizontally and firmly, it's not allowed to tipped one side and rock or upside down.
2. Keep device placed in a dry area and not expose the device under sunlight. Also not to place the feeder in a high place to avoid the damage from dropping;
3. Do not remove any parts from the feeders beside food tray and food hopper.
4. Do not place anything on top of this feeder.
5. Ensure there is no barriers near the food outlet to make the pets can be fed normally.

Caution

- For indoor use ONLY.
- Is NOT dishwasher safe. Hand clean only.
- For dry food use ONLY. Works best with 5-15 mm food diameter or smaller.
- NOT recommended for puppies or kittens less than 7 months old or unable to reach the feeding dish.
- DO NOT use this feeder with puppies, kittens, dogs or cats with any physical disability.
- Intended for use with dogs or cats ONLY.
- DO NOT allow small children to play with, in or around feeder.

- Before leaving for extended time, always replace Battery Backup with 3 new "D" size batteries.
- DO NOT place any foreign objects in the feeder.
- DO NOT operate feeder without Bowl, Food Hopper and Lid securely in place.
- To avoid tripping, always keep power cord out of the way of foot traffic.
- Feeder must be placed on a level surface.
- DO NOT disassemble feeder other than Bowl, Lid and Battery Cover.
- Dispose of all packaging material properly. Some items may be packed in poly bags; these bags could cause suffocation; keep away from both children and pets.
- DO NOT attempt any repairs or modifications to the feeder.
- Check with your veterinarian if you are unsure about the proper MEAL SIZE for your pet.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro
Sedmidomky 459/8 101
00 Prague 10
Phone: +1 646 980 4569
Email: info@electric-collars.eu