



PetSafe®, 5-Meal Pet Feeder| Dog and Cat Food Dispenser

PFD10-18001


#### BATTERY INSTALLATION

1. Open the battery door. Insert 4 D batteries into the opening. Batteries are not included.



#### SET TIME

1. Press the Clock button, then the Set button. The clock on the display will start flashing.
2. Press the Increase or Decrease button (arrows) to set the clock (AM or PM for afternoon).
3. Press the Set button. Minutes will start flashing on the display.
4. Repeat the procedure to set the minutes.
5. Press the Clock button. Now the time is correctly set

#### SET THE TIME OF THE FIRST FEEDING OF THE DAY

1. Press the Clock button, then the Increase button until you see the indicator on the display  1.
2. Press the Set button.
3. Press the Increase or Decrease button (arrows) to set the clock (AM or PM for the afternoon).
4. Press the Set button. The minutes will start flashing on the display.
5. Repeat the procedure to set the minutes.
6. Press the Clock button. The time is now correctly set.
7. Fill the hopper with feed. DO NOT add TOO MUCH FOOD - this may cause the machine to malfunction.
8. Close the feed trays with the top of the feeder.
9. Press Manual Advance to move the bowl to the correct position.
10. Close the feeder with the lid.
11. Place the feeder in the desired position.

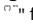
#### Set the time for the next feeding (if you feed more than once a day)

1. Press the Clock button, then the Increase button until you see the indicator on the display  2,  3...
2. Repeat the procedure from step 8 to step 12 to set the next feedings.

#### Cancel the set feeding time

1. Press the Clock button, then the Increase button until the display shows the feeding time you wish to cancel.
2. Press the Suspend Feeding button.
3. Press the Clock button.

#### Cancel the set feeding time - while maintaining the feeding program

1. Press Suspend Feeding for 7 seconds - then release the button. The Suspend Feeding icon will appear on the display.  
NOTE: The symbol  flashes every second between minutes and hours.

#### Resume programmed feeding (at programmed intervals)

1. Press Clock. The Suspend Feeding icon should disappear from the display.

#### SWITCHING OFF THE FEEDER

Remove the batteries

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: [www.electric-collars.com](http://www.electric-collars.com)  
Changes to technical parameters, properties, and printing errors are reserved.

**Service center and distribution**

Reedog s.r.o.

Sedmidomky 459/8

Praha 10 - Michle, 101 00

Phone: +1 646 980 4569

Email: [info@reedog.eu](mailto:info@reedog.eu)

