


正面

User Manual

W9-N
Pet Water Fountain

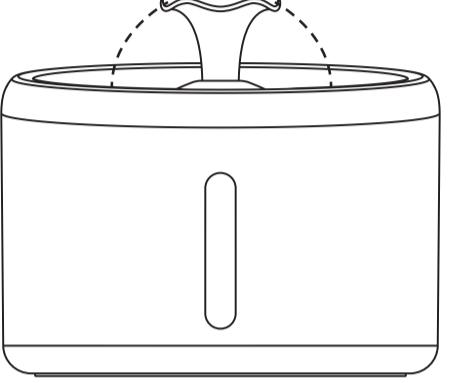

Please read the manual carefully before using this product.

Safety Precautions

Please carefully read the user manual.

① Working conditions


- The device should be placed on a level and stable surface. Do not tilt, shake, or invert it.
- Please use the device indoors, avoiding environments with high temperatures, high humidity, or direct sunlight.
- Do not install or store the device in places where the temperature is below 0°C or above 40°C.

⚠️ Attenions

- Do not turn on the power without water or below the minimum water level.
- For safety reasons, always disconnect the power when not in use.
- This product is only suitable for cats and small dogs.
- This product is suitable for people aged 12 and above. When used by children, close supervision by a guardian is required.
- The filter inside the filter is not edible. Do not use if there is any damage.
- Do not disassemble, repair, or modify the device without authorization, as this may void the warranty.
- To prevent electric shock, do not immerse the connector or plug of the power cord in water or any other liquid.
- If the connector of the power cable has moisture or comes into contact with water, disconnect the power supply immediately and ensure that the power cable is completely dry before continuing to use it.
- The device only supports charging with a 5V/1A adapter. Do not use adapters that exceed this specification.
- Properly dispose of all packaging materials. Some parts may be packaged in plastic bags, which can cause suffocation. Keep them away from children and pets.
- Do not use the pet water dispenser for purposes other than its intended use.

Components


①	Water Outlet	⑤	Water Tube
②	Drinking Tray	⑥	Pump Filter
③	Filter (Ion Exchange Resin, Activated Carbon, KDF)	⑦	Pump
④	Filter Tray	⑧	USB Cable
⑨	Water Bowl	⑩	

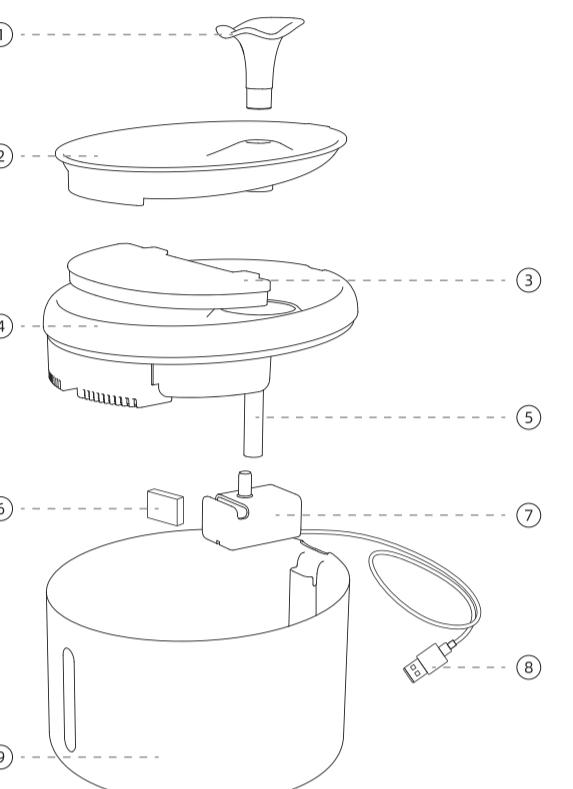

Parameters

Product Name	Pet Water Fountain
Product Model	W9-N
Dimension	201mm*201mm*178mm
Material	ABS
N.W	Around 0.62KG
Capacity	2.5L
Pets Appliance	Cats & Small size dogs
Power	USB 5V1A
Rated Power	5W

Product Usage

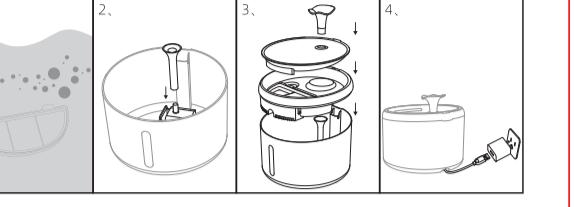


- Rinse the filter with clean water for 5 minutes to remove any dust on the surface, then place the filter onto the filter tray.
- Align the water with the water pump's outlet and install it.
- Filling water and sequentially install the filter tray, water tray and water outlet.
- Insert the USB cable of the water pump into a 5V/1A adapter and plug it into the socket. Once the power is on, the white light on the water pump will be on, indicating the water dispenser is operating.

Product installation and use

Pump Assembly

- Take out the water pump.
- Place the water pump into the rectangular groove inside the water bowl.
- Thread the USB cable of the water pump through the water bowl and secure the cable in the slot.

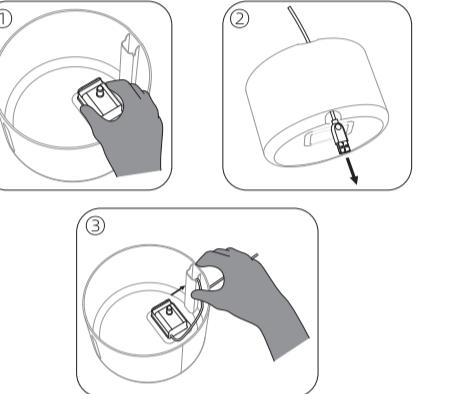

Device Maintenance and Care

Disconnect power


Before cleaning, disconnect the power supply and then clean the whole machine.

Cleaning the Filter

Use clean water to wash the filter. Do not use any detergents.

Water Pump Cleaning

- Remove the pump filter.
- Remove the water pump cover.
- Remove the impeller cover.
- Take out the impeller and clean it with warm water or clean water.

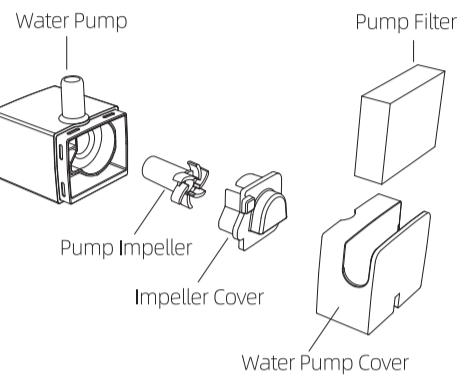

Maintenance

- It is recommended to replace the filter and pump filter every 2-4 weeks. (Depending on the frequency of use, for frequent use or continuous water dispensing, it is recommended to replace the filter every two weeks.)
- It is recommended to clean the water pump and water dispenser at least every two weeks.


Troubleshooting

Issues	Solution
Black Powder Sediment	The filter may not have been fully soaked. Before first use, place the filter in a clean bowl and soak it in water for 5 minutes.
Overflow	The filter has not been cleaned for a long time, causing clogging. Clean or replace the filter in timely.
Bubbles	The water level in the water bowl is too low.
Unusual noise from water pump	Clean the water bowl, water pump, and other components.
Slow water flow	When first used (or after long storage), the water pump needs to expel air. This is a normal phenomenon.
Dirt on water bowl and filter tray	If there is dirt or hair inside the water pump, it needs to be cleaned.
	Please clean the water bowl in timely (it is recommended to clean it weekly), replace the filter with a new one, and use clean water.
	Before using a new filter, soak it in clean water in advance.

反面

用户手册

W9-N
宠物自动饮水机

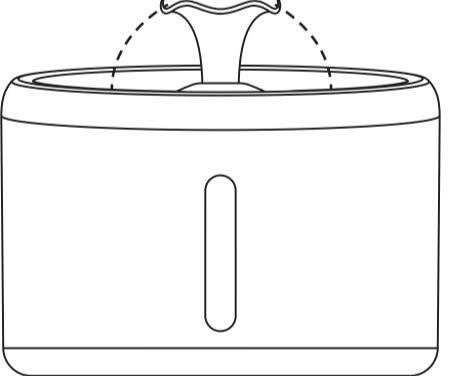

使用产品前请仔细阅读用户手册，并妥善保管。

使用安全指导

使用本产品之前，请先阅读本手册中的所有指导说明与注意事项。

① 设备放置


- 确保设备放置在稳定的平面，不可倾斜、摇晃或倒置。
- 请在室内环境使用，避免高温高湿及阳光直射的环境。
- 请勿将设备安装或存放在气温低于0°C或高于40°C的地方。

⚠️ 注意事项

- 请勿在无水或低于最低水位线的情况下接通电源。
- 不使用时，为安全起见务必断开电源。
- 本产品仅适用于猫及小型犬。
- 本产品适用于12岁以上人群，儿童使用时，请监护人密切监督。
- 滤芯内填充物不可食用，如有破损，切勿使用。
- 请勿擅自拆卸、维修、改装设备，可能导致保修条款失效。
- 为防止触电，请勿将电源线接口或插头浸泡在水中或任何其他液体中。
- 如果电源线接口有水分或不慎接触水，请立即断开电源，并在继续使用前确保电源线完全干燥。
- 设备仅支持使用5V/1A适配器，请勿使用超出此范围的适配器。
- 请妥善处理所有包装材料，某些零件可能会用塑料袋包装，这些袋子会引起窒息，请将其远离儿童和宠物。
- 不可使用宠物饮水机做除预期用途以外的各项用途。

产品简介

①	出水口	⑥	上水管
②	储水盘	⑦	过滤绵
③	滤芯: 活性炭、离子交换树脂、KDF	⑧	水泵
④	滤芯托盘	⑨	电源接口
⑤	静音盒	⑩	视窗
⑪	储水桶	⑫	储水桶

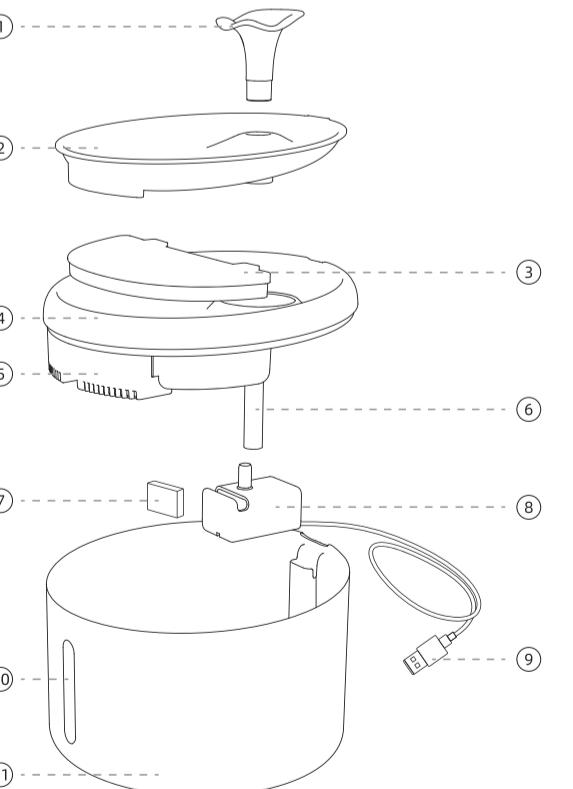


产品基本信息

产品名称	W9-N宠物自动饮水机
产品型号	W9-N
产品尺寸	201mm*201mm*178mm
材质	ABS
净重	约0.62KG
宠物类型	中小型犬/猫
容量	2.5L
电源	USB 5V1A
额定功率	5W

产品安装与使用

水泵组装

- 取出水泵；
- 将水泵放置在储水桶内部长方形凹槽处；
- 将水泵的USB电源线穿过储水桶，并将线放入卡槽固定住。

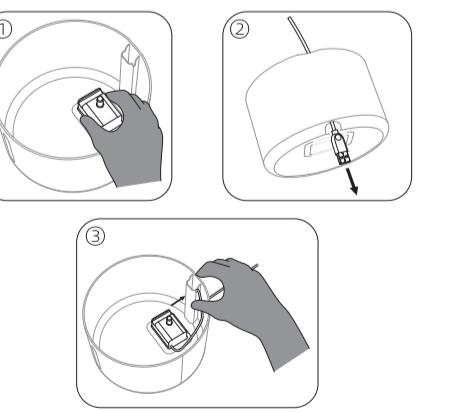

产品使用

- 在使用前，先将滤芯用清水清洗5分钟，以去除附着在表面的灰尘，然后将滤芯放置滤芯托盘处。
- 把上水管对准水泵上面的出水口安装。
- 将水倒入储水桶后依次安装滤芯托盘，储水盘以及出水头。
- 将水泵的USB电源线插入5V/1A的适配器并插入插座，接通电源，水泵亮白灯即饮水机开始运行。

灯光提示

产品接通电源持续出水，运行时水泵常亮白灯。

设备维护与保养

断开电源

进行清洗前，请先断开电源，再进行整机清洗。

清洗滤芯

使用清水清洗滤芯，切勿使用洗涤剂。

水泵清洁

- 拆下过滤海绵
- 拆下水泵盖
- 拆下叶轮盖
- 取下叶轮，用温水或者清水清洗



保养

- 建议每2-4周更换一次滤芯和滤棉。（根据用户饮水机使用频率，多宠或者持续出水建议每两周更换一次）
- 建议至少每两周清洗一次水泵和饮水机。

故障排查

问题	解决方案
出现黑色粉末沉淀	滤芯可能未完全浸泡。首次使用前，请将滤芯置于干净点碗中用清水浸泡5分钟。
溢水	滤芯长时间使用未清洗，发生堵塞需及时清洗或更换滤芯。
出现气泡	储水桶水位过低。
水泵出现异响	清洗储水桶、水泵等组件。
出水速度慢	首次使用时（或长时间存放后再次使用时），水泵需要排气，属于正常现象。
水泵中有脏污或者毛发	需清洗水泵。详情参照“水泵清洗指南”。
水箱和滤芯盘出现污垢	请及时清洗水桶（建议每周清洗一次），更换新的滤芯并使用干净的水源。新的滤芯使用前请用干净的水提前浸泡。

反面

W88mm*H169mm

80g/纸/14P 6折

单黑印刷