


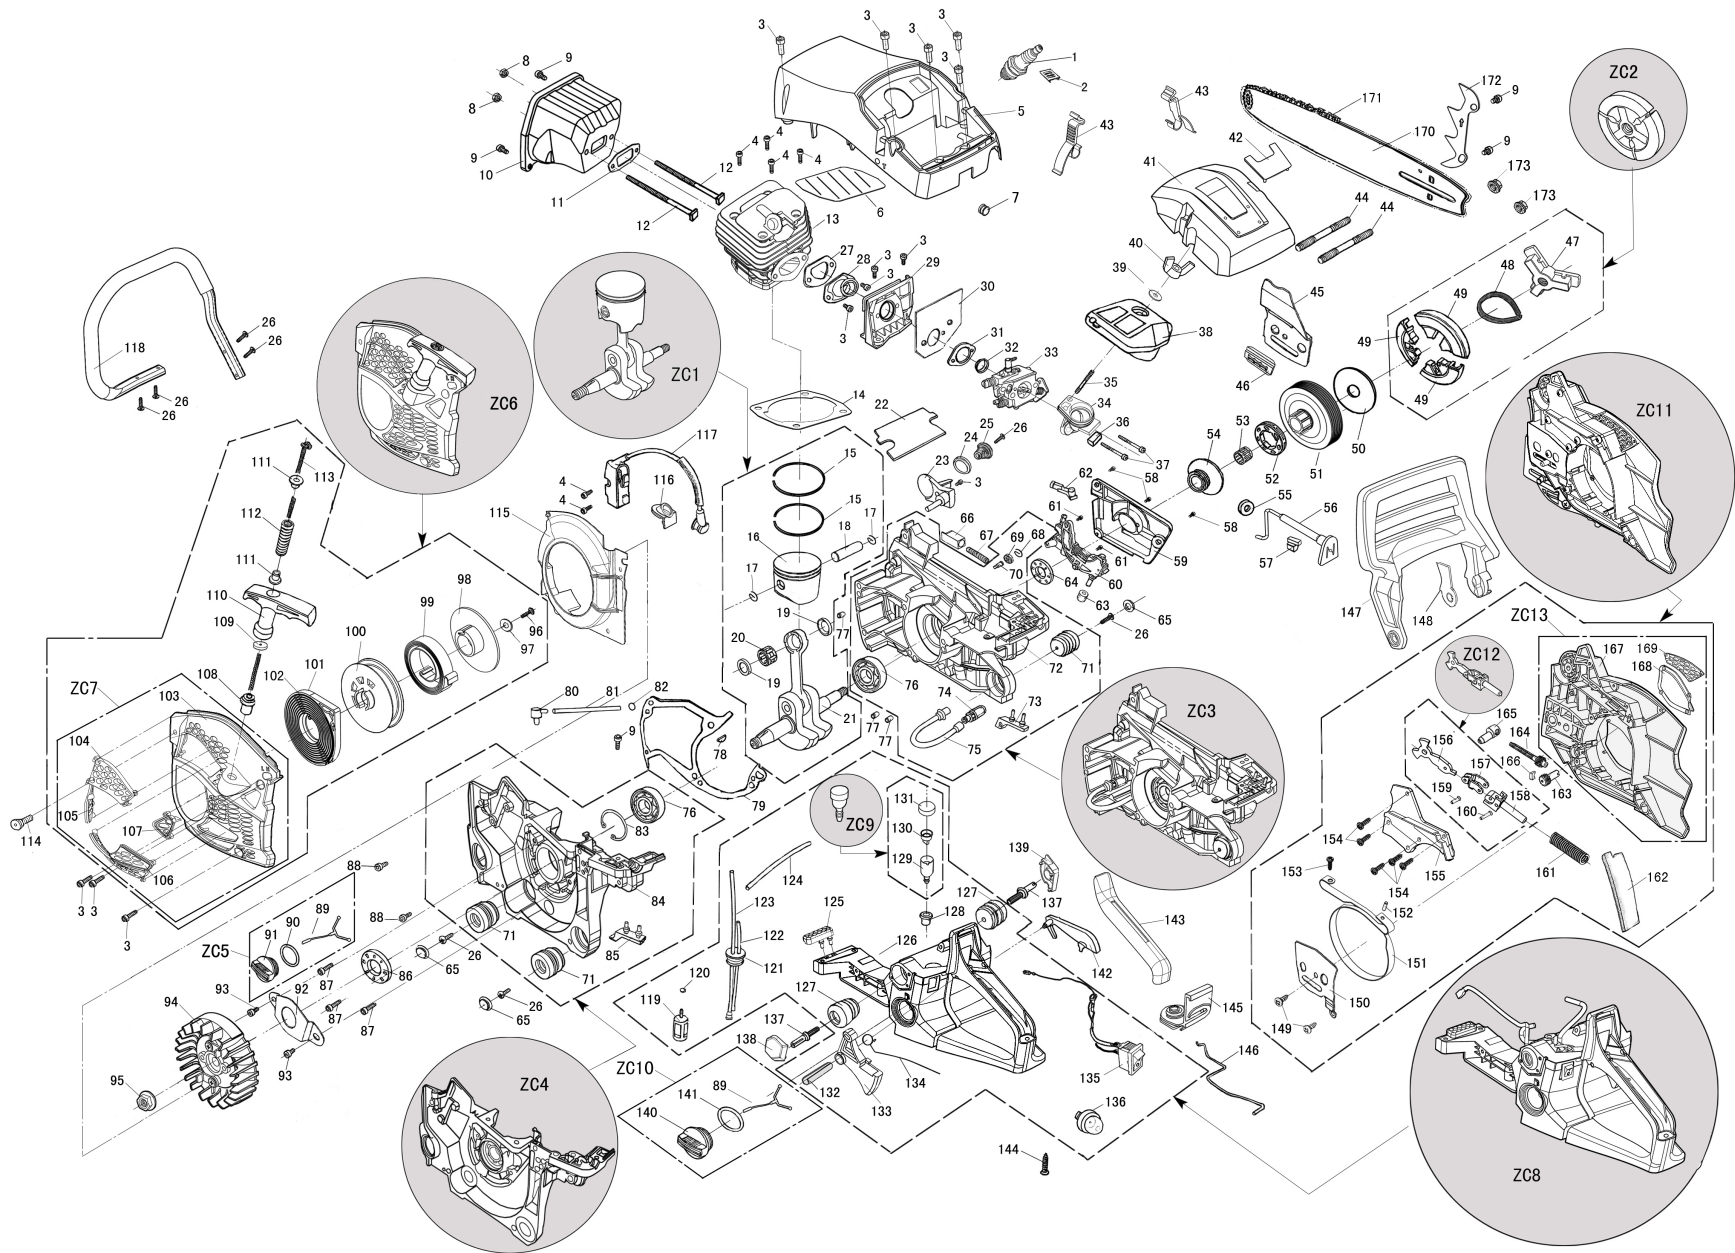

Spare parts list for RPCS5545			
Pos no	Reference no	English name	Dosage
1	YD6200-26200	Spark Plug	1
2	YD4500-27402	Blinker	1
3	YD4500-90023	Screw M5×14 /GB/T70.1	13
4	YD3800-90024	Screw M5×20 /GB/T70.1	6
5	YD4600.11-15201	Cover-Top	1
6	YD4600.11-18002	Heat-Proof Mat	1
7	YD4500-27601	Rubber	1
8	YD4600.8-92402	Nut M5 /GB/T6184	2
9	YD3800-90021	Screw M5×10 /GB/T70.1	5
10	YD5200-21130	Muffler Assy	1
11	YD4500-21001	Washer-Muffler	1
12	YD4600.8-21002	Screw M5×84	2
13	YD5800-12111	Cylinder	1
14	YD4600.7-12501	Washer-Cylinder	1
15	YD5800-14311	Ring-Pistion	2
16	YD5800-14111	Pistion	1
17	YD5800-14002	Ring-Snap	2
18	YD5800-14001	Pin-Pistion	1
19	YD4500-14803	Bearing Ring	2
20	YD4500-96126	Needle Bearing/JB/2581	1
21	YD5800-14100	Crankshaft	1
22	YD4500-18002	Heat-Proof Mat	1
23	YD4500-13001	Chain Catcher	1
24	YD4500-27114	Spring Seat	1
25	YD4500-27113	Spring	1
26	YD2500-91333	Screw St4.8×16/GB/T845	8
27	YD4600-16001	Washer-Intake	1
28	YD4500-16111	Intake Boot	1
29	YD4500-16121	Intake Boot Holder	1
30	YD4500-16132	Washer-Intake Boot Holder	1
31	YD4500-16131	Flange	1
32	YD4500-16002	Retaining Ring	1
33	YD4500-18200	Carburetor	1
34	YD4500-16141	Inlet Elbow	1
35	YD4500-16141.2	Stud M5×37 /GB/T899	1
36	YD4500-16142	Inlet Elbow Damping	1
37	YD4500-90029	Screw M5×50 /GB/T70.1	2
38	YD4500-16211	Air Filter	1
39	YD6200-93013	Flat Washer	1
40	YD4600.11-92404	Butterfly Nut M5	1
41	YD4600.11-16301	Cover-Air Filter	1
42	YD4600.11-16305	Board	1
43	YD4600.11-48117	Locking Clip	2
44	YD4500-12128	Stud M8×42	2
45	YD4500.7A-22931	Cover Plate	1
46	YD4500-22223	Chain Block	1
47	YD4500-22111	Holder	1
48	YD3800-22113A	Spring-Clutch	1
49	YD4500-22112	Block	3

Spare parts list for RPCS5545			
Pos no	Reference no	English name	Dosage
50	YD4500-22101	Washer-Clutch	1
51	YD4500-22121	Drum-Clutch	1
52	YD4500.8-22050	Sprocket	1
53	YD4500-96115	Needle Bearing K12×15×14 /JB/2581	1
54	YD4500-17001	Worm	1
55	YD4500-24112	Cover-Choker	1
56	YD4500.11-24111	Choker	1
57	YD4500-24113	Rubber	1
58	YD4500-90002	Screw M4×10 /GB/T70.1	3
59	YD4500-17301	Cover Plate - Oil Pump	1
60	YD4500-17200A	Oil Pump	1
61	YD3800-90004	Screw M4×14 /GB/T70.1	2
62	YD4500-17129	Hose Oil Outlet	1
63	YD4500-17002	Filter Cotton	1
64	YD4500-95021	Small - Oil Seal /GB/T9877.1	1
65	YD3800-27112	Dust Cover	3
66	YD4500.7A-23115A	Vice-Spring Seat	1
67	YD4500.7A-23114	Vice-Spring	1
68	YD2500-17132	Snap Spring	1
69	YD2500-17133	Filter Cotton	1
70	YD2500-17131	Air Cock	1
71	YD4500-27111	Short-Rubber Seat	1
72	YD4500.7A-13101	Right-Crankcase	1
73	YD4500-13105	Right-Rubber Block	1
74	YD4500-17124	Oil Filter	1
75	YD4500-17128	Hose Oil Leter	1
76	YD2500-96013	Bearing /GB/T276	1
77	YD4500-94021	Locating Pin /GB/T119.2	3
78	YD4500-94604	Key Flywheel /GB/T 1099	1
79	YD4500-13090A	Washer-Crankcase	1
80	YD4500-18021	Nozzle	1
81	YD4500-18022	Tubing	1
82	YD4500-18023	Snap Ring	1
83	YD4500-93212	Ring /GB/T893.1	1
84	YD4500-13201	Left-Crankcase	1
85	YD4500-13203	Left-Rubber Block	1
86	YD4500-95022	Big - Oil Seal /GB/T9877.1	1
87	YD4500-90025	Screw M5×30/GB/T70.1	3
88	YD4500-90026	Screw M5×25/GB/T70.1	2
89	YD4600.8-17111	Holding-Oil Cap	1
90	YD3800-17113	Seal Ring	1
91	YD3800-17112	Oil Cap	1
92	YD4500-13801	Baffle	1
93	YD4500-90001	Screw M4×6/GB/T70.1	2
94	YD4600.GF-15110	Flywheel	1
95	YD2500-92102	Nut M8×1 /GB/T6177.1	1
96	YD2500-91332	Screw St4.8×12 /GB/T845	1
97	YD6200-93013	Spacer / GB/T97.1	1
98	YD3800.2-25215	Flange-Starter	1
99	YD4600.7-25216	Spring	1
100	YD4600.7-25211	Pully Starter	1
101	YD4500-25213	Cover-Coil Spring	1
102	YD4500-25212	Coil Spring	1
103	YD4600.11-25110	Cover-Starter	1

Spare parts list for RPCS5545			
Pos no	Reference no	English name	Dosage
104	YD4600.11-25301	Cover-Starter Panel 1	1
105	YD4600.11-25303	Cover-Starter Panel 3	1
106	YD4600.11-25302	Cover-Starter Panel 2	1
107	YD4600.11-25304	Cover-Starter Panel 4	1
108	YD2500-25302	Rope Sheath	1
109	YD2500-25318	Washer-Starting Handle	1
110	YD4500-25311	Starting Handle	1
111	YD2500-25312	Inner Ring	2
112	YD2500-25313	Recoil Spring	1
113	YD3800-25301	Rope	1
114	YD6200-25288	Screw M5×18	1
115	YD4600.11-15120	Fairing	1
116	YD4600.8-26118	Sheath-Spark Plug	1
117	YD4500-26110	Ignition Assy	1
118	YD4600.11-24510	Handle	1
119	YD4500-18103	Fuel Filter	1
120	YD4500-18102	Snap Spring	1
121	YD3800-18104	Fuel Pipe Seat	1
122	YD3800-18432	Oil Return Pipe	1
123	YD3800-18101A	Fuel Pipe	1
124	YD3800-18431	Oil Inlet Pipe	1
125	YD4500-18301A	Rubber	1
126	YD4600.11-18300	Oil Tank	1
127	YD3800-27211	Long-Rubber Seat	2
128	YD3800-18001	Balancer Seat	1
129	YD3800-18013	Balancer Shell	1
130	YD3800-18014	Balancer Valve Body	1
131	YD3800-18015	Cover-Balancer	1
132	YD4500-94104A	Trigger Pin /GB/T879.1	1
133	YD4600.7-24211	Trigger	1
134	YD3800-24212	Trigger Spring	1
135	YD4500-26210B	Switch-Stop Assy	1
136	YD2500-18410	Oil Bubble	1
137	YD4500-27212	Bolt	2
138	YD4600.11-27500	Left-Cover	1
139	YD4600.11-27501	Right-Cover	1
140	YD3800-18032	Fuel Cap	1
141	YD3800-18033	Washer-Fuel Cap	1
142	YD4600.8-24214	Lever-Safety Trigger	1
143	YD4600.11-24411	Cover-Rear Handle	1
144	YD4500-91334	Screw St4.8×19/GB/T845	1
145	YD4500-18006	Rubber Plate	1
146	YD4500-24001	Rod-Throttle	1
147	YD4600.11-23011	Head Board	1
148	YD4600.11-21001	Heat-Proof Mat	1
149	YD2500-91321	Screw St4.2×8.5/GB/T845	2
150	YD4500.7B-22251	Cover-Tensioner	1
151	YD4600.11-23111	Brake Band	1
152	YD2500-94011	Pin-Brake Band/GB/T119.1	1
153	YD2500-91311	Screw St3.5×10/GB/T845	1
154	YD2500-91324	Screw St4.2×13/GB/T845	5
155	YD4600.11-23108	Cover Plate-Brake Spring	1
156	YD3600.C-22109.1	Brake Main Lever	1
157	YD3600.C-23110	Brake Control Lever	1

Spare parts list for RPCS5545			
Pos no	Reference no	English name	Dosage
158	YD3600.C-22109.2	Brake Vice-Lever	1
159	YD2500X-98002	Rivet $\Phi 2.5 \times 10$	1
160	YD2500X-98001	Rivet $\Phi 2.5 \times 15$	1
161	YD4600.11-23113	Brake Spring	1
162	YD4500-27321	Oil Baffler	1
163	YD4500-22211	Tension Driving Gear	1
164	YD4500-22201	Tension Passive Gear	1
165	YD4500-22212	Tension Pin	1
166	YD4500-23023	Stop Block	1
167	YD4600.11-27301	Brake Cover	1
168	YD4600.11-25305	Brake Cover Panel 1	1
169	YD4600.11-25306	Brake Cover Panel 2	1
170	YD4500-22910	Guide Bar 18inch	1
171	YD4500-22300	Chain 18inch /.325	1
172	YD3800-13002A	Pinboard	1
173	YD2500-92101	Nut M8/GB/T6177.1	2
ZC1	YD5800-14000	Crankshaft + Piston Assy	1
ZC2	YD4500-22110	Clutch Assy	1
ZC3	YD4500.7A-13100	Right-Crankcase Subassembly	1
ZC4	YD4500-13200	Left-Crankcase Subassembly	1
ZC5	YD3800-17110	Oil Cap Assy	1
ZC6	YD4600.11-25000	Starter Subassembly	1
ZC7	YD4600.11-25100	Cover-Starter Assy	1
ZC8	YD4500.11-18299	Oil Tank Subassembly	1
ZC9	YD3800-18010	Balancer Assy	1
ZC10	YD3800-18030	Fuel Cap Assy	1
ZC11	YD4600.11-25000BR	Brake Subassembly	1
ZC12	YD2500X-23109	Brake Lever Assy	1
ZC13	YD4600.11-27300	Brake Cover Assy	1