



## Spare parts list for RPCS5040

Pos no	Reference no	Description	Dosage
1	YD4500-26200	Spark Plug	1
2	YD4500-27402	Blinker	1
3	YD4500-90023	Screw M5×14	9
4	YD3800-90024	Screw M5×20	6
5	YD4500.9-15201	Cover-Top	1
6	YD4500-27601	Rubber	1
7	YD3800.7-92402	Nut-Muffler	2
8	YD4500-21101	Cover-Muffler	1
9	YD3800-90021	Screw M5×10	5
10	YD4500-21110	Muffler Assy	1
11	YD4500-21001	Washer-Muffler	1
12	YD4500-21002	Screw	2
13	YD5200-12111	Cylinder	1
14	YD4500-12501	Washer-Cylinder	1
15	YD5200-14311	Ring-Pistion	2
16	YD5200-14210	Pistion	1
17	YD4500-14002	Ring-Snap	2
18	YD5200-14001	Pin-Pistion	1
19	YD4500-14803	Bearing Ring	2
20	YD4500-96126	Needle Bearing	1
21	YD4500.7-14100	Crankshaft	1
22	YD4500-18002	Heat-Proof Mat	1
23	YD4500-13001	Chain Catcher	1
24	YD4500-27114	Spring Seat	1
25	YD4500-27113	Spring	1
26	YD2500-91333	Screw St4.8×16	8
27	YD4500-16001	Washer-Intake	1
28	YD4500-16111	Intake Boot	1
29	YD4500-16121	Intake Boot Holder	1
30	YD4500-16132	Washer-Intake Boot Holder	1
31	YD4500-16131	Flange	1
32	YD4500-16002	Retaining Ring	1
33	YD4500-18200	Carburetor	1
34	YD4500-16141	Inlet Elbow	1
35	YD4500-16141.2	Stud M5×37	1
36	YD4500-16142	Inlet Elbow Damping	1
37	YD4500-90029	Screw M5×50	2
38	YD4500-16211	Air Filter	1
39	YD4500.9-16301	Cover-Air Filter	1
40	YD4500-16310	Fwasher	1
41	YD3800-16302A	Nut	1
42	YD4500-12128	Stud M8×42	2
43	YD4500-22931	Cover Plate	1
44	YD4500-90003	Screw M4×12	1

## Spare parts list for RPCS5040

Pos no	Reference no	Description	Dosage
45	YD4500-22223	Chain Block	1
46	YD4500-22111	Holder	1
47	YD3800-22113	Spring-Clutch	1
48	YD4500-22112	Block	3
49	YD4500-22101	Washer-Clutch	1
50	YD4500-22121	Choke Knob	1
51	YD4500-22050	Sprocket	1
52	YD4500-96115	Needle Bearing	1
53	YD4500-17001	Worm	1
54	YD4500-24112	Cover-Choker	1
55	YD4500-24111	Choker	1
56	YD4500-24113	Rubber	1
57	YD4500-90002	Screw	3
58	YD4500-17301	Cover Plate - Oil Pump	1
59	YD4500-17129	Hose Oil Outlet	1
60	YD4500-17200	Oil Pump	1
61	YD4500-17002	Filter Cotton	1
62	YD4500-95021	Small - Oil Seal	1
63	YD3800-90004	Screw M4x14	2
64	YD2500-92101	Nut	2
65	YD2500-17132	Snap Spring	1
66	YD2500-17133	Filter Cotton	1
67	YD2500-17131	Air Cock	1
68	YD4500-27111	Short-Rubber Seat	1
69	YD4500-13105	Right-Rubber Block	1
70	YD4500-13101	Right-Crankcase	1
71	YD2500-96013	Bearing	1
72	YD4500-17128	Hose Oil Leter	1
73	YD4500-17124	Oil Filter	1
74	YD4500-94021	Locating Pin	3
75	YD2500-94601	Key Flywheel	1
76	YD4500-13090	Washer-Crankcase	1
77	YD4500-18023	Snap Ring	1
78	YD4500-18022	Tubing	1
79	YD4500-18021	Nozzle	1
80	YD4500-18004	Idling Adjusting Sleeve	1
81	YD4500-93212	Ring	1
82	YD4500-13201	Left-Crankcase	1
83	YD4500-13203	Left-Rubber Block	1
84	YD3800-27112	Little Dust Cap	5
85	YD4500-95022	Big - Oil Seal	1
86	YD4500-90025	Screw M5x30	3
87	YD4500-90026	Screw M5x25	2
88	YD3800-17111	Holding-Oil Cap	2

## Spare parts list for RPCS5040

Pos no	Reference no	Description	Dosage
89	YD3800-17113	Seal Ring	1
90	YD3800-17112	Oil Cap	1
91	YD4500-13801	Baffle	1
92	YD4500-90001	Screw M4x6	2
93	YD4500.GF-15110	Flywheel	1
94	YD2500-92102	Nut M8x1	1
95	YD2500-91332	Screw St4.8x12	1
96	YD6200-93013	Spacer	1
97	YD4500.GF-25215	Flange-Starter	1
98	YD4500.4-25216	Spring	1
99	YD4500.4-25211	Pully Starter	1
100	YD4500-25213	Cover-Coil Spring	1
101	YD4500-25212	Coil Spring	1
102	YD4500.9-25110	Cover-Starter	1
103	YD2500-25302	Rope Sheath	1
104	YD2500-25318	Washer-Starting Handle	1
105	YD2500-25311	Starting Handle	1
106	YD2500-25312	Inner Ring	2
107	YD2500-25313	Recoil Spring	1
108	YD3800-25301	Rope	1
109	YD4600.8-15120	Fairing	1
110	YD5200-24510	Handle	1
111	YD4500-26110	Ignition Assy	1
112	YD4500-18023	Air Filter	1
113	YD3800-18103	Snap Spring	1
114	YD3800-18431	Oil Inlet Pipe	1
115	YD3800-18101A	Fuel Pipe	1
116	YD3800-18432	Oil Return Pipe	1
117	YD3800-18104	Fuel Pipe Seat	1
118	YD4500-18301	Rubber	1
119	YD4500-18300	Oil Tank	1
120	YD3800-27211	Long-Rubber Seat	2
121	YD4500-94104A	Trigger Pin	1
122	YD4500-24211	Trigger	1
123	YD3800-24212	Trigger Spring	1
124	YD3800-18013	Balancer Shell	1
125	YD3800-18014	Balancer Valve Body	1
126	YD3800-18015	Cover-Balancer	1
127	YD3800-18001	Balancer Seat	1
128	YD4500-26190B	Switch-Stop Assy	1
129	YD2500-18410	Oil Bubble	1
130	YD3800-18033	Washer-Fuel Cap	1
131	YD3800-18032	Fuel Cap	1
132	YD4500-27212	Bolt	2

## Spare parts list for RPCS5040

Pos no	Reference no	Description	Dosage
133	YD4500-24411	Cover-Rear Handle	1
134	YD3800-24214	Lever-Safety Trigger	1
135	YD4500-18006	Rubber Plate	1
136	YD4500-24001	Rod-Throttle	1
137	YD4500-91334	Oil Vacuole	1
138	YD5200.5-90030	Screw	5
139	YD2500-91321	Screw St4.2x8.5	6
140	YD4500-23108	Cover-Tensioner	1
141	YD4500-23191	Brake Main Lever	1
142	YD2500-94011	Pin	2
143	YD4500-23192	Brake Vice-Lever	1
144	YD4500-23111	Brake Band	1
145	YD4500-23114	Spring	1
146	YD3800-23113	Brake Spring	1
147	YD3800-23110	Brake Control Lever	1
148	YD4500-23033	Head Board Pin Bush	1
149	YD4500-22251	Cover-Tensioner	1
150	YD4500-27321	Oil Battle Plate	1
151	YD4500-22211	Tension Driving Gear	1
152	YD4500-22201	Tension Passive Gear	1
153	YD4500-22220	Tension Pin	1
154	YD4500-23021	Stop Block	1
155	YD4500-93221	Split Washer	2
156	YD4500-23022	Spacing Plate	1
157	YD2500-18237	Rubber Washer	1
158	YD4500-93222	Split Washer	1
159	YD4500-93021	Washer	1
160	YD4500-23031	Spring	1
161	YD4500-23011	Head Board	1
162	YD4500-23032	Pin	1
163	YD4600-27301	Right Cover	1
164	YD4500-27322	Plate-Rubber	1
165	YD4500-22910	Bar 16 inch	1
166	YD4500-22300	Chain 16 inch	1
167	YD3800-13002	Pinboard	1

ZC1	YD4500.7-14000	Crankshaft + Piston Assy	1
ZC2	YD4500-22110	Clutch Assy	1
ZC3	YD4500-13100	Right-Crankcase	1
ZC4	YD4500-13200	Left-Crankcase Subassembly	1
ZC5	YD4500.9-25000	Starter Subassembly	1
ZC6	YD4500-18299	Oil Tank Subassembly	1
ZC7	YD3800-18010	Balancer Assy	1
ZC8	YD4600-23000	Brake Subassembly	1
ZC9	YD4500-23200	Brake Lever Assy	1