


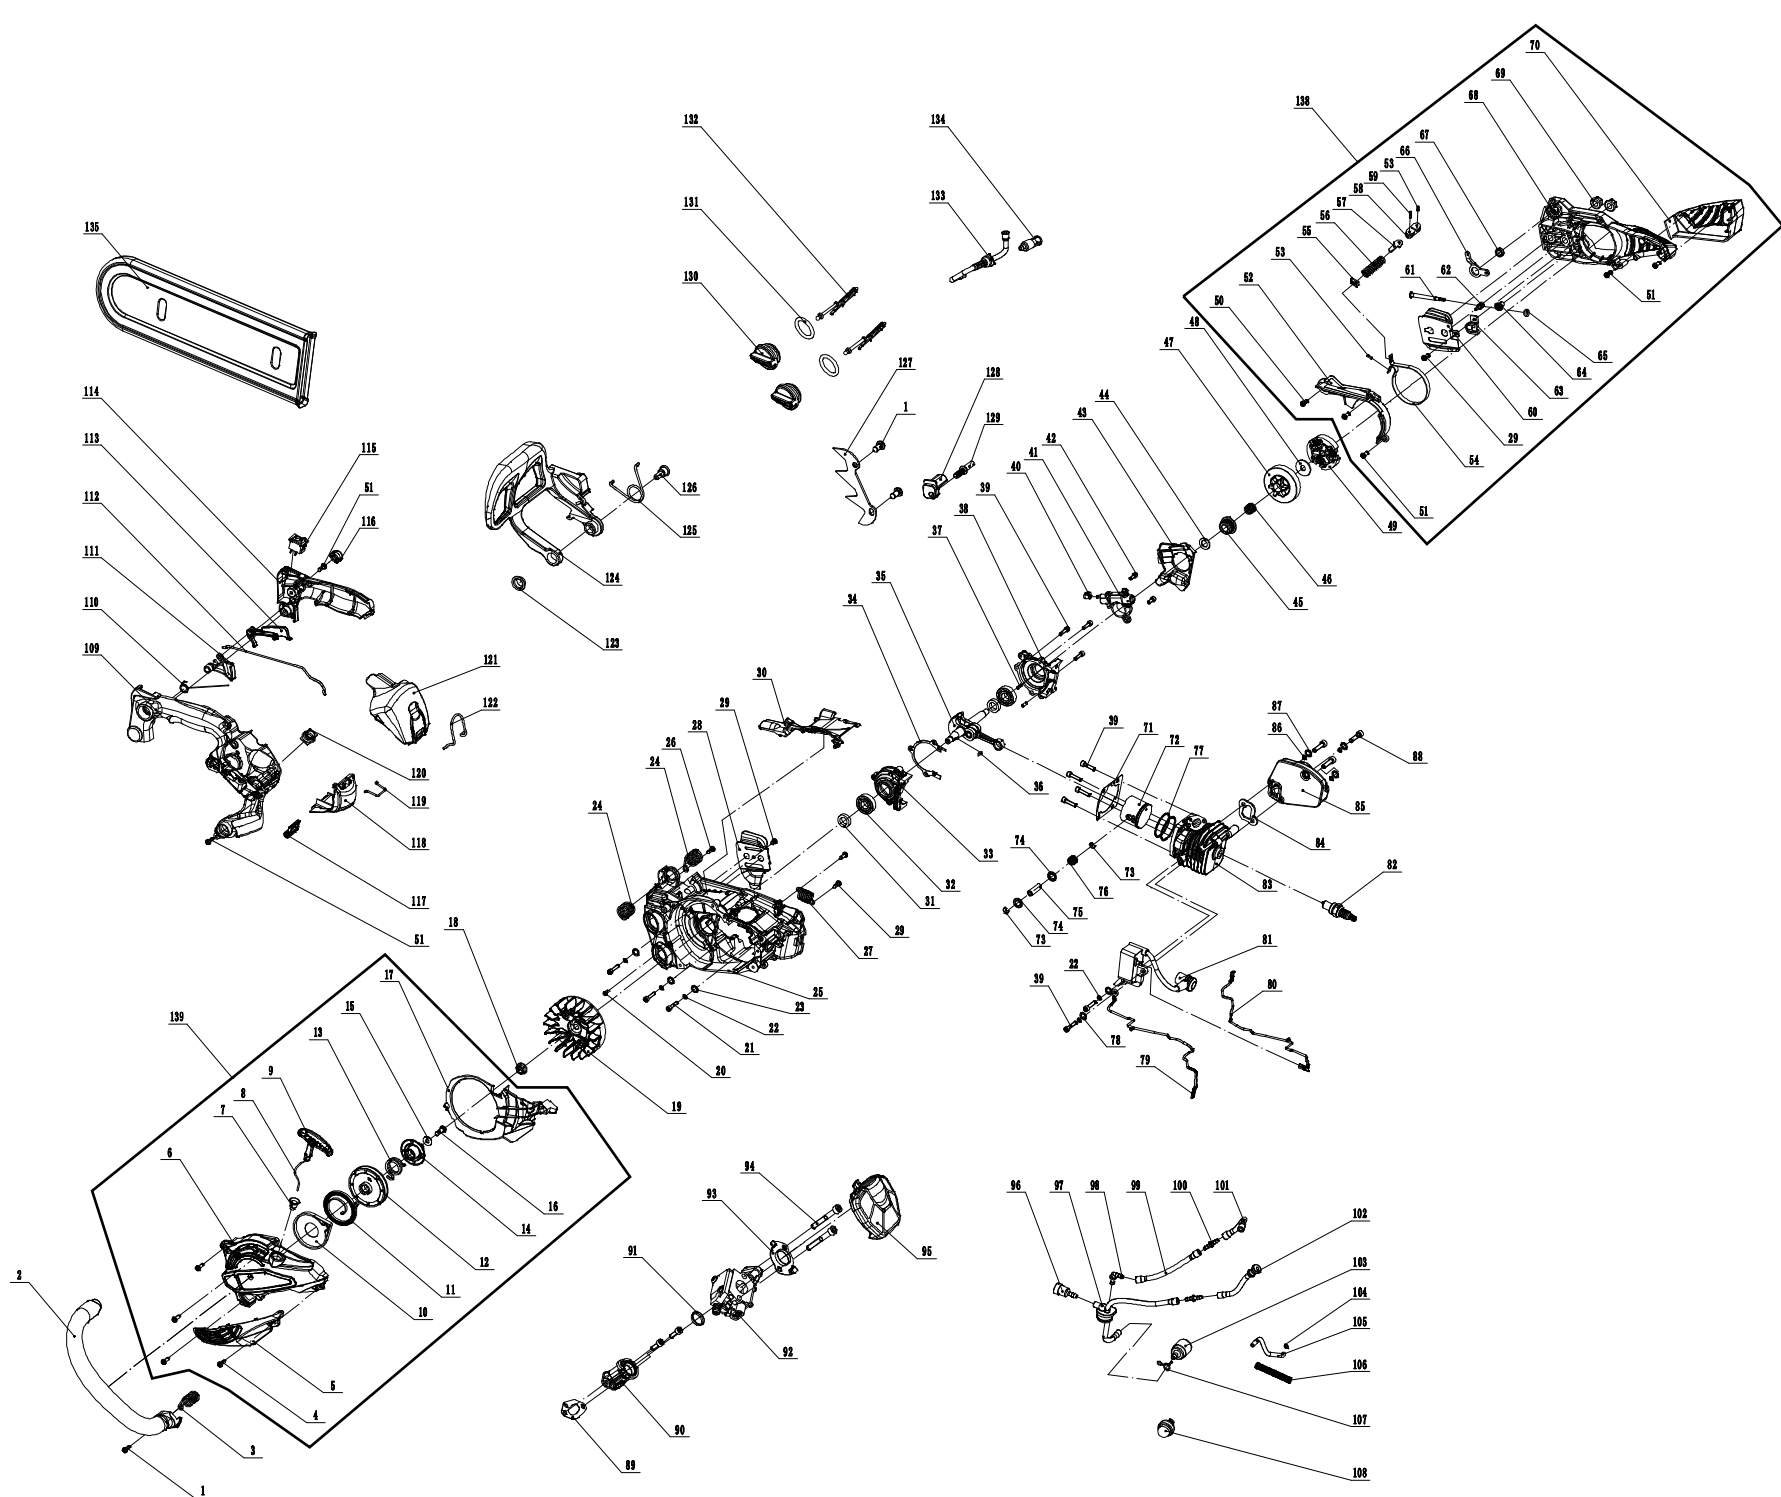

RPCS 2526			
Pozice	Objednací číslo	Popis	Počet
1	04.04.01.03.04.006	Hexagon Socket Head Cap Screw St4.8X13	1
2	04.01.54.505	Front Handle	1
3	04.10.06.14.010	Damper Spring	1
4	04.04.01.03.04.007	Hexagon Socket Head Cap Screw St4.2X16	1
5	04.01.01.239	Bottom Half Starter Cove	1
6	04.01.01.238	Top Half Starter Cove	1
7	04.01.32.012	Nylon Sheath	1
8	04.01.40.018	Nylon Rope	1
9	04.01.02.099	Starter Knob	1
10	04.01.41.006	Starter Spring Plate	1
11	04.10.06.03.008	Starter Spring	1
12	04.01.09.220	Starter Reel(Big)	1
13	04.10.06.28.002	Recoil Spring(Small)	1
14	04.01.09.013	Starter Reel(Small)	1
15	04.04.02.04.003	Washer	1
16	04.04.01.06.002	Screw St4.8X16	1
17	04.01.58.015	Fan Cover	1
18	04.04.04.01.032	Nut*M8 (Thicken)	1
19	04.05.02.037	Fly Wheel	1
20	04.02.11.001	Vent	1
21	04.04.01.04.02.210	Hexagon Socket Head Cap Screw M4X20	3
22	04.04.02.02.002	Spring Washer	5
23	04.04.02.04.002	Plain Washer Φ4Xφ9X0.8	3
24	04.10.06.14.009	Damper Spring	2
25	04.01.43.100	Engine Support	1
26	04.04.01.03.04.009	Hexagon Socket Head Cap Screw St4.2X12	5
27	04.10.06.28.003	Damper Spring	1
28	04.06.05.006	Nozzle Plate	1
29	04.04.01.03.04.008	Hexagon Socket Head Cap Screw St4.2X10	5
30	04.01.43.101	Engine Support Cover	1
31	04.02.08.005	Oil Seal	2
32	04.03.53.05.002	Ball Bearing	2
33	04.07.01.04.096	Left Crankcase	1
34	04.06.03.06.026	Crankcase Gasket	1
35	04.03.12.081	Crankshaft Comp	1
36	04.04.05.001	Key 3*10	1
37	RPCS2526-37	Pin Φ4*10	2
38	04.07.01.03.165	Right Crankcase	1
39	04.04.01.04.02.218	Hexagon Socket Head Cap Screw M4X16	9
40	04.02.03.006	Oil Pump Nozzle	1
41	04.03.15.015	Oil Pump	1
42	04.04.01.04.02.212	Hexagon Socket Head Cap Screw M4X12	4
43	04.01.15.008	Oil Pump Cover	1
44	04.06.14.026	Worm Washer Φ10.1Xφ17X1.5	1
45	04.01.16.011	Worm	1

46	04.03.54.04.006	Clutch Needle	1
47	04.03.04.040	Clutch Drum	1
48	04.04.02.04.047	Clutch Washer	1
49	04.03.01.057	Clutch	1
50	04.04.01.06.002	Countersunk Flat Phillips Head Tapping Screw St4.2*12	1
51	04.04.01.03.04.009	Hexalobular Socket Pan Head Tapping Srew St4.2*12	7
52	04.01.17.030	Brake Spring Cover	1
53	04.04.03.040	Pin	2
54	04.10.06.06.023	Brake Band	1
55	04.01.17.031	Brake Band Buffer Block	1
56	04.10.06.15.004	Brake Spring	1
57	04.06.07.005	Brake Lever(Sub)	1
58	04.01.17.032	Brake Lever Connecting Block	1
59	04.04.03.048	Pin $\Phi 3 \times 12$	1
60	04.06.06.012	Tensioner Cover	1
61	04.04.09.046	Chain Adjusting Screw	1
62	04.04.09.047	Chain Adjusting Nut	1
63	04.01.68.002	Adjustin Gear Cover	1
64	04.03.35.016	Chain Adjusting Driving Gear	1
65	04.03.35.017	Chain Adjusting Driven Gear	1
66	04.03.30.003	Brake Lever(Main)	1
67	04.06.08.004	Brake Lever Fix Sleeve	1
68	04.01.07.118	Top Half Breke Cover	1
69	04.04.04.01.035	Nut*M8	2
70	04.01.07.119	Bottom Half Starter Cove	1
71	04.06.03.05.026	Cylinder Gasket	1
72	04.03.08.075	Piston	1
73	04.04.02.07.101	Circlip	2
74	04.03.19.008	Anti-Wear Gasket	2
75	04.03.10.042	Piston Pin	1
76	04.03.54.04.008	Piston Needle	1
77	04.03.09.056	Piston Ring	2
78	04.04.02.04.025	Plain Washer $\Phi 4 \times \Phi 10 \times 0.5$	2
79	RPCS2526-79	Ground Line	1
80	RPCS2526-80	Off Line	1
81	04.05.01.249	Ingition	1
82	04.05.03.012	Spark Plug	1
83	04.03.13.145	Cylinder	1
84	04.06.03.07.020	Muffler Gasket	1
85	04.06.09.01.099	Muffler	1
86	04.04.02.02.004	Spring Washer	3
87	04.04.02.04.005	Plain Washer $\Phi 5 \times \Phi 9 \times 0.5$	3
88	04.04.01.04.02.351	Hexagon Socket Head Cap Screw M5*25	3
89	04.06.0303.020	Intake Pipe Gasket	1
90	04.02.02.036	Inlet Pipe	1
91	04.06.08.003	Inlet Pipe Ring	1
92	04.03.07.128	Carburetor	1

93	04.06.16.063	Air Filter Support	1
94	04.04.01.03.05.001	Hexagon Socket Head Cap Screw M5*40	2
95	04.01.24.027	Air Filter	1
96	04.01.25.001	Balancer	1
97	04.02.04.108	Fuel Pipe Plate	1
98	04.01.67.005	Elbow Connector	1
99	04.02.02.037	Carburetor Inlet Pipe	1
100	04.01.67.004	Oil Pipe Connection	2
101	04.02.03.107	Oil Vacuole Outlet Pipe	1
102	04.02.02.038	Carburetor Inlet Pipe (Extended)	1
103	04.03.21.012	Fuel Filter	1
104	04.10.06.12.013	Clip $\Phi 4.5$	1
105	04.02.03.108	Fuel Filter Inlet Pipe	1
106	04.10.06.17.004	Tubing Protection Spring	1
107	04.10.06.12.011	Steel Wire Elastic Hoop	1
108	04.01.53.002	Oil Vacuole	1
109	04.01.08.073	Front Handle	1
110	04.10.06.11.003	Trigger Spring	1
111	04.01.27.078	Trigger	1
112	04.10.06.10.014	Throttle Rod	1
113	04.01.26.076	Trigger Control Arm	1
114	04.01.08.074	Front Handle Cover	1
115	04.05.04.001	Switch (On/Off)	1
116	04.02.20.009	Handle Screw Plug Cover	1
117	04.06.23.002	Air Filter Cover Lock	1
118	04.01.64.043	Spark Plug Cover	1
119	04.06.23.004	Pothook For Spark Plug Cover	1
120	04.02.06.034	Air Intake Rubber Sleeve	1
121	04.01.03.242	Air Filter Cover	1
122	04.06.23.005	Pothook For Engine	1
123	04.06.30.002	Front Damper Flange	1
124	04.01.08.075	Front Damper	1
125	04.10.06.09.007	Front Damper Spring	1
126	04.04.01.19.001	Stepped Tapping Screw	1
127	04.06.04.005	Wooden Teeth	1
128	04.01.18.005	Chain Catcher	1
129	04.04.01.10.014	Tapping Screw St5.5*13	1
130	04.01.11.064	Tank Cap	2
131	04.02.07.2129	Tank Cap Sealing	2
132	04.01.13.005	Oil Pat	2
133	04.02.07.212	Oil Pump Inlet Pipe	1
134	04.03.20.008	Oil Filter	1
135	04.08.02.012	Bar Cover	1
138	04.032.2565.00	Brake assy	1
139	04.032.2565.01	Starter assembly	1