


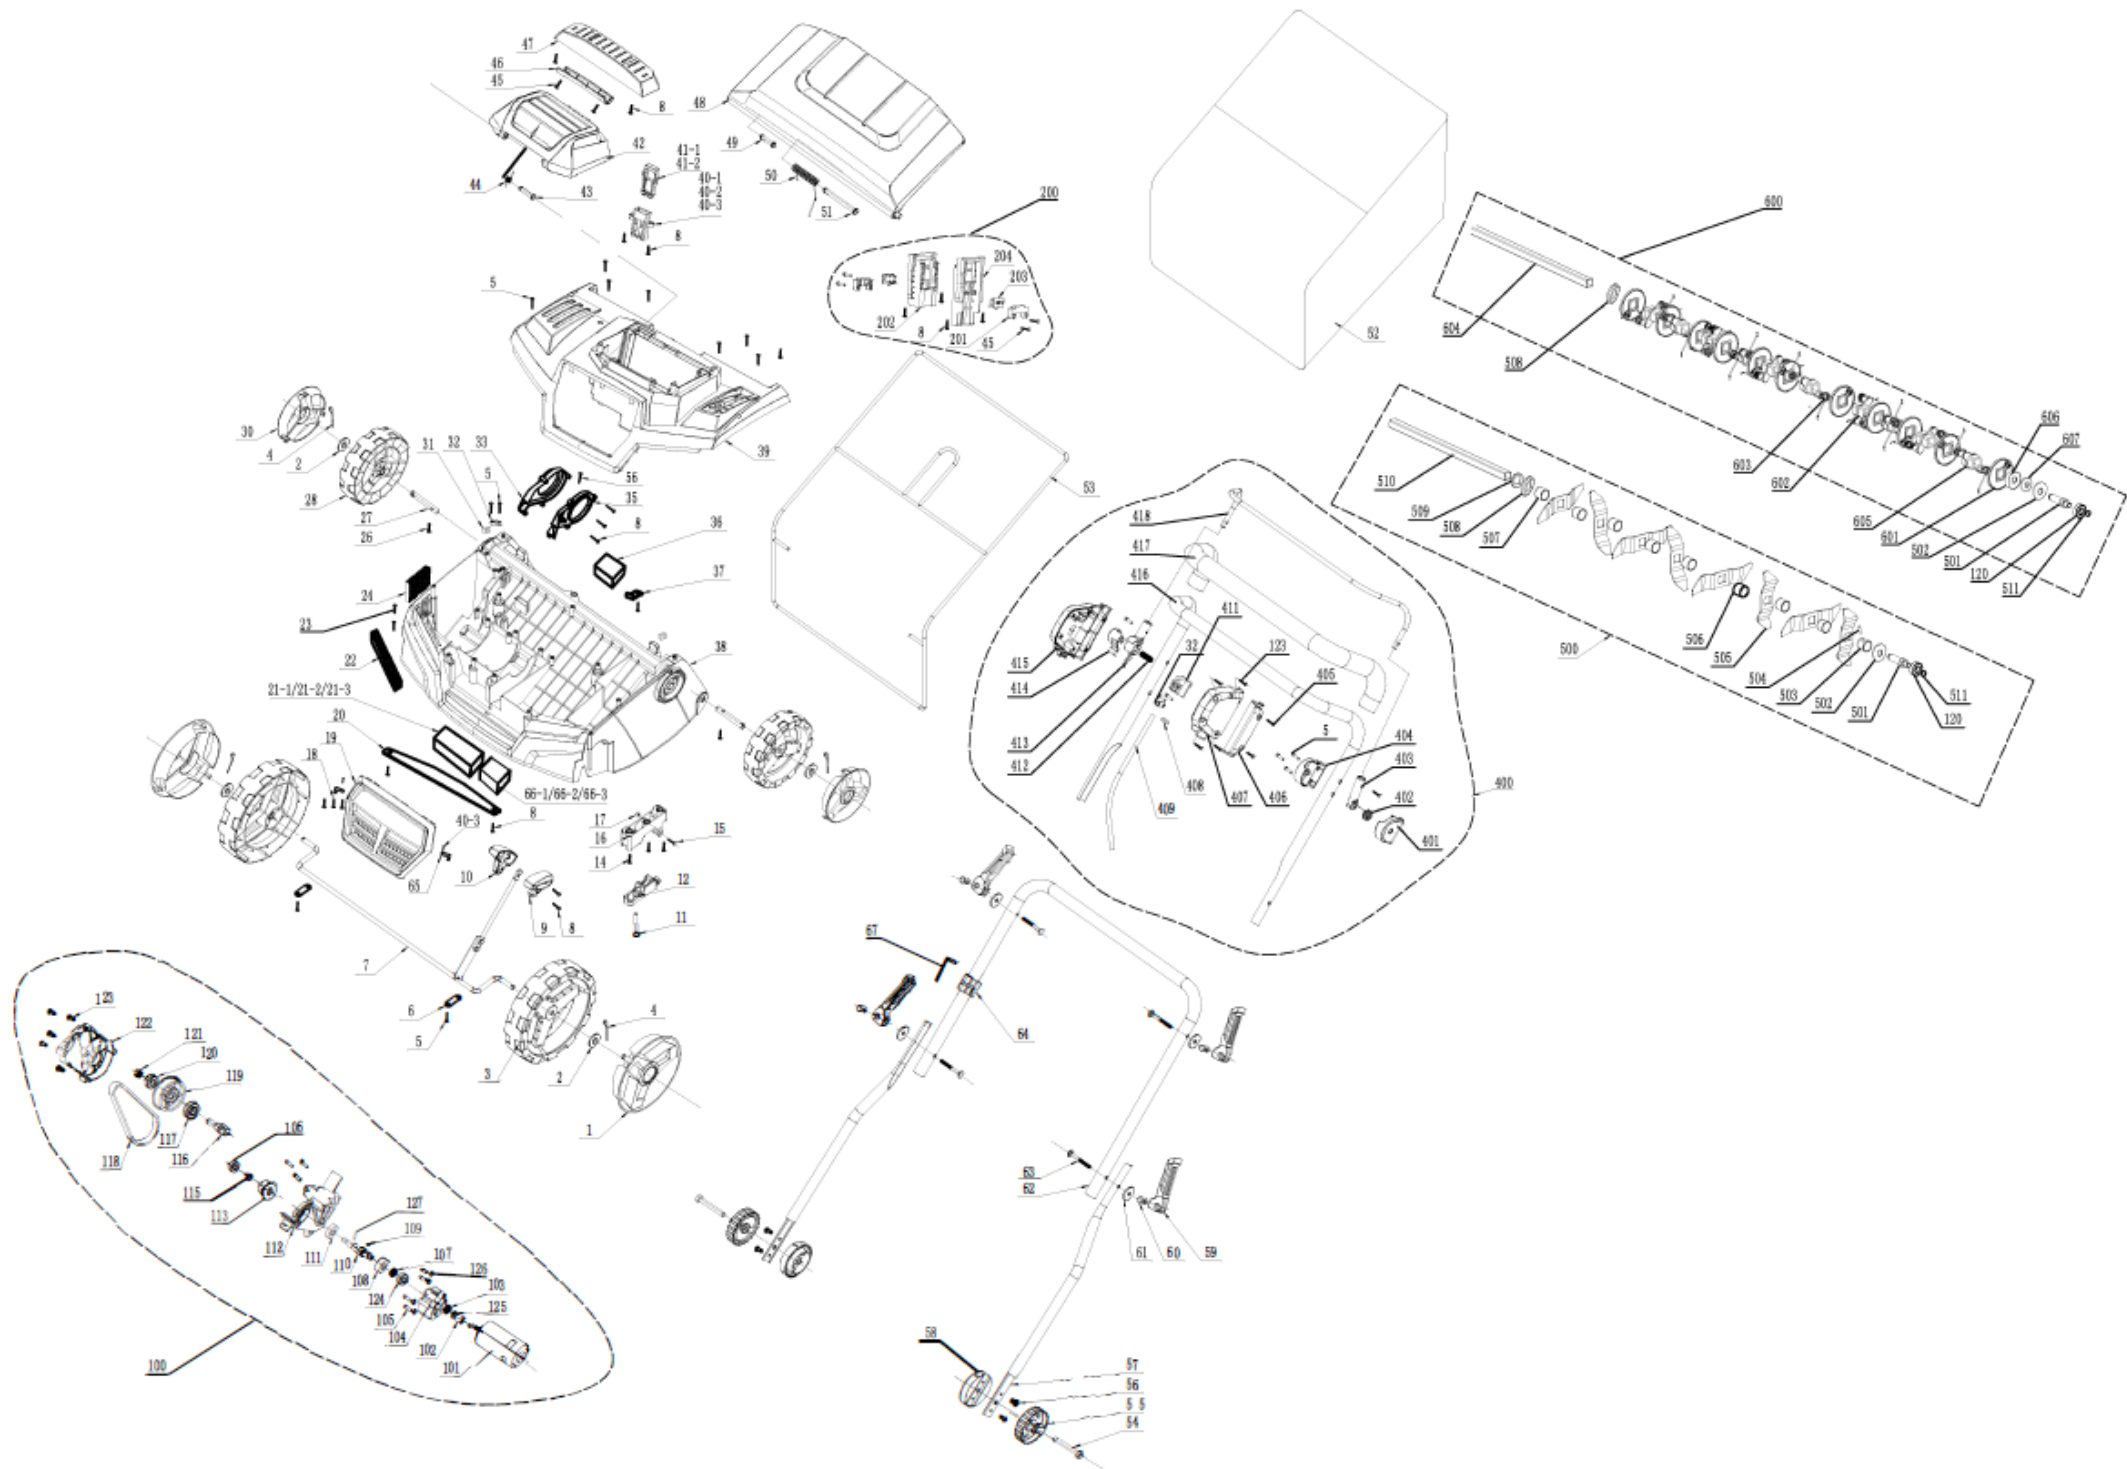

RAV 3820i			
Pozice	Obj.číslo	Popis	Počet
1	RAV3820i-01	200 the wheel cover	2
2	RAV3820i-02	Phi 10 gasket	4
3	RAV3820i-03	200 wheels	2
4	RAV3820i-04	R pin	4
5	RAV3820i-05	screw ST4*20	16
6	RAV3820i-06	Front wheel bracket assembly press plate	2
7	RAV3820i-07	Front wheel bracket assembly	1
8	RAV3820i-08	screw	22
9	RAV3820i-09	Right gear handle	1
10	RAV3820i-10	Gear handle left	1
11	RAV3820i-11	Hexagon screw with gasket	1
12	RAV3820i-12	Bearing seat press plate	1
14	RAV3820i-13	screw	3
15	RAV3820i-15	screw	1
16	RAV3820i-16	Bearing seat	1
17	RAV3820i-17	screw	1
18	RAV3820i-18	screw	3
19	RAV3820i-19	cover	1
20	RAV3820i-20	Counterweight pressing plate	1
21	RAV3820i-21	Case counterweight bag	1
22	RAV3820i-22	Filter sponge # 2	1
23	RAV3820i-23	screw	2
24	RAV3820i-24	Filter sponge # 1	1
26	RAV3820i-26	screw	2
27	RAV3820i-27	Rear hub	2
28	RAV3820i-28	150 wheels	2
30	RAV3820i-30	150 the wheel cover	2
31	RAV3820i-31	Square nut	2
32	RAV3820i-32	cable pressplate	3
33	RAV3820i-33	Air outlet guide cover A	1
35	RAV3820i-35	Air outlet guide cover B	1
36	RAV3820i-36	controller	1
37	RAV3820i-37	Controller platen	1
38	RAV3820i-38	pedestal	1
39	RAV3820i-39	Casing cover	1
40	RAV3820i-40	Safety lock block	1
41	RAV3820i-41	switch is powered with a safety lock	1
42	RAV3820i-42	Transparent cover	1
43	RAV3820i-43	Straw bag cover fixing pin	1
44	RAV3820i-44	Transparent shield torsion spring	1
45	RAV3820i-45	screw	6
46	RAV3820i-46	Case handle cover	1
47	RAV3820i-47	The cabinet handle	1
48	RAV3820i-48	Straw bag cover	1
49	RAV3820i-49	DC straw bag cover pin	1
50	RAV3820i-50	torsional spring	1
51	RAV3820i-51	Torsion spring retaining pin	1
52	RAV3820i-52	Clippings bag	1
53	RAV3820i-53	Hay rack	1
54	RAV3820i-54	screw	2
55	RAV3820i-55	Angle adjusting knob	2
56	RAV3820i-56	screw	6

57	RAV3820i-57	1 bar	2
58	RAV3820i-58	Pole 1 positioning seat	2
59	RAV3820i-59	Fast loading wrench	4
60	RAV3820i-60	Quick wrench cylindrical nut	4
61	RAV3820i-61	Quick mounting spanner gasket	4
62	RAV3820i-62	2 bar	1
63	RAV3820i-63	screw	4
64	RAV3820i-64	A new clamp	1
65	RAV3820i-65	Front decorative plate pressing plate	2
66	RAV3820i-66	Base counterweight bag	1
67	RAV3820i-67	hex key	1
100	RAV3820i-100	Motor assembly	1
101	RAV3820i-101	36V brushless motor	1
102	RAV3820i-102	pinion	1
103	RAV3820i-103	Elastic washer for shaft	1
104	RAV3820i-104	Motor gear box	1
105	RAV3820i-105	screw	4
106	RAV3820i-106	bearing	1
107	RAV3820i-107	Elastic washer for shaft	1
108	RAV3820i-108	Motor gear	1
109	RAV3820i-109	flat key	1
110	RAV3820i-110	The big gear shaft	1
111	RAV3820i-111	bearing	1
112	RAV3820i-112	Pulley support	1
113	RAV3820i-113	Small timing belt pulley	1
115	RAV3820i-115	gasket	1
116	RAV3820i-116	output shaft	1
117	RAV3820i-117	bearing	1
118	RAV3820i-118	poly V-belt; ribbed belt	1
119	RAV3820i-119	The big belt wheel	1
120	RAV3820i-120	bearing6000-2RS	3
121	RAV3820i-121	Outer hexagon locknut	1
122	RAV3820i-122	Center bracket cover	1
123	RAV3820i-123	screw ST4*18	16
124	RAV3820i-124	bearing	1
125	RAV3820i-125	gasket	1
126	RAV3820i-126	resilient pad	4
127	RAV3820i-127	pin roll	1
200	RAV3820i-200	Double pack	1
201	RAV3820i-201	Battery pack insert pressure plate	2
202	RAV3820i-202	TMC small bag plug board - small	1
203	RAV3820i-203	TMC small package socket board	2
204	RAV3820i-204	TMC small bag plug board - big	1
400	RAV3820i-400	Switch box assembly	1
401	RAV3820i-401	Trigger seat left	1
402	RAV3820i-402	spring	1
403	RAV3820i-403	wire connected rod	1
404	RAV3820i-404	trigger seat right	1
405	RAV3820i-405	screw ST4*25	2
406	RAV3820i-406	switch box pressplate	1
407	RAV3820i-407	switch box left	1
408	RAV3820i-408	Switch plug head	1
409	RAV3820i-409	wire	1
411	RAV3820i-411	Rocker switch	1

412	RAV3820i-412	spring	1
413	RAV3820i-413	trigger	1
414	RAV3820i-414	switch button	1
415	RAV3820i-415	switch box	1
416	RAV3820i-416	no. 3 rod	1
417	RAV3820i-417	sponge tube	1
418	RAV3820i-418	Wire trigger	1
500	RAV3820i-500	Ripper blade assembly	1
501	RAV3820i-501	Connecting shaft head	2
502	RAV3820i-502	gasket	2
503	RAV3820i-503	Blade iron bushing short	1
504	RAV3820i-504	elastic cylindrical pin	1
505	RAV3820i-505	blade	8
506	RAV3820i-506	Plastic blade bushing	7
507	RAV3820i-507	Blade iron bushing length	1
508	RAV3820i-508	Dust cover left	2
509	RAV3820i-509	gasket	1
510	RAV3820i-510	Blade square tube shaft	1
511	RAV3820i-511	ring 10	2
600	RAV3820i-600	Comb blade assembly	1
601	RAV3820i-601	Claw spring fixed frame cover plate	13
602	RAV3820i-602	Claw spring fixing frame	11
603	RAV3820i-603	pawl spring	24
604	RAV3820i-604	Comb blade square tube shaft	1
605	RAV3820i-605	Claw spring fixing frame	1
606	RAV3820i-606	New rake comb blade dust cover	1
607	RAV3820i-607	gasket	1