



RPV 4055 PRO machine

Pozice	Obj.číslo	Popis	Počet
A-01	G3XW0000000	Limiting Stopper	1
A-02	G3320000000	Foam Pipe	1
A-03	TS0U0000072	TS40 upper handle	1
A-04	TS0T0000072	TS40 lower handle	1
A-05	G33C1100017	Knob	4
A-06	B1088W08050	Bolt	4
A-07	B5019W00000	Flat Washer	4
A-08	G33K0000000	Rope Guide	1
A-09	B2011B00000	Nut	1
A-10	G33H2000000	Cable Support	2
A-11	B1087W08032	Bolt	2
A-12	B2009W00000	Nut	2
A-13	G33J0000000	Handle Plug	2
A-14	TS0V0000010	Upper Cover of of handrail box	1
A-15	TS0W0000010	Lower Cover	1
A-16	B3036B00000	Screw	1
A-17	B3073B00000	Screw	4
A-18	TS0X1000000	Handle base plate assembly	1
A-19	B1103W06030	Bolt	2
A-20	G53L1100017	Plastic Grip	1
A-21	TS0X2X00000	Height Adjustment Handle	1
A-22	B1058W06012	Bolt	1
A-23	B2008W00000	Nut	3
A-24	TS0X3000000	Height Adjustment Spring	1
A-25	TS0Y1000000	cable	1
A-26	TS0X4000000	bolt	1
A-27	B1103W06030	Bolt	1
A-28	B2002B00000	Nut	1
A-29	TS0Y2000000	Brake Cable	1
A-30	TS0Y2XX0000	fixed plate	1
A-31	TS0Y2X00000	Brake Cable	1

Pozice	Obj.číslo	Popis	Počet
A-32	G3354N00072	Brake Lever	1
A-33	G33Q0000117	Plastic Decoration	1
B-01	B2020W00000	Nut	2
B-02	TS070000010	Knob	1
B-03	B1059W06014	Bolt	4
B-04	B2008W00000	Nut	4
B-05	TS0J4000000	Plate	1
B-06	TS0H1000000	Cover	1
B-07	B2009W00000	Nut	1
B-08	TS010100017	Mower Deck	1
B-09	B1036W08015	Bolt	4
B-10	B2028W00000	Nut	4
B-11	G32C0000000	Left Bracket	1
B-12	G32B0000000	Right Bracket	1
B-13	G32K0000000	plug	1
B-14	TS06A000000	Rear Cover Shaft	1
B-15	TS06B000000	Rear Cover Spring	1
B-16	B1059W06014	Bolt	2
B-17	B2008W00000	Nut	2
B-18	TS050000010	pedestal of rear cover	1
B-19	TS060000010	Rear Cover	1
B-20	B3023W00000	Screw	6
B-21	B3051B00000	Screw	2
B-22	B3034W00000	Screw	2
B-23	TS020000010	Front handle base	1
B-24	TS04B000017	Handle	1
B-25	TS03B000010	upper cover	1
C-01-1	KB212Q00000	Engine	1
C-01-2	BE001W00000	Flat Key	1
C-01-3	B1101B00025	Bolt	1
C-02	B1044W08045	Bolt	4

Pozice	Obj.číslo	Popis	Počet
C-03	TS0Y7000000	Bush	2
C-04	B2028W00000	Nut	5
C-05	BA00RB00000	Belt	1
C-06	TS0D1900000	Pulley wheel	1
C-07	B5005W00000	Flat Washer	2
C-08	B6006W00000	Spring washer	2
C-09	B1010W08045	Bolt	1
C-10	G54BN12N000	Idle pulley	1
C-10-1	TS2F1200000	Pulley bush	1
C-11	B2008W00000	Nut	6
C-12	TS0J3010000	Fixed Disk	1
C-13	BE00BW00000	Flat Key	1
C-14	B300GBN0000	Screw	1
C-15	B1059W06014	Bolt	6
C-16	TS0E0100000	Driven Pulley	1
C-17	B1078W08025	Bolt	1
C-18	TS0Y9000000	Bush	2
C-19	B3051B00000	Screw	2
C-20	TS080000010	belt cover	1
D-01	TS0B0000000	Connecting rod	1
D-02	TS0C0000000	fixed plate	1
D-03	B1104W06015	Bolt	2
D-04	B2016W00000	Nut	4
D-05	B2017W00000	Nut	4
D-06	B6009B00000	Spring Washer	4
D-07	B1058W06012	Bolt	8
D-08	B2008W00000	Nut	8
D-09	G3ZT0000000	Bush	4
D-10	G3CT0000000	Bush	4
D-11	TS090000000	Front Axle	1
D-12	TS0A0000000	Rear Axle	1

Pozice	Obj.číslo	Popis	Počet
D-13	G34H20N0000	8" Wheel	4
D-14	G34T3000073	8" Outer Wheel Cover	4
E-01	TS0Y3000000	Metal Bracket	1
E-02	TS0Y4186000	Grass Collection Bag	1
F	TS40SCDZC00	Blade assy	1
F-01	B9006B00000	Lock Ring	1
F-02	TS0H0000000	Cover	1
F-03	B0018W0H000	Ball Bearing	1
F-04	B2032W00000	Nut	1
F-05	B800AB00000	Pin	1
F-06	TS0K0000000	cover	1
F-07	TS0M0000000	washer	1
F-08	TS0P0000000	Blade	18
F-09	TS0PCT00000	Blade Bush	17
F-10	TS0N0000000	Washer	1
F-11	TS0J0000000	shaft	1
G	TS40SCPZCX0	sprung claw assy	1
G-01	B9006B00000	Lock Ring	1
G-02	TS0H0000000	Cover	1
G-03	B0018W0H000	Ball Bearing	1
G-04	B2032W00000	Nut	1
G-05	B800AB00000	Pin	1
G-06	TS0K0000000	cover	1
G-07	TS0M0000000	washer	1
G-08	TS0R0000000	clapboard	13
G-09	TS0Q0000000	spring	24
G-10	TS0RX000000	spring base	12
G-11	TS0N0000000	Washer	1
G-12	TS0J0000000	shaft	1
G-13	TSPJX010000	Carton	1

RPV 4055 PRO engine

Pozice	Obj.číslo	Popis	Počet
1	30180-E05-0597	Starter	1
2	30200-E05-0078	Starter pull cup	1
3	30190-E05-0009	Starter cover	1
4	16674-X03-0067	Bolt	3
5	16674-X03-0000	Bolt	4
6	30140-E05-0015	Ignition switch	1
7	06177-X19-0003	Nut	1
8	30270-E05-0001	Starter cup	1
9	30020-E05-0005	Impeller	1
10	30010-E05-0014	Flywheel	1
11	30040-E05-0017	Igniter	1
12	16674-X03-0004	Bolt	2
13	13871-X40-0011	Oil seal	2
14	50110-E05-0000	Lower guard	1
15	16674-X03-0001	Bolt	1
16	40050-E12-0000	One-way valve clamp	1
17	10020-E07-0032	Casing	1
19	16674-X09-0000	Drain plug	1
20	00097-X27-0017	Flat washer	1
21	00276-X36-0002	Bearing	2
22	10230-E05-0000	Governor gear assembly	1
24	10080-E07-0003	Crankshaft	1
25	90113-X33-0001	Locating pin	2
26	14010-E05-0004	Crankcase seal	1
27	10310-E05-0001	Casing cover	1
28	10320-E05-0001	Oil dipstick assembly	2
30	16674-X03-0028	Bolt	6
31	10200-E06-0000	Camshaft	1
32	10190-E06-0000	Tappet	2
33	20210-E05-0000	Push rod	2
34	50100-E05-0000	Deflector	1

Pozice	Obj.číslo	Popis	Počet
35	10030-E05-0000	Pivot rod	1
36	00097-X27-0003	Flat washer	1
37	10040-E05-0000	Pivot rod snap ring	1
38	50020-E05-0000	Governor arm	1
39	01709-X10-0000	T-bolt	1
40	06177-X19-0009	Nut	3
41	10100-E05-0000	Connecting rod	1
42	10110-E07-0002	Piston	1
43	10170-E05-0000	Piston pin	1
44	10180-E05-0000	Piston pin retainer	2
45	10120-E07-0002	Piston ring set	1
46	14030-E07-0003	Cylinder head gasket	1
47	90113-X33-0005	Locating pin	2
48	20020-E07-0009	Cylinder head	1
49	05789-X04-0074	Bolt	4
50	20050-E05-0003	Spark plug FR7TC	1
51	20030-E07-0001	Intake valve	1
52	20040-E07-0002	Exhaust valve	1
53	20060-E05-0000	Oil deflector	1
54	20070-E05-0000	Valve spring	2
55	20100-E05-0000	Intake valve spring seat	1
56	20110-E05-0000	Exhaust Valve Spring Seat	1
57	20220-E05-0000	Top Cap	1
58	20120-E05-0000	Push Rod Bracket	1
59	20130-E05-0000	Rocker Arm Assembly	2
60	14040-E05-0000	Cylinder Head Cover Gasket	1
61	50060-E05-0000	Cylinder Head Cover	1
62	14070-E05-0001	Inlet Port Gasket	1
63	40020-E05-0000	Carburetor Heat Shield	1
64	00901-X17-0005	Bolt	2
65	14060-E05-0001	Carburetor Gasket	1

Pozice	Obj.číslo	Popis	Počet
66	60110-E05-0000	Exhaust Pipe	1
67	40010-E06-0046	Carburetor	1
68	14080-E05-0001	Air Filter Gasket	1
69	90686-X42-0014	Fuel Line	1
70	90740-X44-0000	Fuel Line Clamp	2
71	60010-E05-0003	Air Filter	1
72	75430-E05-0000	Air Filter Base	1
74	60020-E05-0007	Air Filter Element	2
77	60030-E05-0004	Air Filter Top Cover	1
78	50010-E05-0028	Throttle Control Bracket	1
79	50050-E05-0000	Linkage Rod	1
80	50030-E05-0000	Throttle Spring	1
81	50040-E05-0000	Reset Spring	1
82	00901-X17-0014	Bolt	2
83	14120-E05-0001	Exhaust Port Gasket	1
84	70010-E05-0092	Muffler	1
85	06170-X18-0001	Nut	2
86	80010-E05-0182	Fuel Tank	1
87	80020-E05-0001	Fuel tTank Strainer	1
88	80040-E05-0020	Fuel Tank Cap	1
89	05789-X04-0030	Bolt	1
90	00093-X26-0002	Spring Washer	2