



Pozice	Obj.číslo	Popis	Počet
1	20084362	CHOKE KNOB	1
2	20051803	SCREW M4×16	2
3	20061531	WASHER 4	2
4	20071241	THROTTLE CABLE	1
5	20084876	ENGINE	1
6	20061285	TAPPING SCREW 3/8"-16-1 1/4"	3
7	20070519	FLAT KEY 6.35×30	1
8	20070850	Engine pulley weldment	1
9	20088530	SUPPORT	1
10	20082800	Tapping screw M6×16	12
11	20092424	Electric clutch	1
12	20085758	Clutch Step Bushing	1
13	20078309	Taper washer 12	1
14	20062410	BOLT, 7/16"-20- 3",UNF	1
15	20085121	Clutch clamp plate	1
16	20061348	FLANGE LOCK NUT M8	3
17	20093072	Clutch baffle (small bin)	1
18	20061299	BOLT M8×20	2
19	20061254	FLANGE BOLT M8×40	1
20	20084881	EXHAUST PIPE	1
21	20060850	SCREW 5/16"-18 -3/4"	2
22	20061453	Spring washer 5/16"	2
23	20070868	GASKET	1

24	20071214	MUFFLE	1
25	20095299	REAR SHIELD	1
26	20084296	BRACKET	1
27	20061541	BIG WASHER 8	2
28	20082799	FLANGE BOLT 5/16-18TX3/4	2
29	20070630	BUCKLE NUT M6	2
30	20095300	FRONT SHIELD	1

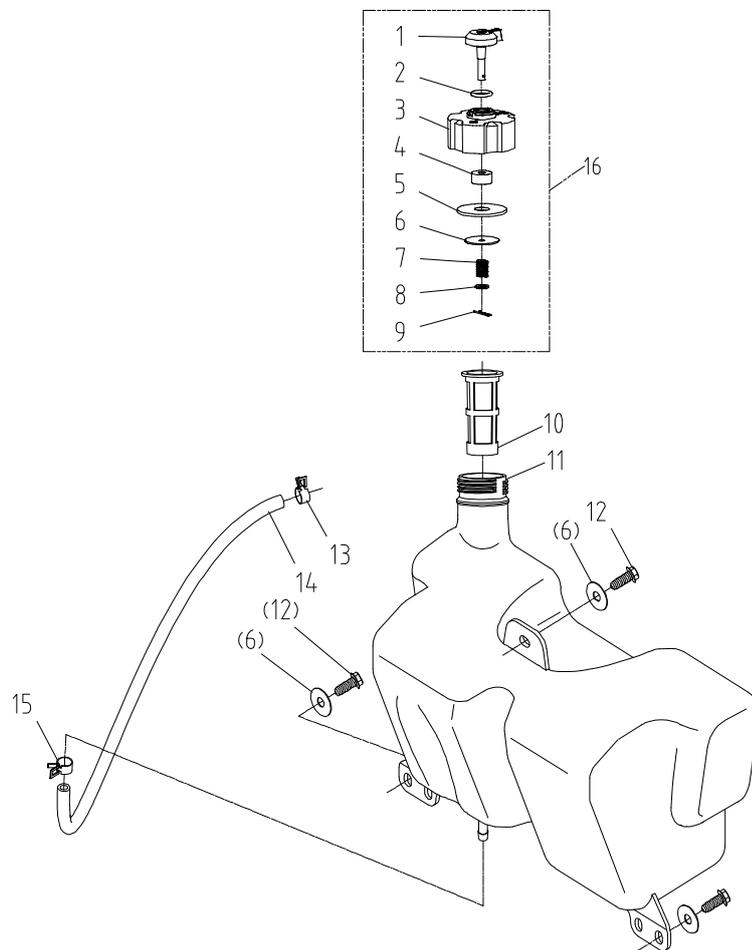


Pozice	Obj. číslo	Popis	Počet
1	20059754	FUEL TANK CAP LEVER	1
2	20071493	O RING	1
3	20059760	FUEL TANK CAP	1
4	20059763	FUEL TANK CAP FILTER	1
5	20071494	FUEL TANK CAP SEAL	1
6	20071676	GASKET 6×25×1.5	4
7	20059764	FUEL TANK CAP SPRING	1
8	20061445	WASHER 5	1
9	20059765	SPLIT PIN	1
10	20059766	FILTER CAP	1
11	20071228	FUEL TANK	1
12	20082800	Tapping screwM6*1	3
13	20062744	CLIP φ10	1
14	20070865	FUEL HOSE	1
15	20071161	CLIP φ10	1
16	20071747	FUEL TANK CAP ASY	1

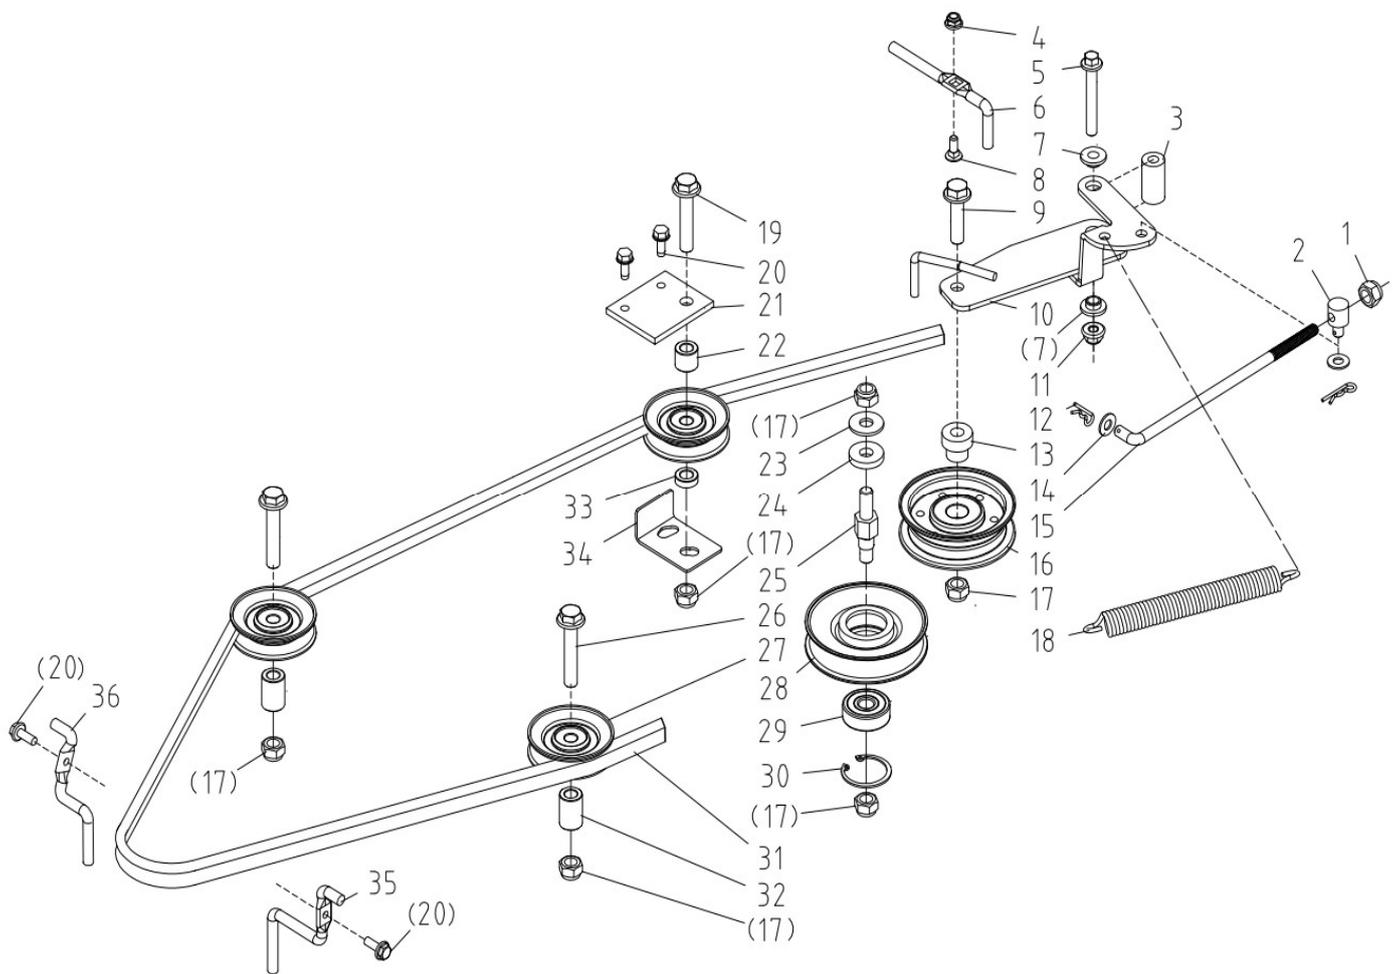


Pozice	Obj. číslo	Popis	Poččet
1	20061415	LOCK NUT M8	1
2	20070581	GEAR SHIFT PIN	1
3	20084436	SPACER $\text{C}8 \times \text{C}18 \times 33$	1
4	20061385	Hexagon flange lock nut M6	1
5	20061275	FLANGE BOLT M8×60	1
6	20084713	LEFT FRONT BELT GUIDE	1
7	20070780	Bushing	2
8	20061289	Bolt M6X16	1
9	20062521	FLANGE BOLT M10×1.25×40	1
10	20090612	DRIVING TENTION ARM WELDMENT	1
11	20061336	FLANGE NUT M8	1
12	20070582	Cotter pin	2
13	20071180	TENTION PULLEY BUSHING	1
14	20062716	Washer 8	2
15	20084710	LINKED PUTTER	1
16	20099153	TENTION PULLEY	1
17	20061403	LOCK NUT M10×1.25	6
18	20070875	Traveling tension spring	1
19	20061261	FLANGE BOLT M10×1.25×55	1
20	20082800	Tapping screw M6*16	4
21	20084715	GUIDE PULLEY BASE PLATE	1
22	20084712	LEFT FRONT GUIDE PULLEY CUSHION SLEEVE	1
23	20061542	BIG WASHER 10	1
24	20062499	Washer $\text{C}27 \times \text{C}10.5 \times 5$	1
25	20084441	Tensioning wheel bolt	1
26	20062515	FLANGE BOLT M10×1.25×50	2
27	20071208	DRIVING GUIDE PULLEY	3

28	20070536	TENTION PULLEY	1
29	20092588	BEARING 6301-2RS	1
30	20061549	SNAP RING 37	1
31	20086594	V-belt LG4-1050, HA2645	1
32	20084442	GUIDE PULLEY CUSHION SLEEVE	2
33	20088483	WASHER ϕ 10x ϕ 18x7	1
34	20097685	BELT GUIDE	1
35	20084716	RIGHT BELT GUIDE	1
36	20084709	LEFT BELT GUIDE	1

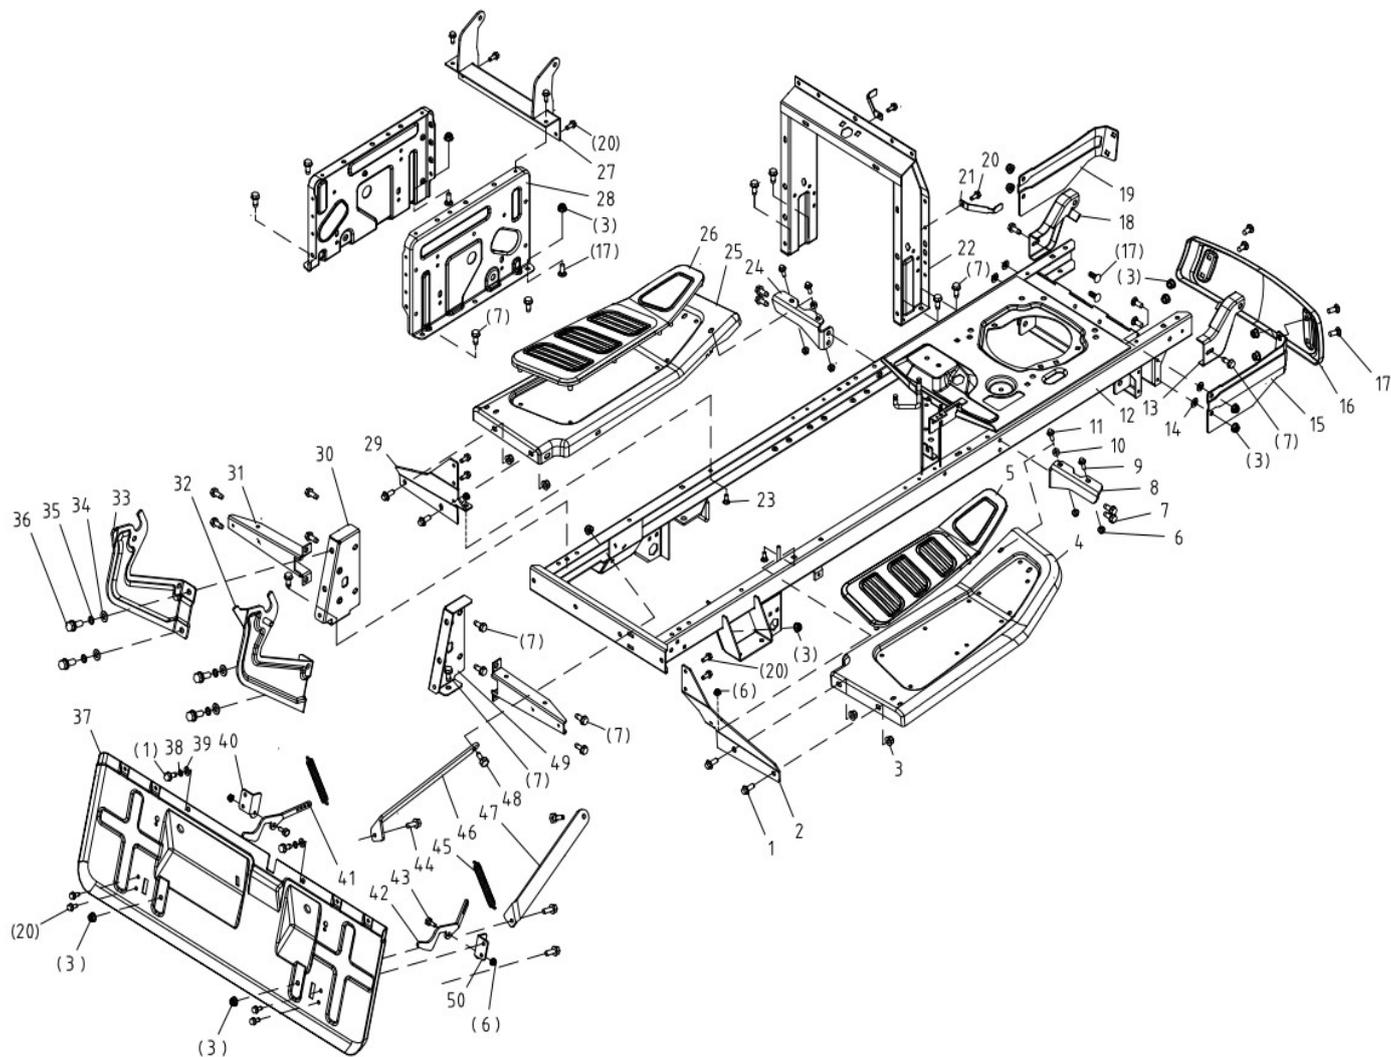


Pozice	Obj.číslo	Popis	Počet
1	20061274	FLANGE BOLT M8×20	6
2	20084428	Right foot step suspension plate	1
3	20061348	FLANGE LOCK NUT M8	18
4	20084430	Right pedal	1
5	20084393	Foot pad right	1
6	20061385	Hexagon flange lock nut M6	8
7	20082799	FLANGE BOLT 5/16-18TX3/4	24
8	20084427	Foot forward support right	1
9	20061200	FLANGE BOLT M6×16	2
10	20070916	BUSHING	2
11	20061196	FLANGE BOLT M6×25	2
12	20097093	Frame Welldment	1
13	20098969	Right side of hood bracket	1
14	20062405	WASHER6,LOCK	2
15	20095181	Collision bar extension right	1
16	20085086	bumper	1
17	20061299	BOLT M8×20	10
18	20098968	Left side of hood bracket	1
19	20095166	Collision bar extension left	1
20	20082800	Tapping screwM6*16	14
21	20084384	Pillar rear cover support plate	2
22	20097072	Column frame welding parts	1
23	20061289	Bolt M6X16	2
24	20084422	Foot forward support left	1
25	20084429	Left pedal	1
26	20084388	Foot pad left	1

27	20084417	Seat font crossbeam weldment	1
28	20084399	Side standing plate	2
29	20084414	Left foot step suspension plate	1
30	20098364	Left side of trapezoidal connecting plate weldment	1
31	20084385	Rear baffle bracket	2
32	20084420	Rotaing bracket right weldment	1
33	20084419	Rotaing bracket left weldment	1
34	20061497	WASHER 10	4
35	20061536	SPRING WASHER 10	4
36	20061316	Hexagonal head bolt M10x1.5x30, GB/T5783	4
37	20084387	Tailgate	1
38	20061533	SPRING WASHER 8	2
39	20061426	WASHER 8	2
40	20084390	Pull hook seat left	1
41	20085354	Hook L	1
42	20087837	Hook R	1
43	20070649	Pin screw M6	2
44	20061298	FLANGE BOLT M8x25	2
45	20070645	Straw bag buckle tension spring	2
46	20084418	Rear strut left	1
47	20084412	Rear strut right	1
48	20084421	Step bolt M8*20	2
49	20098362	Right side of trapezoidal connecting plate weldment	1
50	20084381	Pull hook seat right	1

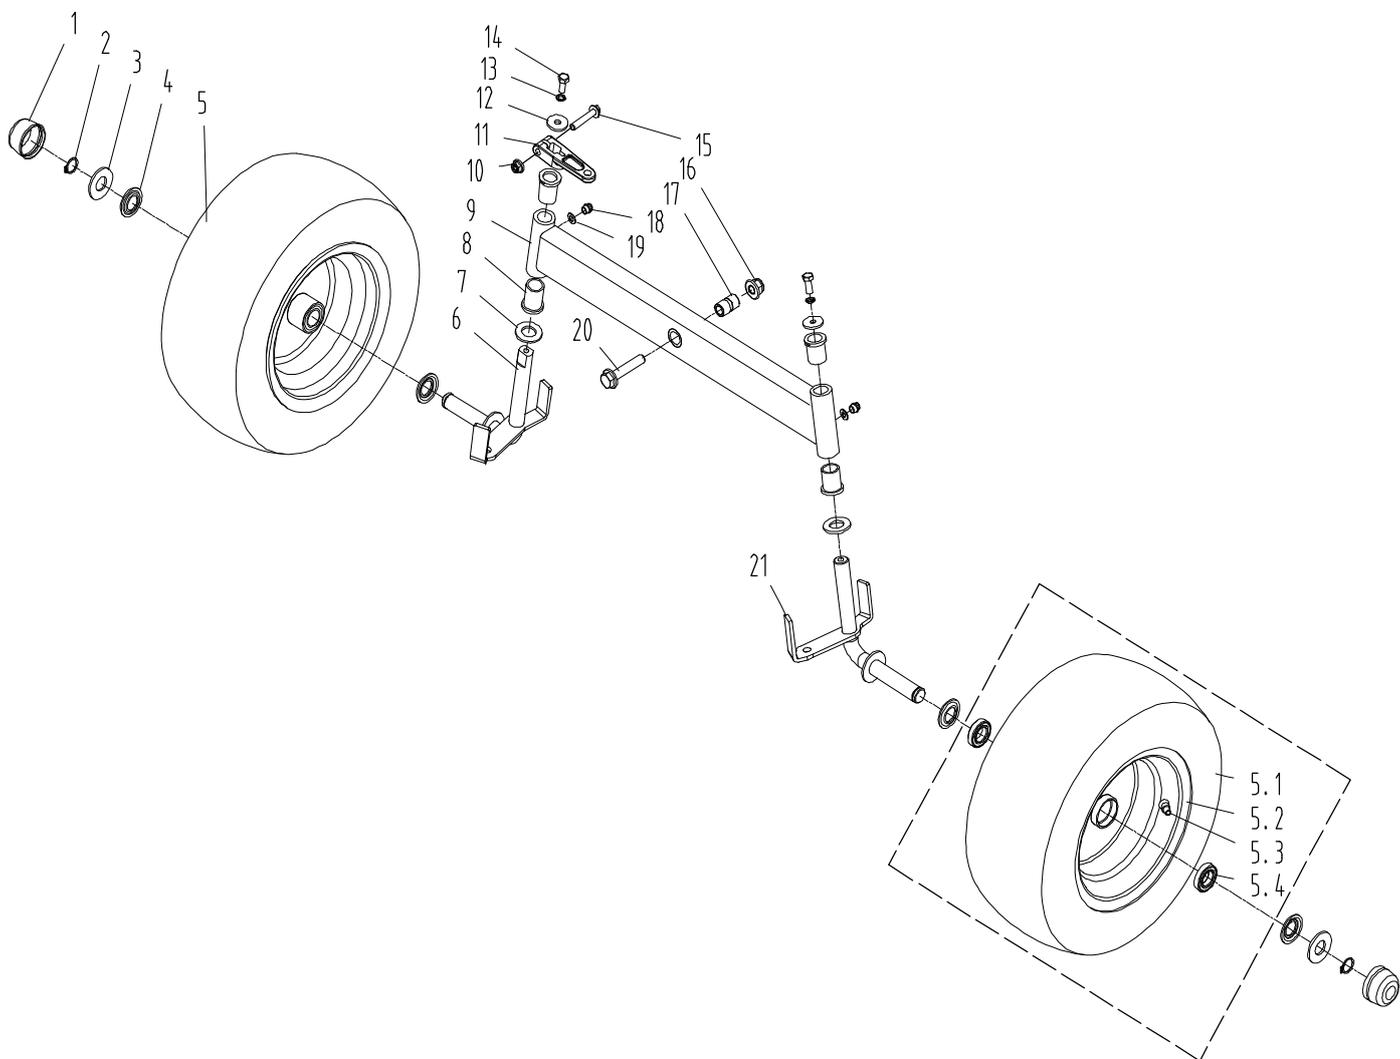


Pozice	Obj.číslo	Popis	Počet
1	20068187	HUB COVER	2
2	20061488	SNAP RING 19	2
3	20071143	WASHER $\phi 20 \times \phi 43 \times 3$	2
4	20071144	WASHER	4
5	20086529	Front wheel assembly	2
5,1	20083980	FRONT WHEEL ASSEMBLY	2
5,2	20071149	FRONT WHEEL ASSEMBLY	2
5,3	20061665		2
5,4	20092587	BEARING 61904-2RZ	4
6	20084372	Front Axle RH	1
7	20061444	WASHER 20	2
8	20070566	BUSHING	4
9	20084364	FRONT AXLE WELDMENT	1
10	20061348	FLANGE LOCK NUT M8	1
11	20070941	TURNNG ARM	1
12	20091656	WASHER	2
13	20061533	SPRING WASHER 8	2
14	20061291	BOLT M8×20	2
15	20061256	FLANGE BOLT M8×45	1
16	20061359	FLANGE LOCK NUT M12×1.25	1
17	20084370	LINER TUBE	1
18	20092292	OIL INJECTION NOZZLE	2
19	20061482	WASHER6	2
20	20085752	FLANGE BOLT M12×1.25×55	1
21	20084367	Front Axle LH	1

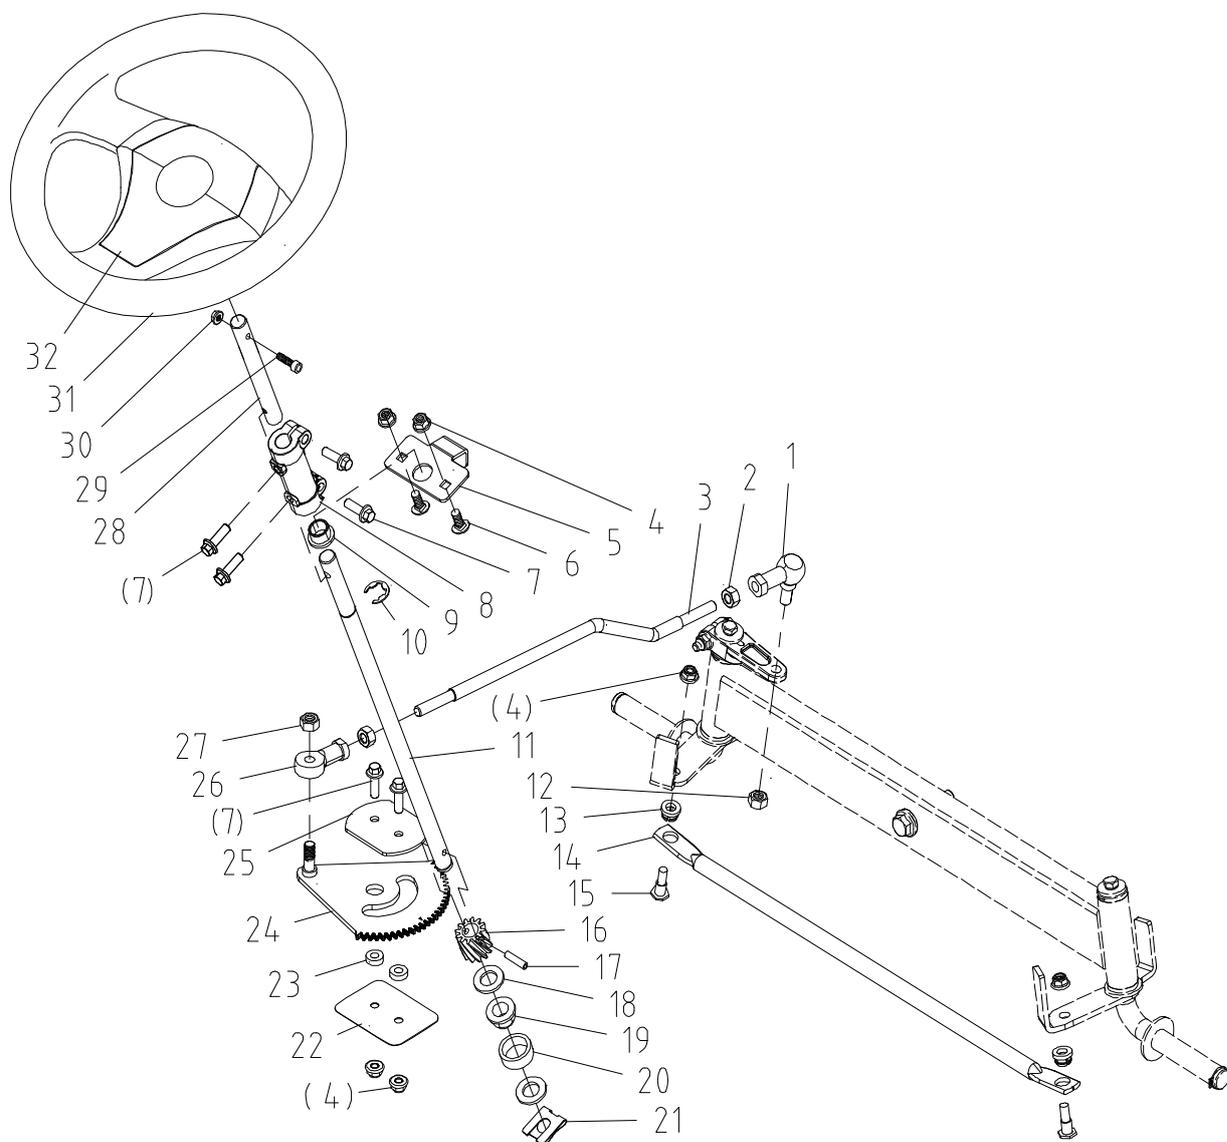


Pozice	Obj. číslo	Popis	Počet
1	20085366	JOINT BEARING M10	1
2	20061399	NUT M10	2
3	20084461	STEERING DRAG ROD	1
4	20061348	FLANGE LOCK NUT M8	6
5	20084463	SQUARE HOLE CARD BOARD	1
6	20061299	SCREW M8×20	2
7	20061298	FLANGE BOLT M8×25	6
8	20083389	Couplings	1
9	20082643	HATCH BUSHING	1
10	20061548	SNAP RING 15	1
11	20084458	Steering column	1
12	20061419	LOCK NUT M10	1
13	20084462	ELASTIC RUBBER BUSH	2
14	20084456	STEERING TIE ROD	1
15	20084459	PIN SCREW M8×28	2
16	20084457	STEERING GEAR LEFT	1
17	20097032	PIN 6×26	1
18	20061437	WASHER 16	2
19	20070612	HEXAGON BUSHING	1
20	20071127	BUSHING	1
21	20085898	SNAP RING 16	1
22	20070939	TIE PLATE	1

23	20070932	BUSHING	2
24	20084464	STEERING GEAR PLATE WELDMENT	1
25	20070942	DOUBLE HOLE BOARD	1
26	20061641	JOINT BEARING SIJK10C	1
27	20061403	LOCK NUT M10×1.25	1
28	20084468	STEERING WHEEL ROD B	1
29	20060880	SCREW M6×35	1
30	20061385	FLANGE LOCK NUT M6	1
31	20070944	STEERING WHEEL	1
32	20070945	STEERING WHEEL CAP	1

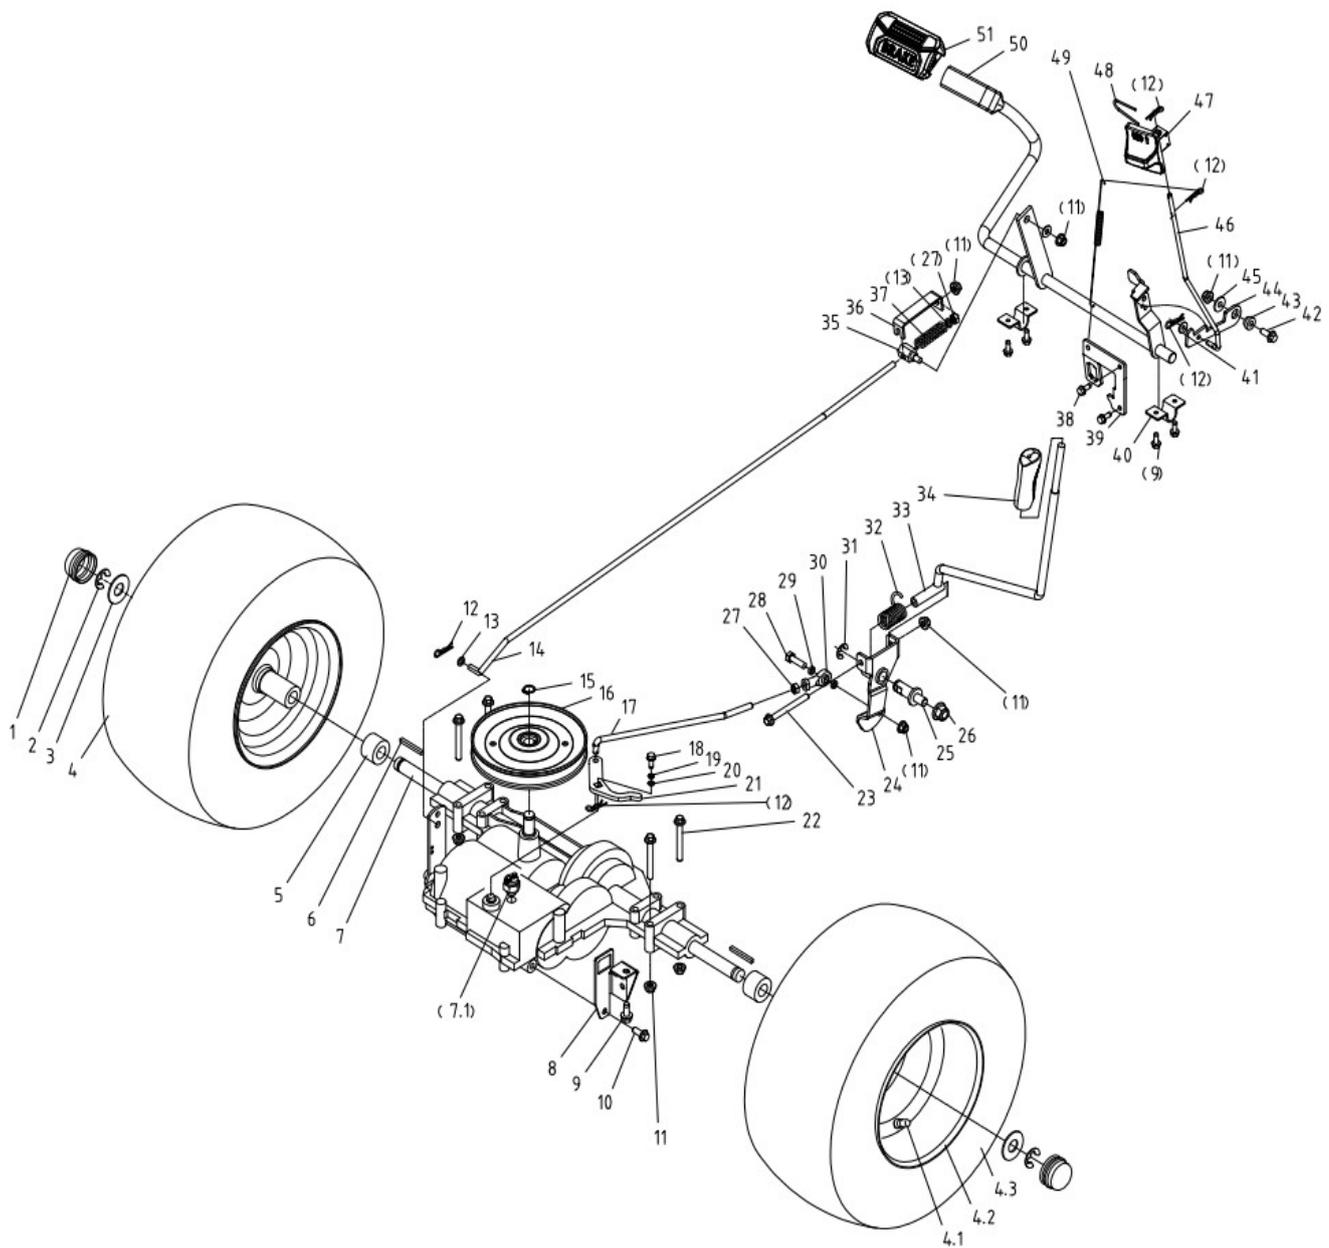


Pozice	Obj.číslo	Popis	Počet
1	20068187	HUB COVER	2
2	20061430	RETAINER RING 15	2
3	20071143	WASHER $\phi 20 \times \phi 43 \times 3$	2
4	20086530	REAR WHEEL ASSEMBLY	2
4,1	20061665		2
4,2	20089809		2
4,3	20093132		2
5	20090165	Spacer	2
6	20071174	FLAT KEY 4.75 x 4.75 x 60	2
7	20093046	GEAR BOX	1
8	20093424	GEAR BOX CONNECTING PLATE	1
9	20082799	FLANGE BOLT 5/16-18TX3/4	5
10	20061309	FLANGE BOLTM8x16	1
11	20061348	FLANGE LOCK NUT M8	9
12	20070582	Cotter pin	5
13	20061426	Washer $\Phi 8$	2
14	20084684	BRAKE LEVEL	1
15	20061434	SNAP RING 16	1
16	20070884	DRIVING PASSIVE WHEEL	1
17	20093320	Gear shift rod	1
18	20061273	BOLT 1/4"-28 -3/4"	1


19	20061487	SPRING WASHER 6	1
20	20061539	BIG WASHER 6	1
21	20093319	Gear shift arm	1
22	20061310	FLANGE BOLT 8x65	4
23	20083999	FLANGE BOLT M8x80	1
24	20084697	GEAR SHIFT LEVER WELDMENT	1
25	20084686	GEAR SHIFT AXLE PIN	1
26	20061359	FLANGE LOCK NUT M12x1.25	1
27	20061393	Nut M8	2
28	20061290	Bolt M8X35	1
29	20070564	Spacer	2
30	20061628	Joint bearing SIJK8C	1
31	20061473	Snap Ring 12	1
32	20084702	SPRING $\Phi 3.5 * \Phi 20$	1
33	20084692	GEAR SHIFT LEVER WELDMENT	1
34	20070900	HANDLE	1
35	20084700	PIN	1
36	20084705	GROOVE ADJUSTING PLATE	1
37	20084706	SPRING c2.5xc14	1
38	20082800	Tapping screwM6*16	2
39	20089015	brak switch sert plate	1
40	20089912	U-SHAPED CLAMP	2
41	20061482	WASHER 6	1
42	20061250	FLANGE BOLT M8x25	1
43	20088842	Step cover	1
44	20090105	Parking hook	1
45	20061541	BIG WASHER 8	1
46	20090104	Drag Link,Brake Parking	1
47	20096210	BRAKE HANDLE RAL3002	1
48	20084581	U BOLT	1
49	20070894	CLUTCH LEVER SPRING	1
50	20088848	BRAKE FOOT BAR WELDMENT(MANUAL)	1
51	20082728	BRAKE PEDAL	1

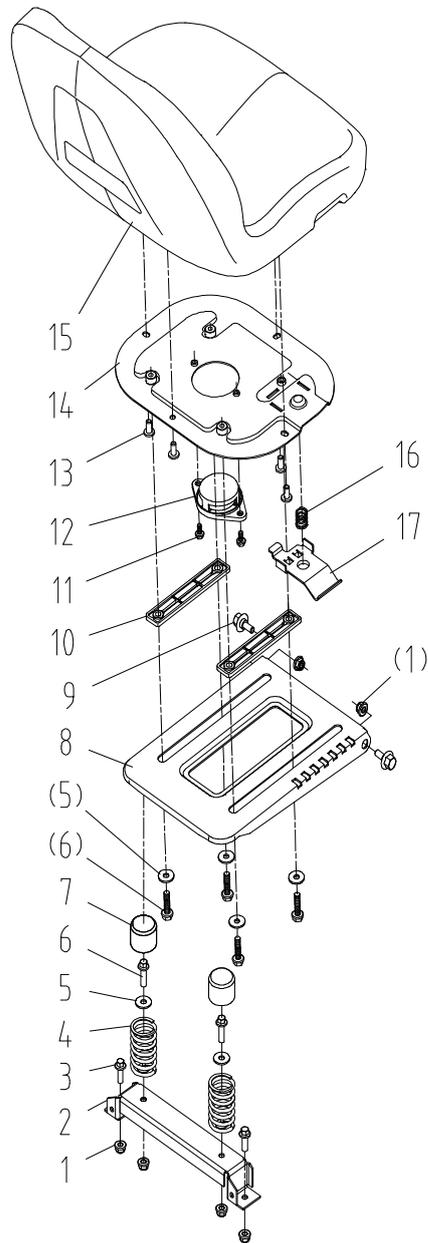

Pozice	Obj.číslo	Popis	Počet
1	20061348	FLANGE LOCK NUT M8	6
2	20084447	SEAT BACK BEAM	1
3	20061274	FLANGE BOLT M8×20	2
4	20070964	SEAT SPRING	2
5	20061541	BIG WASHER	6
6	20061298	FLANGE BOLT M8×25	6
7	20068240	SPRING CAP	2
8	20092225	Justable seat base plate	1
9	20088755	Seat screws	2
10	20088754	Seat cushion strip	2
11	20082800	Tapping screw M6*16	2
12	20088756	Seat switch components	1
13	20062556	Hexagon socket flat round head screw M8x20, GB/T70.2	4
14	20091256	Seat plate	1
15	20091255	SEAT ZIZY10-3	1
16	20091602	SPRING	1
17	20092317	Seat adjustment plate	1

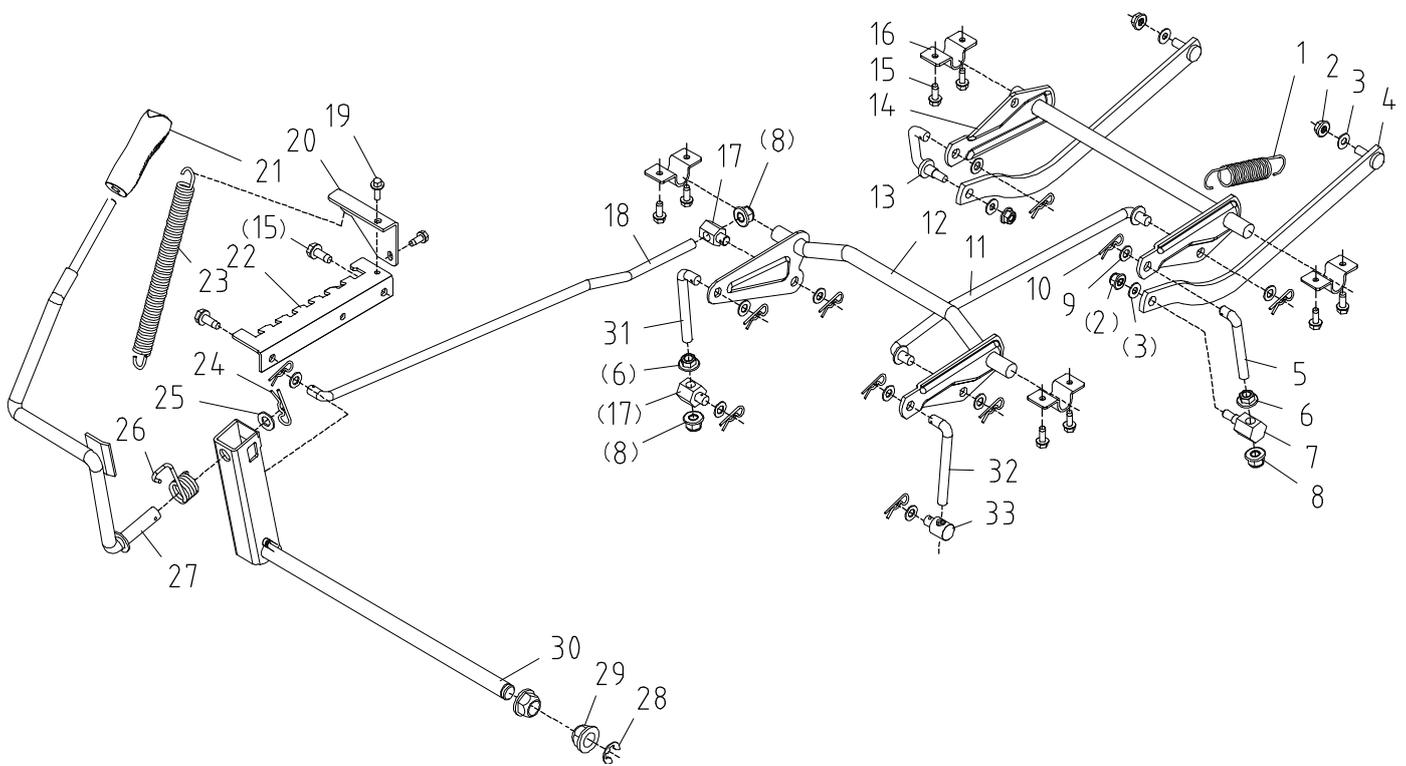


Pozice	Obj.číslo	Popis	Počet
1	20095090	SPRING	1
2	20061348	FLANGE LOCK NUT M8	4
3	20061541	BIG WASHER	4
4	20084556	FRONT STAY BAR WELDMENT	2
5	20084557	FRONT RIGHT DERRICK	1
6	20061369	Hexagon nut 10X1.25	2
7	20084533	PIN	1
8	20061405	FLANGE LOCK NUT M10x1.25	3
9	20061497	WASHER 10	10
10	20070576	SPRING PIN	10
11	20094478	LIFTING LINK ROD WELDMENT(REAR DISCHARGE)	1
12	20084539	REAR ARM WELDMENT(Rear)	1
13	20084553	U DERRICK WELDMENT	1
14	20084560	FRONT ARM WELDMENT	1
15	20082799	FLANGE BOLT 5/16-18TX3/4	10
16	20089912	U-SHAPED CLAMP	4
17	20085750	Pin joint TTM86S, electroplated	2
18	20084563	LIFTING PULL ROD(REAR DISCHARGE)	1
19	20082800	Tapping screwM6*16	2
20	20085316	Spring hanging plate TTM86, electroplating	1
21	20070900	HANDLE	1
22	20084549	RATCHET PLATE	1
23	20084564	LIFTING HELPING SPRING	1
24	20071251	Cotter pin $\phi 3$	1
25	20062529	WASHER 14x1.5	1
26	20071354	RIGHT SPRING	1
27	20084535	LEVEL WELDMENT	1
28	20061473	RETAINER RING 12	1
29	20070612	HEXAGON BUSHING	2
30	20092440	Deck Lift Shift Assemble	1
31	20085749	Rear Right adjusting lever TTM86S,electroplated	1
32	20085865	Rear right suspension rod electroplating	1
33	20094217	ADJUSTING PIN	1

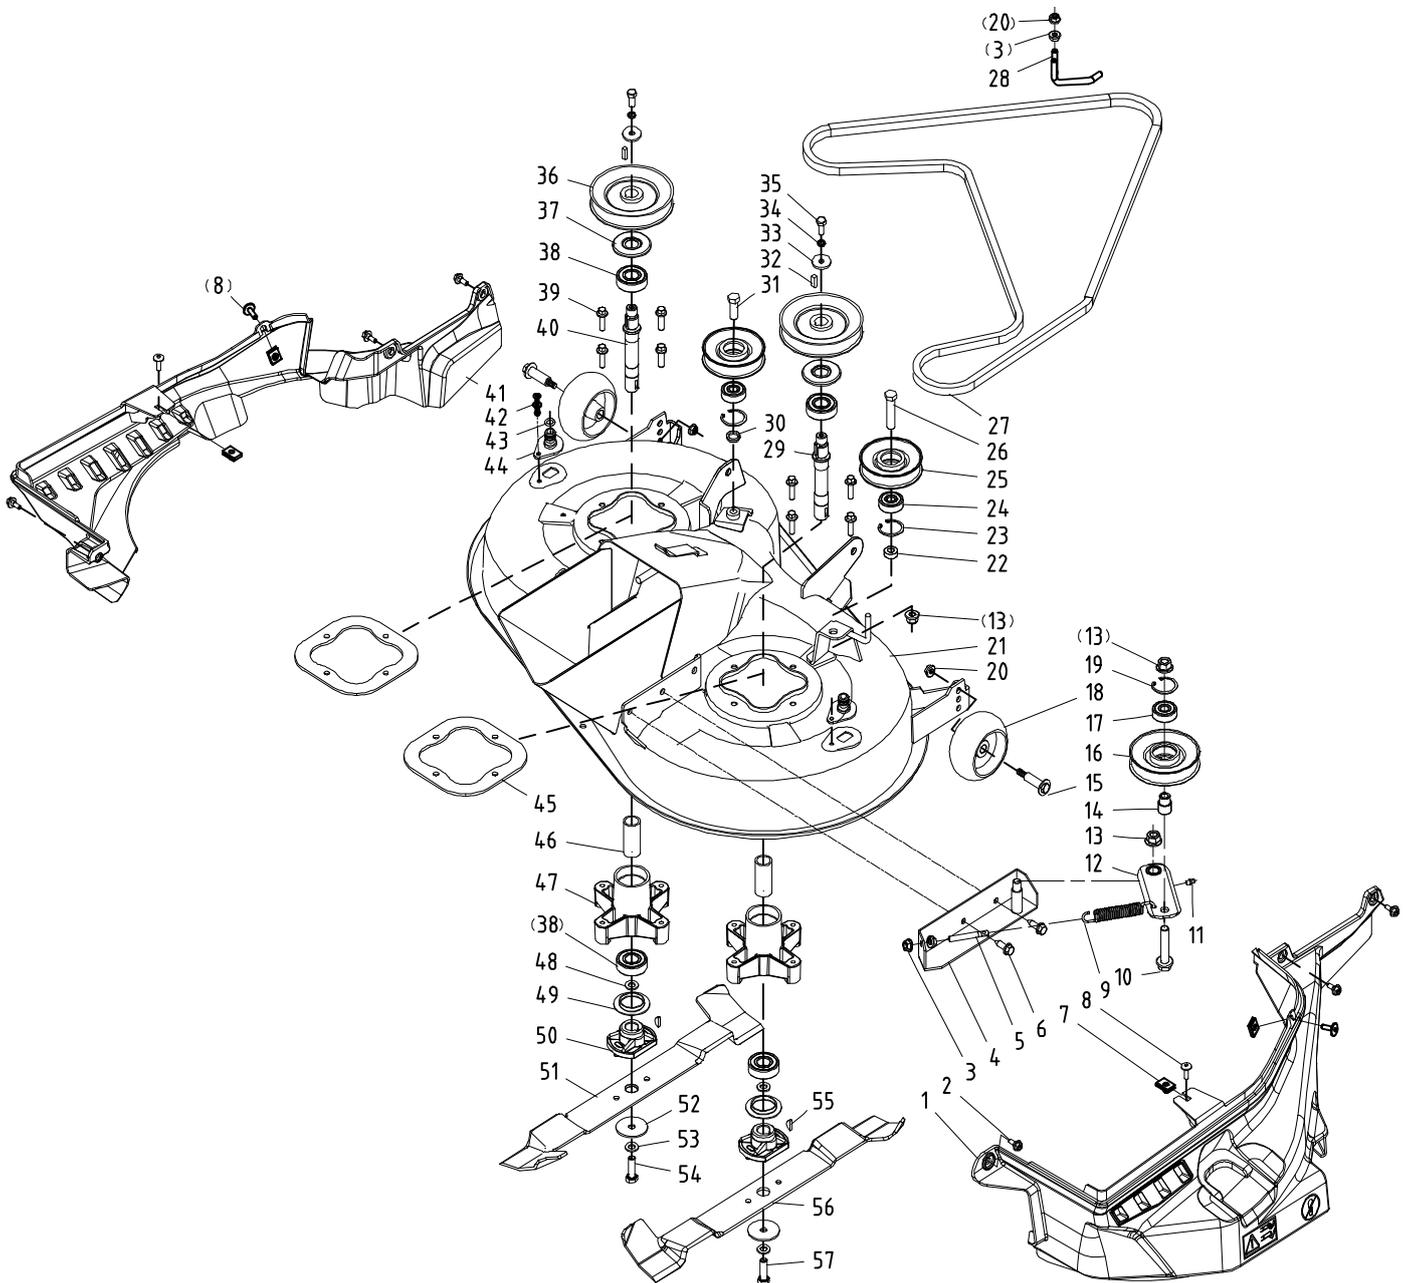


Pozice	Obj.číslo	Popis	Počet
1	20088572	BELT COVER RIGHT	1
2	20082801	Hexagon Head Tapping Screw6.3x11.5	6
3	20061336	FLANGE NUT M8	3
4	20084618	CUT TENTION SUPPORT WELDMENT	1
5	20084542	ADJUSTING SCREW ROD	1
6	20082799	FLANGE BOLT5/16-18TX3/4	2
7	20070630	BUCKLE NUT M6	4
8	20060893	SCREW M6x16	4
9	20084598	TRACTION SPRING	1
10	20061286	Hexagon bolt M12x1.25x50	1
11	20092292	OIL INJECTION NOZZLE	1
12	20084615	CUT TENTION ARM WELDMENT	1
13	20061359	FLANGE LOCK NUT M12x1.25	3
14	20084617	TENTION PULLEY CUSHION COVER	1
15	20085378	Wheel Axle	2
16	20084596	TENTION PULLEY WELDMENT TTM86,Plating white zinc passivation	1
17	20092589	BEARING 6203-2RZ	1
18	20088559	WHEEL	2
19	20061540	CIRCLE 40	1

20	20061348	FLANGE LOCK NUT M8	3
21	20089338	DECK WELDMENT	1
22	20084610	RIGHT GUIDE WHEEL CUSHION COVER	1
23	20061549	SNAP RING 37	2
24	20092588	BEARING 6301-2RS	2
25	20070536	TENTION PULLEY	2
26	20084604	BOLT	1
27	20089908	BELT LG2001784	1
28	20088710	Clutch lever welding part TTM86	1
29	20083936	RIGHT BLADE AXLE	1
30	20061452	SPRING WASHER 12	1
31	20062310	BOLT	1
32	20061650	FLAT KEY C6×18	2
33	20091656	WASHER	2
34	20061472	Spring washer 8	2
35	20061274	Hexagon bolt M8x20	2
36	20085352	PULLEY	2
37	20071285	Hood, Bearing	2
38	20092592	Bearing 6204-2RZ	4
39	20061265	FLANGE BOLT M8x35	8
40	20083934	LEFT BLADE Axle	1
41	20088573	BELT COVER LEFT	1
42	20085899	Plastic expansion rivets	2
43	20055756	O RING 11.2×2.65	2
44	20084822	WATER NOZZLE	2
45	20093234	Deck disc reinforcement plate	2
46	20071282	Pivot tube	2
47	20054352	Cuttter house	2
48	20071283	Spacer ring	2
49	20071286	Washer 50x20.2x2	2
50	20054345	Sleeve	2
51	20084826	Left brade	1
52	20070623	Saucer washer	2
53	20061497	WASHER 10	2
54	20061267	Bolt 3/8-24unf	1
55	20061651	HALFMOON KEY 4×16	2
56	20084829	RIGHT BLADE	1
57	20061266	LH Bolt 3/8-24-1.25"-1.25-LH	1

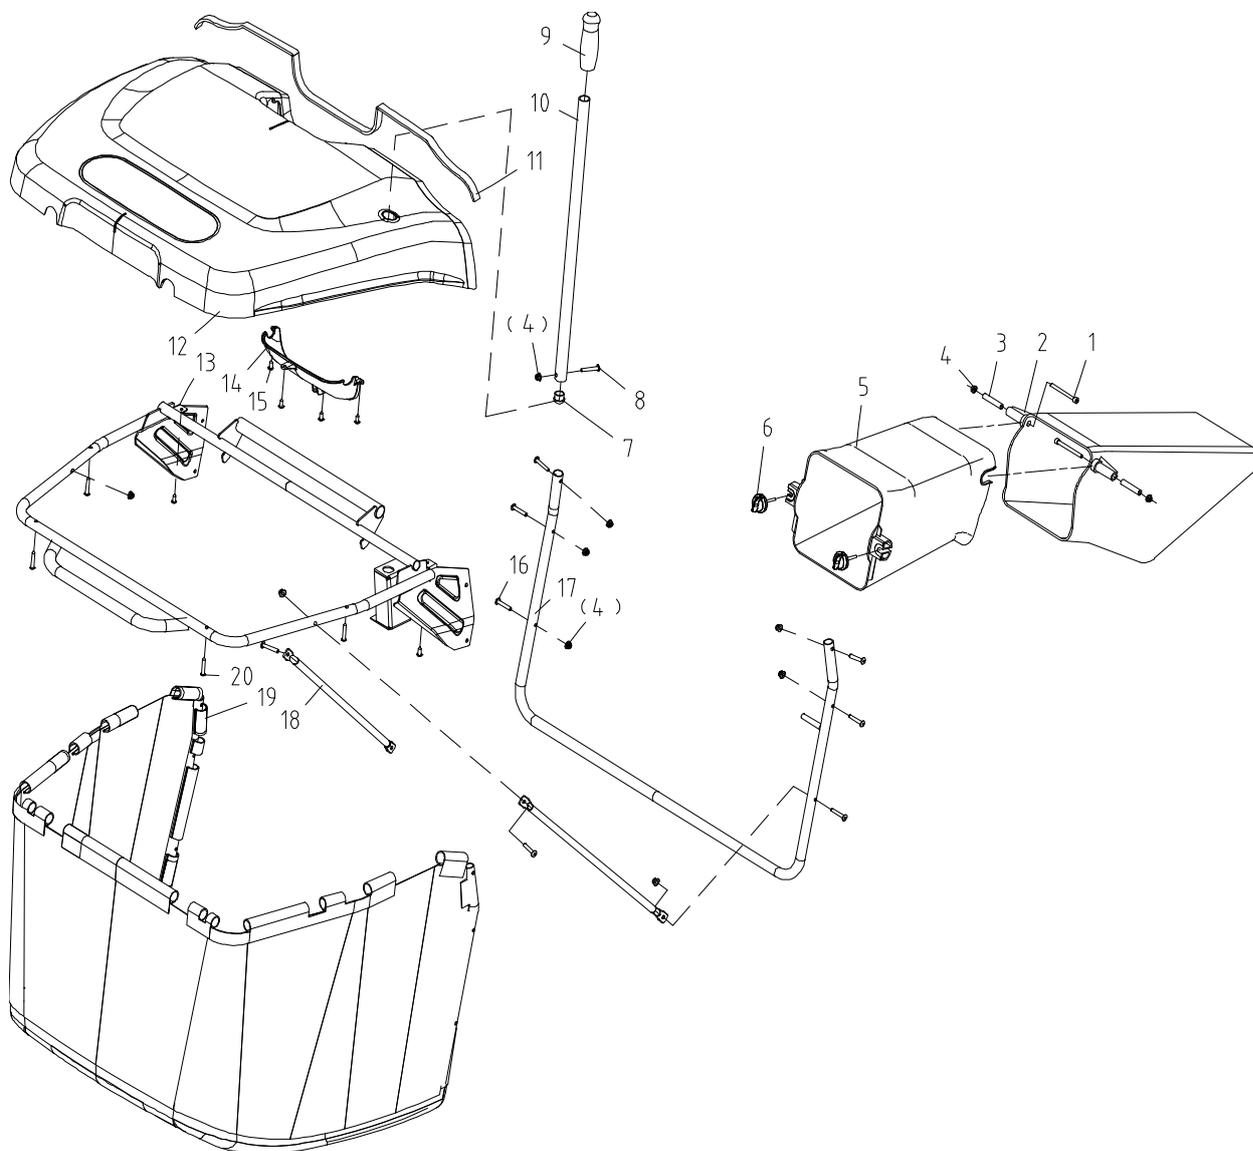


Pozice	Obj.číslo	Popis	Počet
1	20084300	Screw M6X65	2
2	20085874	Front grass collectorTTM86, K46/T2	1
3	20084482	SPACER $\Phi 6 * \Phi 10 * 48$	2
4	20061385	Hexagon lock nut M6	11
5	20085875	Rear grass collector TTM86, K46/T2	1
6	20086201	lock knob	2
7	20070642	Core plug	1
8	20060905	SCREW M6 \times 30	1
9	20070643	Handle	1
10	20071295	Lever	1
11	20071687	Sealing Wool TTM86	1
12	20084479	COVER (starry gray)	1
13	20084469	GRASS COLLECTING FRAME FRONT SUPPORT WELDMENT	1
14	20084472	HANDLE DECPRATIVE PLATE	1
15	20084298	Tapping screw ST4.8x16	6
16	20061246	HEXAGON BOLTM6x35	8
17	20084483	GRASS COLLECTING FRAME STATE SUPPORT WELDMENT	1
18	20084488	Side stay pipe	2
19	20084473	GRASS CATCHER(BOTTOM+CATCHER)	1
20	20084299	Tapping screw ST5.5x35	4

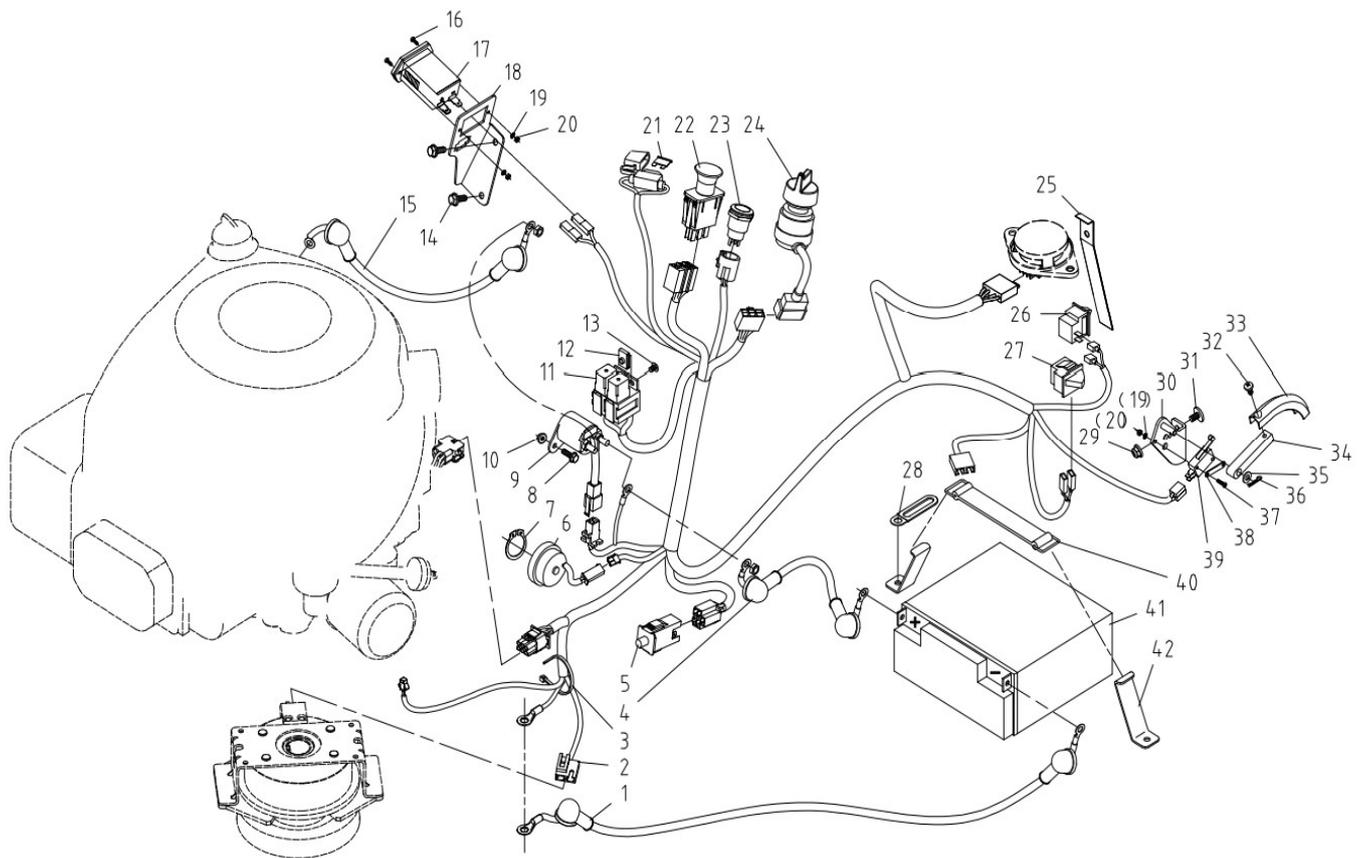


Pozice	Obj.číslo	Popis	Počet
1	20085496	GROUND CABLE	1
2	20097576	Electric cable (electric start)	1
4	20084624	Battery cable	1
5	20093538	SWITCH,PLUNGER	1
6	20070813	Buzzer	1
7	20061492	Axial elastic ring $\Phi 24$	1
8	20061186	BOLT M5 \times 16	2
9	20071221	STAR RELAY	1
10	20061341	FLANGE LOCK NUT M5	2
11	20089006	RELAY YAP23H-12-HR	2
12	20089880	BUCKLE NUT M5	1
13	20061195	Screw M5 \times 12	1
14	20082800	Tapping screwM6*1	4
15	20084637	POWER CABLE	1
16	20087039	Screw M3 \times 12	2
17	20081704	METER,HOUR, SYS-1, 10-80V	1
18	20093179	BRACKET,SOLENOID+HOURMETER	1
19	20084633	Washer 3	4
20	20061334	Nut M3	4
21	20085696	FUSE BRM148S, 20A	1
22	20097587	SWITCH,PTO	1
23	20096310	SWITCH	1
24	20089345	Electric door lock	1
25	20097686	spring plate	1
26	20086271	SWITCH	1
27	20086270	SWITCH	1
28	20089223	Wire clamp	1
29	20061385	Hexagon flange lock nut M6	2
30	20084622	Switch base	1
31	20060893	Screw M6*16	2

32	20051776	Tapping screw ST4.2*10	1
33	20084640	Hook	1
34	20095150	Switch lever	1
35	20061539	Washer $\Phi 6$	1
36	20059765	SPLIT PIN	1
37	20051763	Screw M3*20	2
38	20098555	Washer	1
39	20071232	Switch	1
40	20070744	Belt	1
41	20092080	BATTERY 12V 18Ah	1
42	20084632	HOOK	2

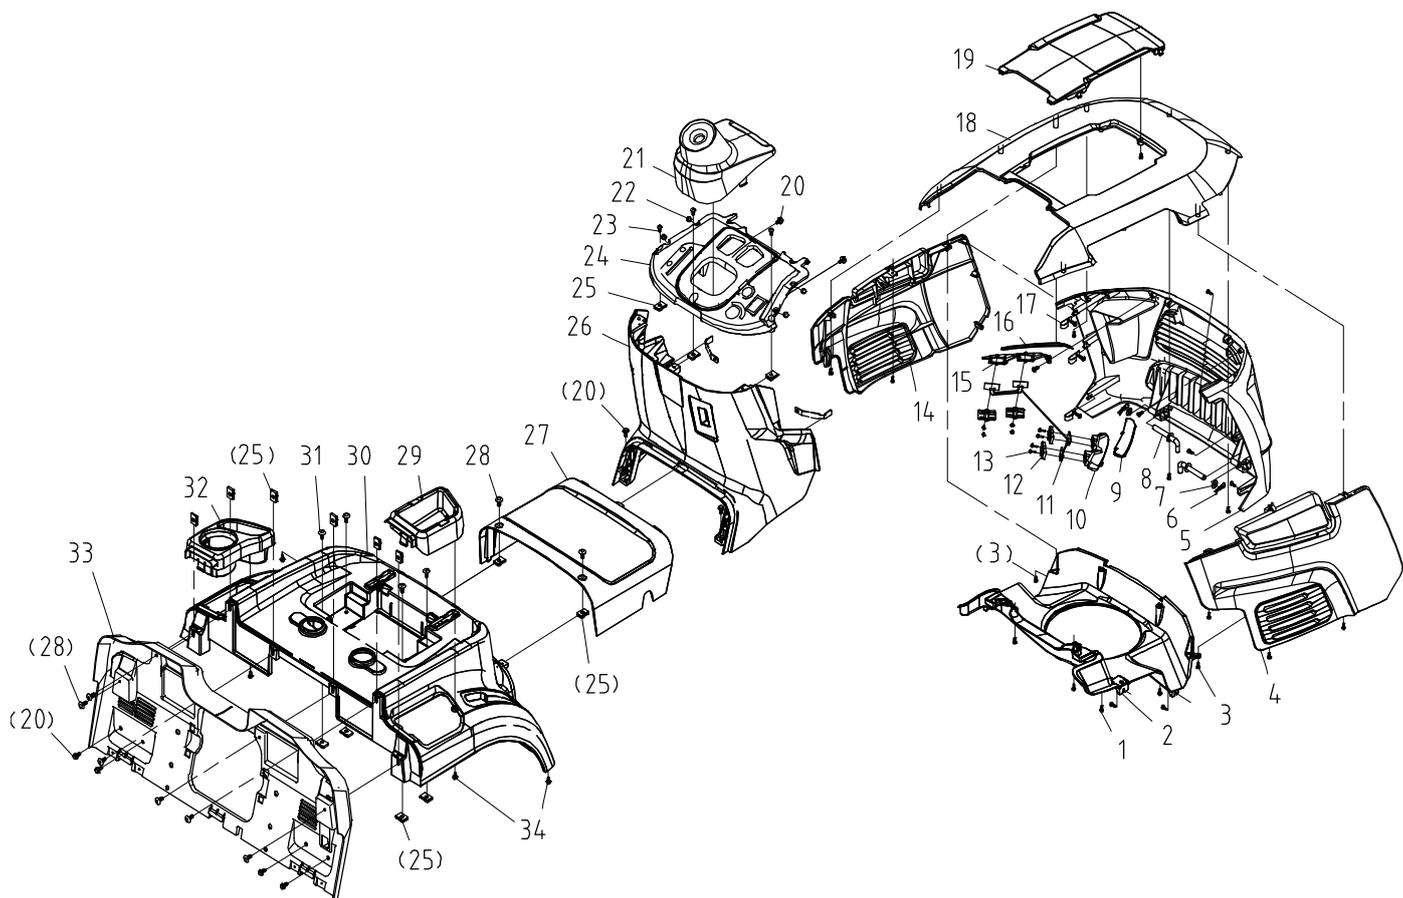


Pozice	Obj.číslo	Popis	Počet
1	20061038	SCREW ST4.8×16	27
2	20084507	AIR DIRECTOR	1
3	20084497	SCREW ST4.8×20	2
4	20084504	RIGHT SIDE COVER	1
5	20084511	FRONT COVER	1
6	20070576	SPRING PIN	2
7	20061497	WASHER 10	2
8	20078136	PIN	2
9	20084500	LEFT LIGHT COVER	1
10	20085780	RIGHT LIGHT BASE TTM86,Bright silver plating	1
11	20092360	Light	1
12	20085735	Lamp Base cover TTM86, black	4
13	20051768	TAPPING SCREW ST2.9x12	8
14	20084502	LEFT SIDE COVER	1
15	20085779	LEFT LIGHT BASE TTM86,Bright silver plating	1
16	20084508	LEFT LIGHT COVER	1
17	20050895	Ignition wire clamp	4
18	20084496	ENGINE COVER	1
19	20084505	ENGINE COVER AIR INTAKE	1
20	20082800	SCREW 6x16	4
21	20084503	STEERING WHEEL COVER	1
22	20075146	HANDLE ANTI-VIBRATION RUBBER	4
23	20061013	Screw M6X16	3
24	20084494	PANEL	1
25	20070630	BUCKLE NUT M6	15
26	20091237	SHIELD	1


27	20084506	MAINTENANCE COVER	1
28	20060893	SCREW M6×16	8
29	20092015	RIGHT STORAGE BOX	1
30	20091265	REAR SEAT	1
31	20060919	SCREW M6×25	4
32	20092014	LEFT STORAGE BOX	1
33	20084499	REAR COVER TAIL-BOARD	1
34	20082801	Screw 6.3x11.5	4
35	20084298	TAPPING SCREW ST4.8x16	4

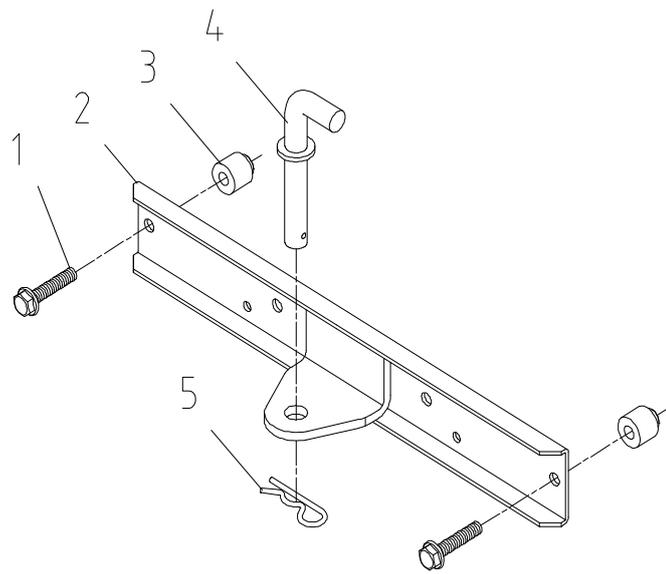


Pozice	Obj. číslo	Popis	Počet
1	20061254	FLANGE BOLT M8×40	2
2	20085158		1
3	20085165		2
4	20086357		1
5	20071251	Cotter pin $\phi 3$	1

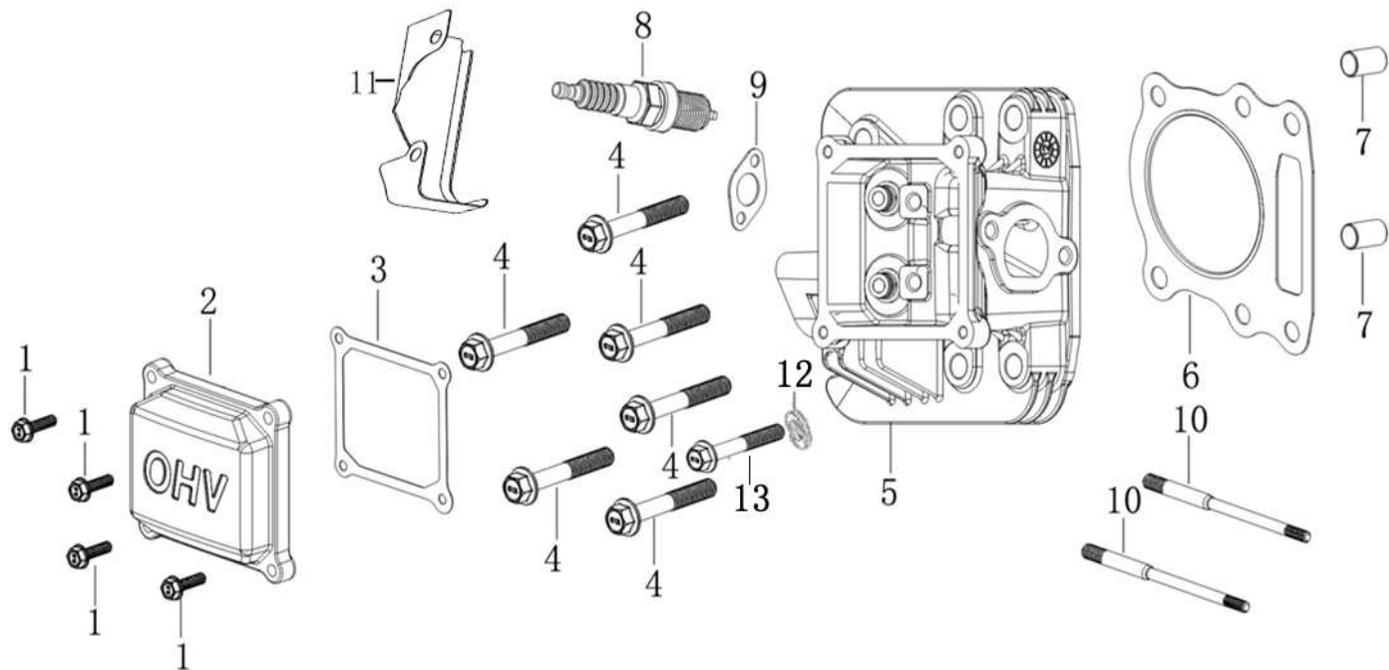


CYLINDER HEAD ASSY			
Pozice	Obj.číslo	Popis	Počet
1	380140103-0004	Hexagon bolt with flange	4
2	120230137-0001	Cylinder head cover	1
3	120250051-0001	Gasket for cylinder head cover	1
4	380140454-0002	Hexagon bolt with flange	6
5	120080566-0001	Cylinder head	1
6	120150267-0001	Gasket for cylinder head	1
7	380600116-0001	ocation pin	2
8	270960028-0002	Spark plug	1
9	180650074-0001	Outlet gasket	1
10	380180131-0001	Stud	2
11	160190119-0001	air deflector	1
12	380451128-0001	Flat washer	1
13	380140339-0001	Hexagon bolt with flange	1

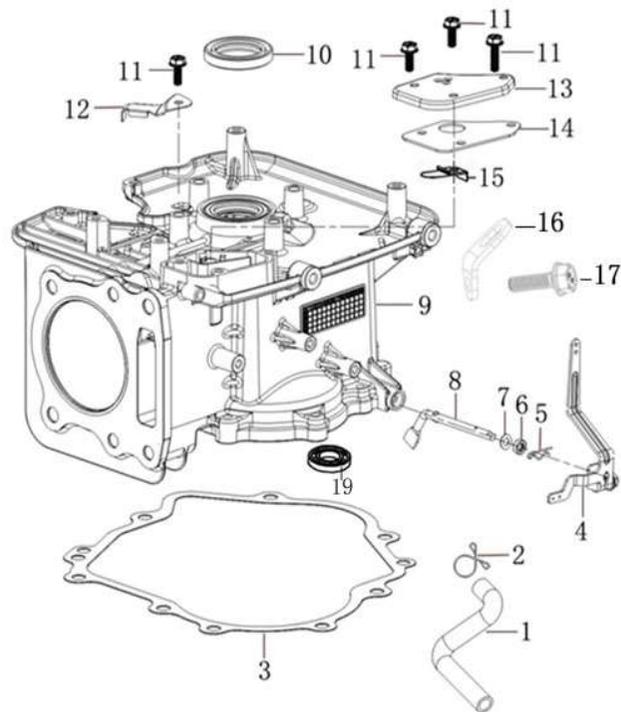

CRANKCASE			
Pozice	Obj.číslo	Popis	Počet
1	380741124-0002	Breather tube	1
2	380950402-0001	Pipe clip	1
3	110830060-0001	Crankcase cover gasket	1
4	171620035-0003	Speed regulating bracket	1
5	381350004-0001	Pin clip	1
6	380650338-0001	Oil seal	1
7	380450527-0001	Flat washer	1
8	171630010-0002	Speed regulating arm	1
9	110810429-0001	Crankcase body	1
10	380650337-0001	Oil seal	1
11	380140013-0005	Hexagon bolt with flange	4
12	110480029-0001	Pressing plate	1
13	110840053-0001	CAP, BREATHER CHAMBER	1
14	110850036-0001	PACKING, BREATHER CHAMBER	1
15	140250006-0002	Leaf valve	1

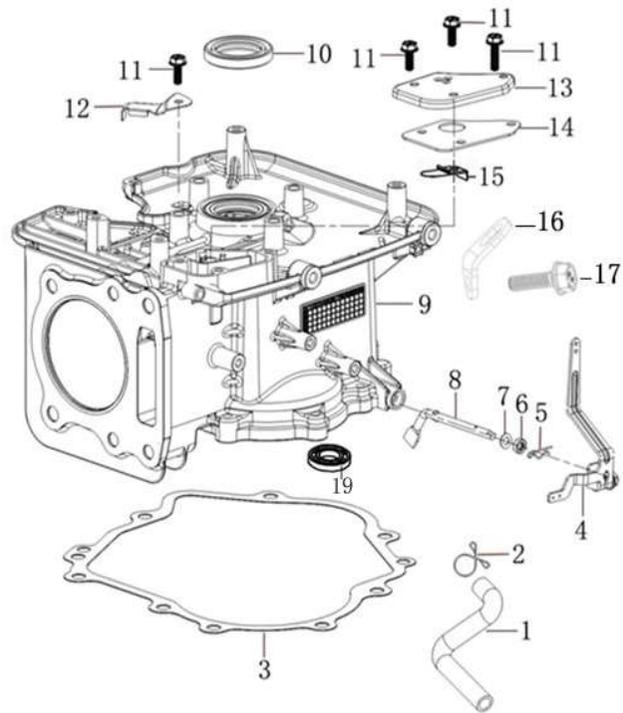


CRANKCASE			
Pozice	Obj.číslo	Popis	Počet
16	120550026-0001	Lifting eye	1
17	380140004-0004	Hexagon bolt with flange	1
18	380140067-0003	Hexagon bolt with flange	1
19	380630026-0001	Bearing	1

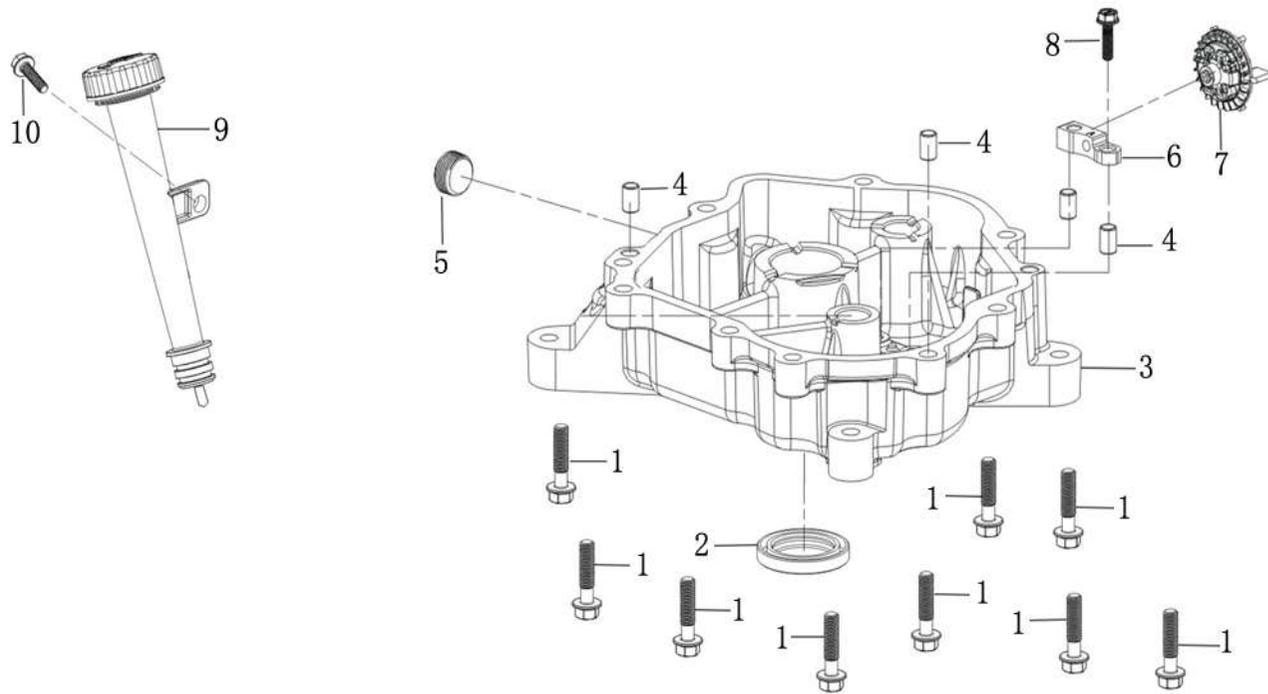


CRANKCASE COVER


Pozice	Obj.číslo	Popis	Počet
1	380140364-0001	Hexagon bolt with flange	9
2	380650337-0001	Oil seal	1
3	110820120-0001	Crankcase cover	1
4	380600119-0001	ocation pin	4
5	110260088-0001	Sealing plug screw	1
6	171640003-0001	Governor gear pressing plate	1
7	174280004-0001	Components of governor gear	1
8	380140103-0004	Hexagon bolt with flange	1
9	110690069-0002	Oil rule combination	1
10	380140077-0005	Hexagon bolt with flange	1

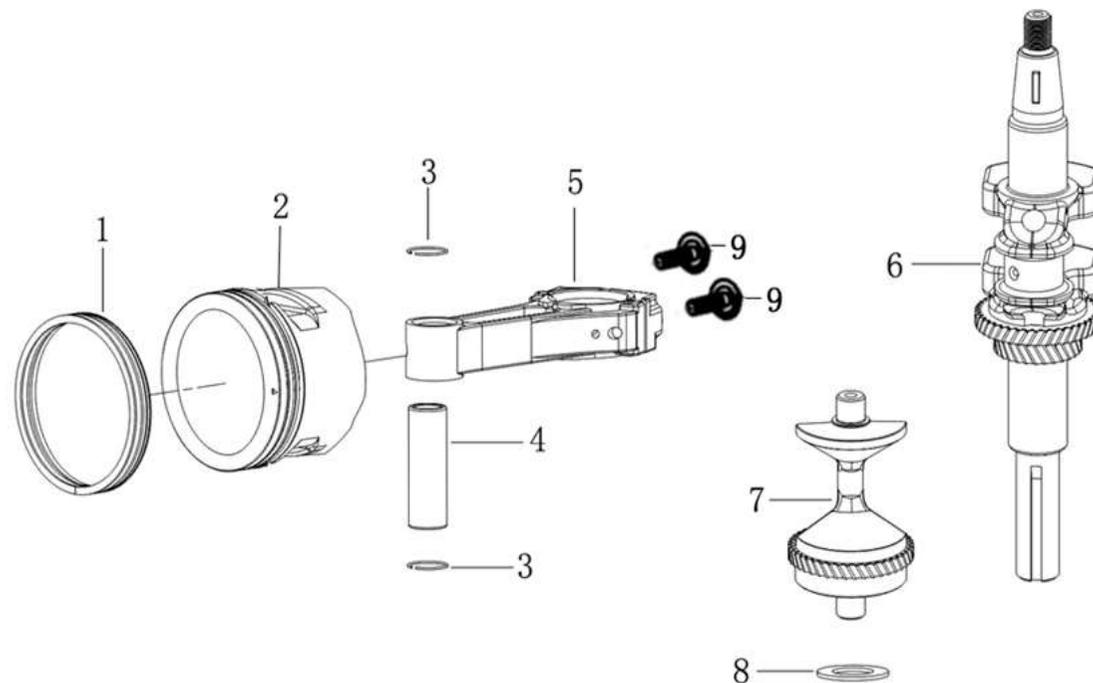


CRANKSHAFT PISTON			
Pozice	Obj.číslo	Popis	Počet
1	130070156-0001	Piston ring combination	1
2	130030289-0001	Piston	1
3	380560057-0001	Steel cable baffle ring	2
4	130060064-0001	Piston pin	1
5	130150182-0001	Connecting rod	1
6	130290500-0001	crankshaft	1
7	130450029-0001	Balancing shaft	1
8	380450560-0001	Flat washer	1
9	130180031-0001	Connecting rod bolt	2

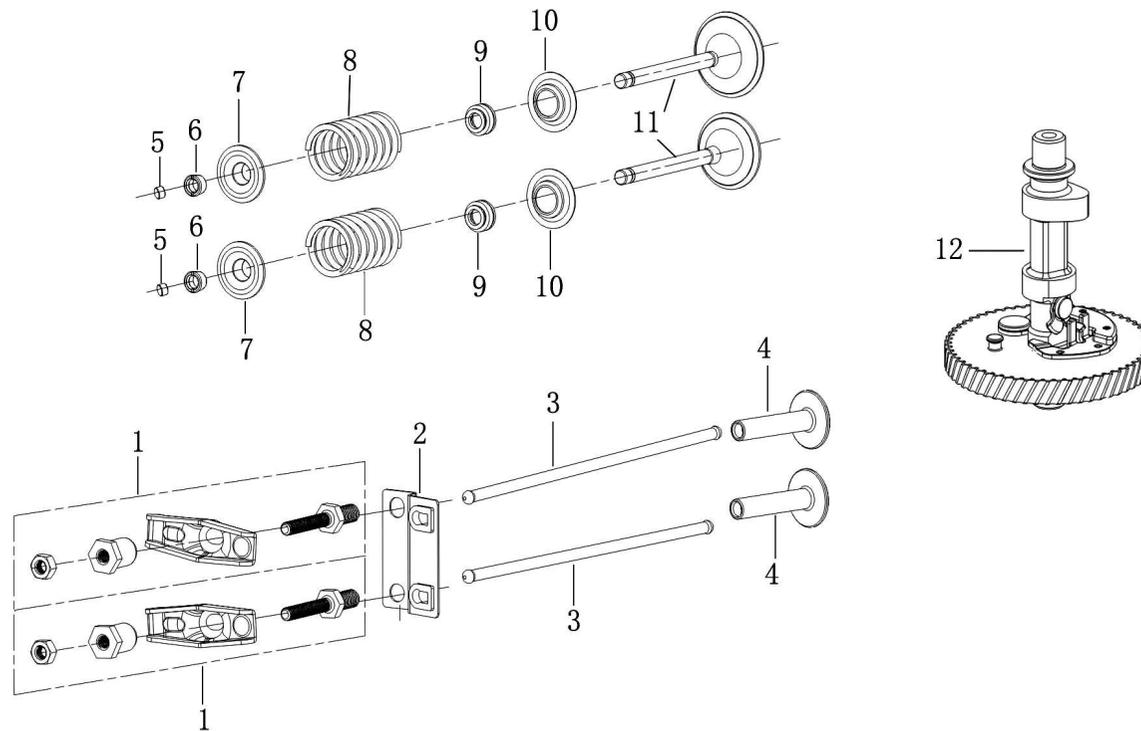


CAMSHAFT			
Pozice	Obj.číslo	Popis	Počet
1	140450041-0001	Valve rocker combination	2
2	140710007-0001	Plate, push rod guide	1
3	140670042-0001	Push rod	2
4	140690004-0001	Lifter, Valve	2
5	140320002-0001	Valve adjustment cap	2
6	140390015-0001	Valve locker	4
7	140380021-0001	Retainer, valve spring	2
8	140340025-0001	Inner spring of valve	2
9	140400012-0001	Valve oil seal	2
10	140360010-0001	Seat, valve spring	2
11	500550036-0001	Valve Kit	1
12	140020185-0001	Camshaft assy	1

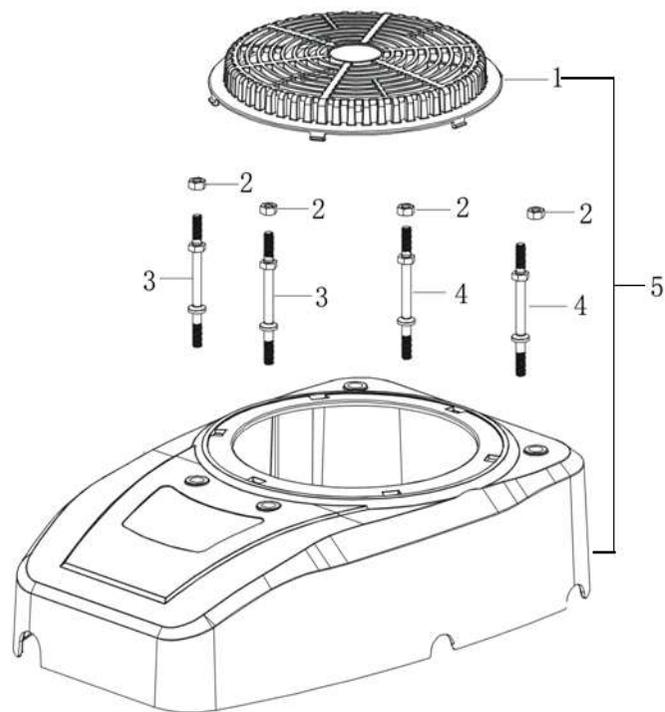


HOUSING			
Pozice	Obj.číslo	Popis	Počet
1	195360014-0001	Starter outer cover	1
2	380370066-0001	Hexagon nut with flange	4
3	380850012-0001	Stay stud	2
4	380850018-0002	Stay stud	2
5	160210089-0003	Fan cover comp.	1

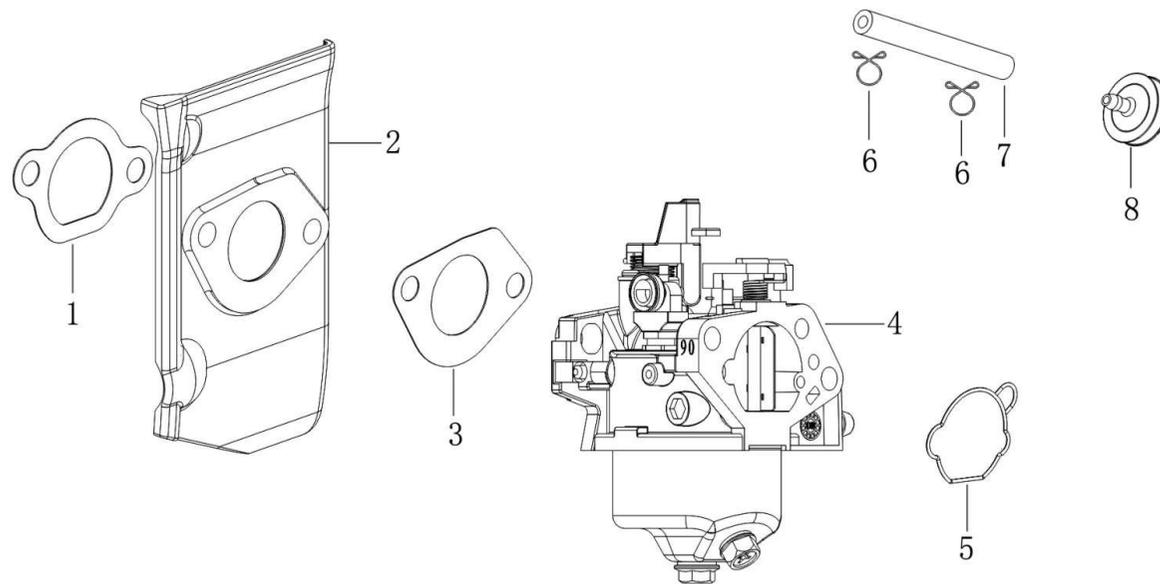

CARBURETOR			
Pozice	Obj.číslo	Popis	Počet
1	170430165-0001	Carburetor gasket	1
2	170440100-0001	Heat insulating pad for carburetor	1
3	170430164-0001	Carburetor gasket	2
4	170021921-0001	Carburetor	1
5	170430173-0001	Carburetor gasket	1
6	380950193-0001	Pipe clip	2
7	380750335-0002	Oil tube	1
8	170010018-0001	Fuel filter	1

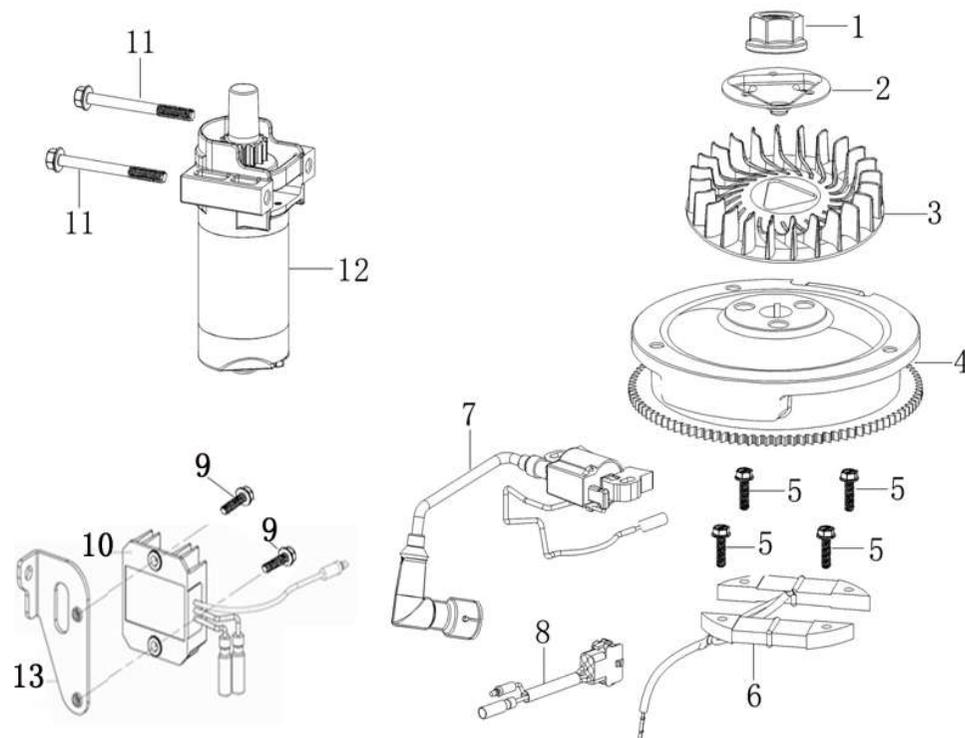


FLYWHEEL / IGNITION			
Pozice	Obj.číslo	Popis	Počet
1	380370079-0001	Hexagon nut with flange	1
2	193590013-0001	Starting disc	1
3	160180037-0001	Impeller	1
4	270020247-0001	FLYWHEEL COMP	1
5	380140054-0003	Hexagon bolt with flange	4
6	270190053-0001	Components of charging current armature	1
7	270920308-0001	COIL ASSY.,IGNNTION	1
8	271280141-0002	Connecting wire	1
9	380140013-0005	Hexagon bolt with flange	2
10	270880173-0001	RectifierVariable voltage rectifier	1
11	380140453-0001	Hexagon bolt with flange	2
12	270360094-0001	Components of starting motor	1
13	270910012-0001	Rectifier voltage regulator Support	1

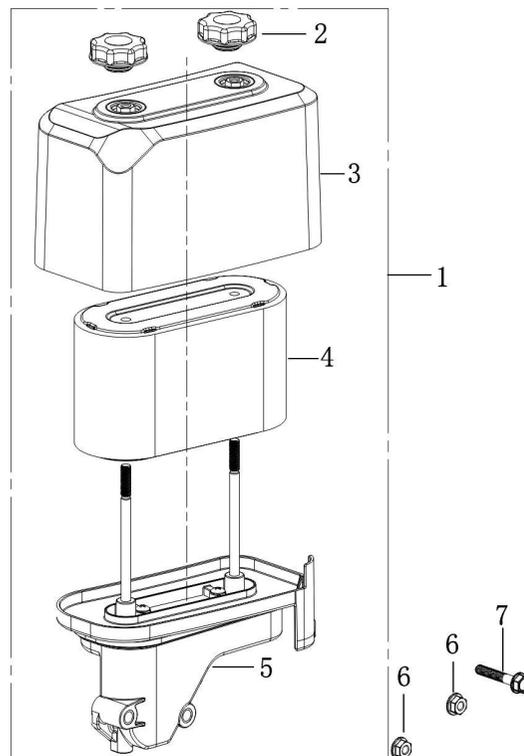

AIR CLEANER

Pozice	Obj.číslo	Popis	Počet
1	180020721-0001	Air filter	1
2	181950002-0001	Bolt handle	2
3	180070230-T440	Air filter casing cover	1
4	180100097-0001	Air filter element combination	1
5	180280093-T440	Air filter seat	1
6	380370066-0001	Hexagon nut with flange	2
7	380140100-0003	Hexagon bolt with flange	1

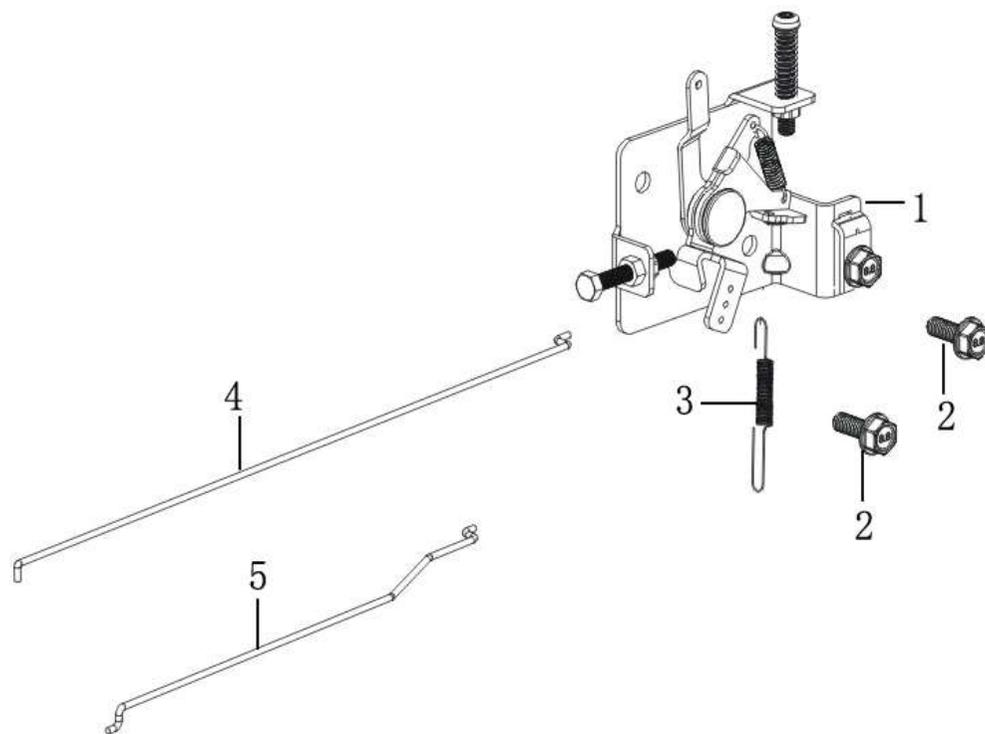

CONTROL			
Pozice	Obj.číslo	Popis	Počet
1	171680107-0003	Throttle handle combination	1
2	380140013-0005	Hexagon bolt with flange	2
3	171600067-0001	Governing spring	1
4	171590026-0001	Throttle rod	1
5	171490003-0001	Choke valve bar	1