


RPB 500			
Pozice	Obj.číslo	Popis	Počet
1	RPB500-E-1	locknut	1
2	RPB500-E-2	air filter cover	1
3	RPB500-E-3	air filter insede cover	1
4	RPB500-E-4	screw M5*55	1
5	RPB500-E-5	plate	1
6	RPB500-E-6	sponge	1
7	RPB500-E-7	air filter seat	1
8	RPB500-E-8	carburetor	1
9	RPB500-E-9	carburetor gasket	1
10	RPB500-E-10	screw M5*25	1
11	RPB500-E-11	intake	1
12	RPB500-E-12	intake gasket	1
13	RPB500-E-13	spark plug L7T	1
14	RPB500-E-14	cylinder	1
15	RPB500-E-15	silencer gasket	1
16	RPB500-E-16	silencer	1

17	RPB500-E-17	screw M5*12	1
18	RPB500-E-18	screw M6*55	1
19	RPB500-E-19	bushing	1
20	RPB500-E-20	screw M5*20	1
21	RPB500-E-21	flywheel cover	1
22	RPB500-E-22	pin Ø*10	1
23	RPB500-E-23	clutch fix bolt M8*Ø10*25	1
24	RPB500-E-24	washer Ø16*Ø11*0.4	1
25	RPB500-E-25	clutch	1
26	RPB500-E-26	flat washer Ø8*16*1.5	1
27	RPB500-E-27	nut M8	1
28	RPB500-E-28	flywheel	1
29	RPB500-E-29	key 3*5*13	1
30	RPB500-E-30	screw M5*35	1
31	RPB500-E-31	oil seal Ø15*Ø30*7	1
32	RPB500-E-32	left block	1
33	RPB500-E-33	bearing 6202	1
34	RPB500-E-34	crankshaft	1
35	RPB500-E-35	block gasket	1
36	RPB500-E-36	right block	1
37	RPB500-E-37	oil seal Ø12*Ø22*7	1
38	RPB500-E-38	flat washer Ø8*16*1	1
39	RPB500-E-39	starter plate	1
40	RPB500-E-40	oil tank protect bracket	1
41	RPB500-E-41	screw M8	1
42	RPB500-E-42	starter assembly	1
43	RPB500-E-43	oil tank bracket	1
44	RPB500-E-44	cylinder cap	1
45	RPB500-E-45	silencer protect cap	1
46	RPB500-E-46	ignition assembly	1
47	RPB500-E-47	cylinder gasket	1
48	RPB500-E-48	piston ring	1
49	RPB500-E-49	piston	1
50	RPB500-E-50	piston pin	1
51	RPB500-E-51	piston bearing 10*13*15.6	1
52	RPB500-E-52	piston clip	1
53	RPB500-E-53	oil tank assy	1

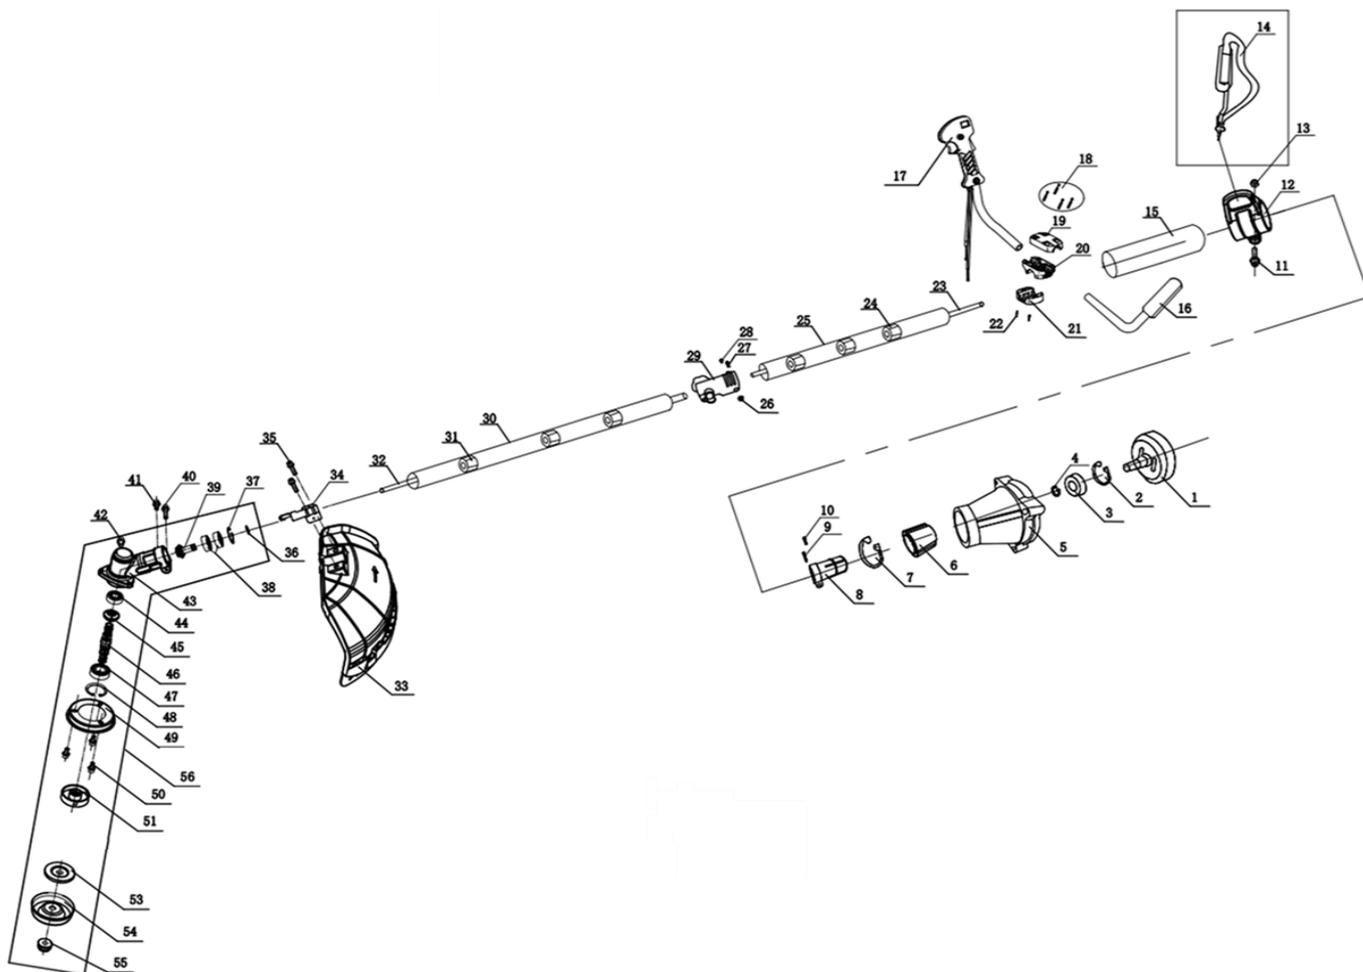

Pozice	Obj.číslo	Popis	Počet
1	RPB500-T-1	clutch plate	1
2	RPB500-T-2	inner clip	1
3	RPB500-T-3	bearing 6202-2RS	1
4	RPB500-T-4	outer clip	1
5	RPB500-T-5	connect plate assembly	1
6	RPB500-T-6	suspension cushion	1
7	RPB500-T-7	inner clip	1
8	RPB500-T-8	connecting shaft	1
9	RPB500-T-9	screw M5*30	1
10	RPB500-T-10	screw M5*14	1
11	RPB500-T-11	screw M5*20	1
12	RPB500-T-12	hanger	1
13	RPB500-T-13	nut M5	1
14	RPB500-T-14	belt	1
15	RPB500-T-15	sponge	1
16	RPB500-T-16	right handlebar	1
17	RPB500-T-17	left handlebar	1
18	RPB500-T-18	screw M6*20	1
19	RPB500-T-19	upper fix plate	1

20	RPB500-T-20	middle fix plate	1
21	RPB500-T-21	lower fix board	1
22	RPB500-T-22	screw M6*25	1
23	RPB500-T-23	transmission shaft	1
24	RPB500-T-24	oilness bearing	1
25	RPB500-T-25	aluminum pipe	1
26	RPB500-T-26	nut M5	1
27	RPB500-T-27	screw M5*25	1
28	RPB500-T-28	screw M5*14	1
29	RPB500-T-29	aluminum quick connector	1
30	RPB500-T-30	aluminum pipe	1
31	RPB500-T-31	oilness bearing	1
32	RPB500-T-32	transmission shaft	1
33	RPB500-T-33	protect cap	1
34	RPB500-T-34	connecting pad	1
35	RPB500-T-35	screw M6*25	1
36	RPB500-T-36	outer clip	1
37	RPB500-T-37	inner clip	1
38	RPB500-T-38	bearing	1
39	RPB500-T-39	driving gearwheel	1
40	RPB500-T-40	screw M5*25	1
41	RPB500-T-41	screw M5*14	1
42	RPB500-T-42	screw M6*14	1
43	RPB500-T-43	gearwheel block	1
44	RPB500-T-44	bearing 6202-2RS	1
45	RPB500-T-45	driving gearwheel	1
46	RPB500-T-46	transmission shaft	1
47	RPB500-T-47	bearing 6202-2RS	1
48	RPB500-T-48	inner clip	1
49	RPB500-T-49	protect cover	1
50	RPB500-T-50	screw M5*10	1
51	RPB500-T-51	spline cushion	1
53	RPB500-T-53	blade fix board	1
54	RPB500-T-54	protect cap	1
55	RPB500-T-55	nut M10*1.25	1
56	RPB500-T-56	gear case assembly	1