



RELT 5530			
Pozice	Obj.číslo	Popis	Počet
1	RELT5530-1	Screw St3*8	1
2	RELT5530-2	Blade	1
3	RELT5530-3	Line Guard	1
4	RELT5530-4	Right Motor Housing	1
5	RELT5530-5	Screw St4*16	25
6	RELT5530-6	Cover	1
7	RELT5530-7	Latch Cap	1
8	RELT5530-8	Spring	1
9	RELT5530-9	Right Deck	1
10	RELT5530-10	Right Tube Support	1
11	RELT5530-11	Lower Tube	1
12	RELT5530-12	Block	1
13	RELT5530-13	Nut M6	1
14	RELT5530-14	Knob	1
15	RELT5530-15	Right Support	1
16	RELT5530-16	Right Handle	1
17	RELT5530-17	Right Cable Hook	1
18	RELT5530-18	Power Cord	1
19	RELT5530-19	Cord Sheath	1
20	RELT5530-20	Clamp Plate	1
21	RELT5530-21	Terminal Block	1
22	RELT5530-22	Capacitor	1
23	RELT5530-23	Microswitch	1
24	RELT5530-24	Switch Trigger	1
25	RELT5530-25	Spring For Latch	1
26	RELT5530-26	Spring For Trigger	1
27	RELT5530-27	Latch	1
28	RELT5530-28	Insert	2
29	RELT5530-29	Left Cable Hook	1
30	RELT5530-30	Left Handle	2
31	RELT5530-31	Left Support	1
32	RELT5530-32	Bolt M6*40	1
33	RELT5530-33	Handle Caover	1
34	RELT5530-34	Front Handle	1
35	RELT5530-35	Upper Tube	1
36	RELT5530-36	Upper Lock Sleeve	1
37	RELT5530-37	Lock	1
38	RELT5530-38	Lower Lock Sleeve	1
39	RELT5530-39	Left Tube Support	1
40	RELT5530-40	Latch	1
41	RELT5530-41	Left Motor Housing	1
42	RELT5530-42	Left Deck	1
43	RELT5530-43	Inductor	1
44	RELT5530-44	Upper Motor Cabinet	1
45	RELT5530-45	Carbon Brush	2
46	RELT5530-46	Brush Holder	2
47	RELT5530-47	Terminal	2
48	RELT5530-48	Nut M4	2
49	RELT5530-49	608 Bearing	2
50	RELT5530-50	Screw M4*60	2
51	RELT5530-51	Stator	1
52	RELT5530-52	Rotor	1
53	RELT5530-53	Lower Motor Cabinet	1
54	RELT5530-54	Spool Support	2
55	RELT5530-55	Spring	2
56	RELT5530-56	Spool	1
57	RELT5530-57	Spool Sleeve	1
58	RELT5530-58	Spool Cover	1
59	RELT5530-59	Rivet Hole	1