


SHARK GARDEN 680 POLY DUMP CART

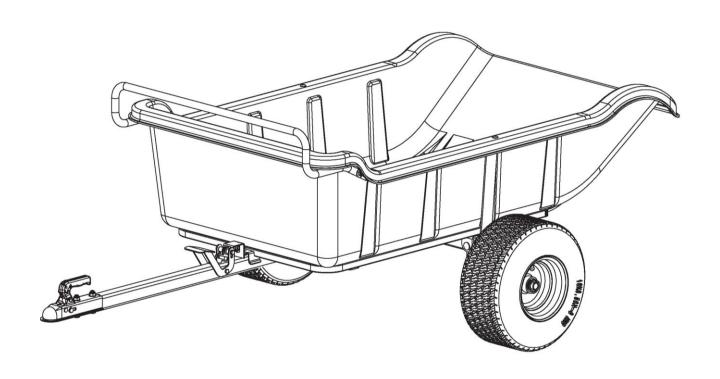

Instruction & Assembly

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Table of Contents

General Warnings and Rules	3
Hazard Signal Word Definition	4
Controls and Features Identification	5
Assembly Instructions	6, 7, 8
Operation Instructions	9, 10, 11
Maintenance and Storage	12
Specification	12
Parts Drawing & Parts List	13, 14



READ and UNDERSTAND this manual completely before using Utility Dump Cart.

Operator must read and understand all safety and warning information, operating instructions, maintenance and storage instructions before operating this equipment. Failure to properly operate and maintain the utility dump cart could result in serious injury to the operator or bystanders.

Operation Warnings

- Do not at any time carry passengers sit or stand on the cart.
- Do not allow children to play on, stand upon or climb in the cart.
- Always inspect the cart before using to assure it is in good working condition.
- Replace or repair damaged or worn parts immediately.
- Always check and tighten hardware and assembled parts before operation.
- Do not exceed equipment maximum load capacity of 680 kg.
- Avoid large holes and ditches when transporting loads.
- Be careful when operating on steep grades (hill) the cart may tip over.
- Always operate at reduce speed in rough terrain, along creeks, ditches and on hillsides.
- Do not operate close to creeks, ditches and public highways.
- To avoid personal injury and/or equipment damage DO NOT EXCEED 25 km/h.
- Always use caution when loading and unloading the cart.
- Only tow with recommended vehicles (Lawn/Garden Tractors and ATVs).
- Always secure and lock dump cart to the vehicle hitch before operating.

Crush and Cut Hazards

- Always keep hands and feet clear from moving parts while operating the equipment.
- Always clear and keep work area clean when operating.
- Always wear safety gear, eye protection, gloves and work boots when operating the dump cart.


WARNING

The warnings, cautions, and instructions outlined in this instruction manual cannot cover all possible conditions or situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product and must be supplied by the operator.

Assembly Is Required

This product requires assembly before use. See "Assembly" section for instructions. Because of the weight and/or size of the utility dump cart, it is recommended that another adult be present to assist with the assembly. **INSPECT ALL COMPONENTS** closely upon receipt to make sure no components are missing or damaged.

Hazard Signal Word Definitions

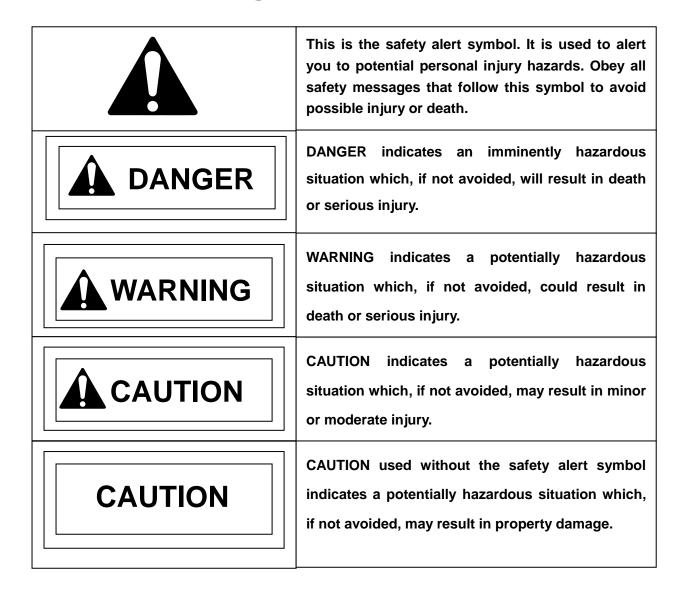


ABOUT YOUR UTILITY DUMP CART

This utility dump cart has a rugged steel construction and is designed to carry a wide range of materials. The dump cart will easily haul up to 680 kg of tools, firewood, animal feed, trash, landscaping materials, cement or anything else that needs to moved. Low profile cart makes loading and un-loading fast and convenient. Never exceed the rated load capacity of 680 kg when operating the utility dump cart.


Technical specifications on the utility dump cart are provided in the "Specifications" section of this manual.

Controls and Features Identification

Read this owner's manual before operating the equipment. Familiarize yourself with the location and function of the controls and features. Save this manual for future reference.

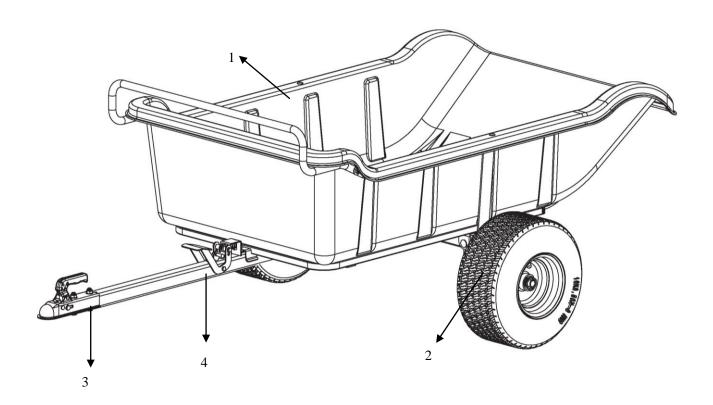

 - 1) **Utility Cart Box** Do not exceed rated load capacity 680 kg.
- 2) **Tires/Wheel** Do not exceed the recommended rate 1,93 bar.
- 3) 50mm Coupler
- 4) Release Pedal- Release the cart bed.



Read and follow all instructions for assembly and operation. Failure to properly assemble this equipment could result in serious injury to the user or bystanders, or cause equipment damage.

UTILITY DUMP CART COMPONENT PARTS AND ASSEMBLY

Take all parts out of the shipping crate and inspect components to ensure there are no missing pieces before starting to assemble the utility dump cart follow steps 1 through 4.

TOOLS REQUIRED


- Allen Wrench
- 17 mm & 19 mm Wrench

Assembly Instructions

Note: Hardware parts are already assembled on the component.


STEP 1: Attach Hitch Tube

- 1. Connect trailer pivot tube (#6) and support plate (#8) to the wheel stand (#1) using cup head square neck bolt M12x80 (#18), large flat washer Ø12 (#14) and nylon lock nut M12 (#20).
- 2. Connect hitch tube (#5) to the trailer pivot tube (#6) using cup head square neck bolt M12x80 (#18), large flat washer Ø12 (#14) and nylon lock nut M12 (#20).

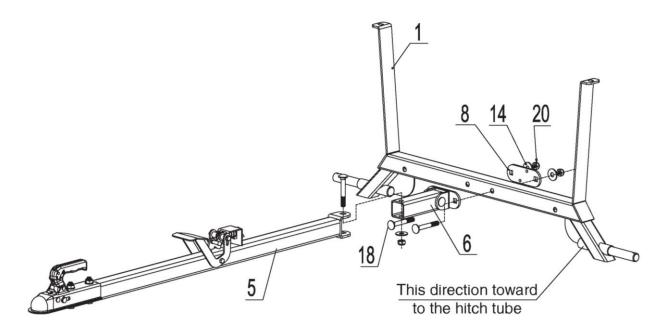


STEP 2: Attach the Tires

1. Leave a flat washer Ø24 (#15) on the axle, then attach tires (#4) to the axle using flat washer Ø24 (#15) and O lock ring (#16).

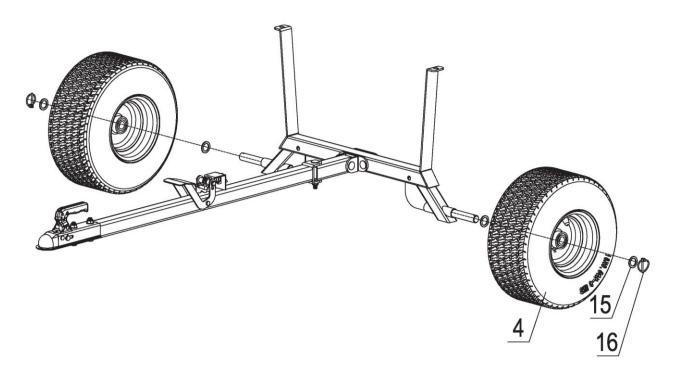

STEP 3: Attach U-Frame


2. Attach the u-frame (#2) on the wheel stand using cup head square neck bolt M12x80 (#18), large flat washer Ø12 (#14) and nylon lock nut M12 (#20).

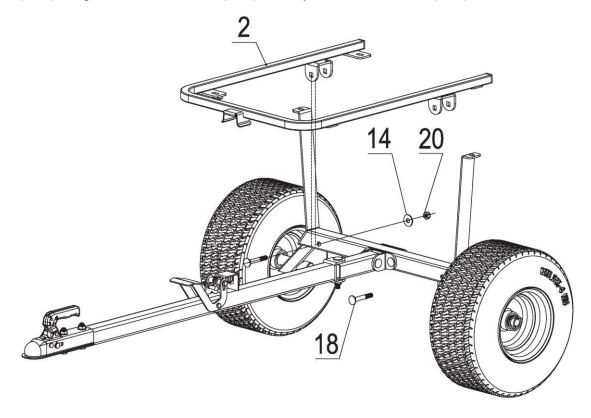

STEP 4: Attach Poly Tray

- 1. Attach the poly tray (#3) on the frame, secure with square gasket (#17), hex socket plain round head bolt M10x25 (#22), large flat washer Ø10 (#13) and nylon lock nut M10 (#21). Don't tighten the bolts.
- 2. Secure the edge of poly tray on the frame with hex socket plain round head bolt M10x25 (#22), flat washer Ø10 (#13) and nylon lock nut M10 (#21). Don't tighten the bolts.
- 3. Attach hand shank (#35) to the poly tray (#3) using hex socket plain round head bolt M10x45 (#36), large flat washer Ø10 (#13) and nylon lock nut M10 (#21).

Note: Tighten all bolts after the four bolts are fixed.

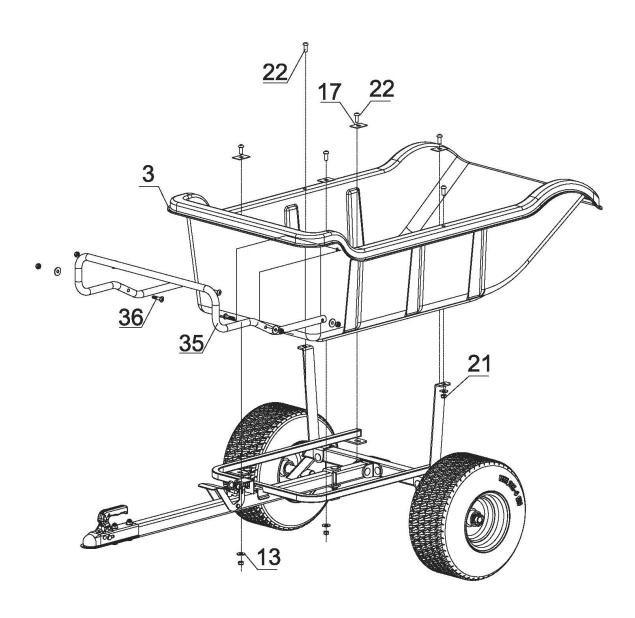

Operation Instructions

▲ WARNING


Before using the utility dump cart, review the instructions below and safety information. Failure to follow these instructions may result in property damage or injury to the operator or bystanders.


USING YOUR UTILITY DUMP CART


- DO NOT exceed rated capacity of 680 kg
- 2. ALWAYS secure and lock the utility cart to the vehicle hitch before operating.
- 3. **ONLY** use approved vehicles when towing the dump cart (Lawn/Garden Tractors and ATVs)
- 4. **NEVER** tow the utility dump cart with box raised.
- 5. **DO NOT** over fill the utility dump cart. Over flow loads can cause the cart and towing vehicle to lose traction and skid out of control.
- 6. **ONLY** fill the dump cart to a comfortable dumping load. Extremely heavy loads will be difficult to operate and dump.
- 7. **ALWAYS** use the dump cart for its intended purpose.
- 8. **ALWAYS** make sure that the tow vehicle and the combined weight of the operator MUST BE greater than the load of the cart weight for proper control.
- 9. **DO NOT** use cart on public highways or roads.
- 10. **NEVER** exceed 16mph when towing the dump cart.
- 11. **DO NOT** make sharp turns that may cause the Lawn/Garden Tractor or ATV tires to rub against the utility dump cart.
- 12. ALWAYS slow down before turning.
- 13. **ALWAYS** use caution when backing the utility cart. To avoid the cart from "jack-knifing" always back up in a straight line.

YOU CAN CHOOSE DIFFERENT CONNECTION WAY FOR THE TOW BAR AS YOU REQUIRED.


When you need to use pin style, remove 50 mm coupler and bushing, then install hitch pin and R pin.

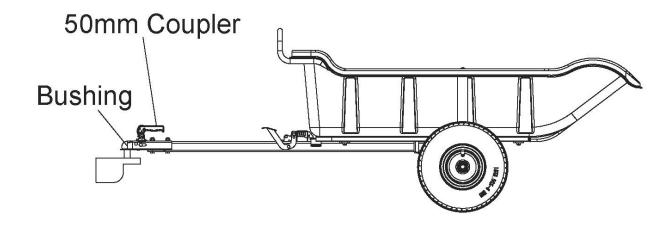

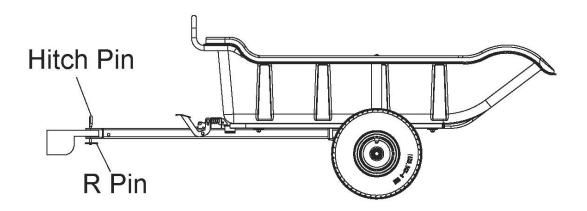

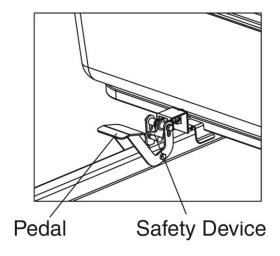

Flip Up Safety Device

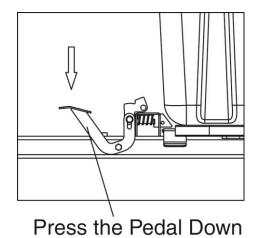

- 1. Flip up the safety device and press the pedal down to release the bed for dumping.
- 2. When towing the cart, flip down the safety device to lock the bed to avoid accidental dumping.

Warning: Do not press the pedal after the safety device is locked.

Maintenance and Storage



WARNING

Improper maintenance and storage of the utility dump cart may void your warranty.

MAINTENANCE

- After each use clean material out of the cart box.
- Rinse/dry inside and outside of the dump cart after each use.
- Before operating make sure the tires have the RECOMMENDED TIRE PRESSURE 1,93 bar.
- Regularly grease the axle and the wheel bearing area or when needed.
- Periodically check all fasteners for tightness.
- Annually clean and lightly lubricate parts.
- Use a glossy enamel spray paint to touch up scratched or worn painted metal surfaces.
- Never exceed load capacity rating of 680 kg it will damage the utility dump cart.

IMPORTANT:

If a part needs replacement, only use parts that meet the manufacturer's specifications. Replacement parts that do not meet specifications may result in a safety hazard or poor operation.


STORAGE

- Never allow material to remain in the utility dump cart for extended periods of time.
- Before storing make sure the cart is clean and dry for years of trouble free service.
- Store indoors or protected area during severe weather and winter months.
- When storing outside always keep the tongue a little higher than the back of the cart to allow the moister to easily run out the back and will not accumulate in the box.

Specifications

Load Capacity	680 kg
Box Dimensions	1755 x 1011 x 455 mm
Overall Dimensions	2464 x 1397 x 787 mm
Wheel Size	18"
Wheel Type	Pneumatic
Tire Pressure	1.93 bar

Parts Drawing & Parts List

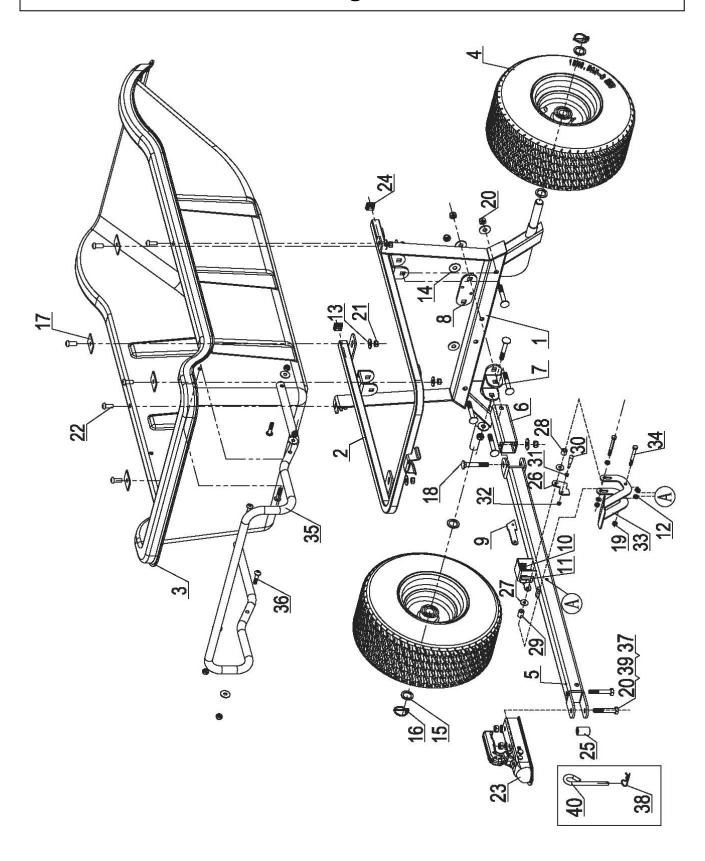

Parts Drawing & Parts List

Ref#	Drawing No.	Description	Qty
1	DCP1500-01000	Wheel Stand	1
2	DCP1500-02000	U-Frame	1
3	DCP1500-00001	Poly Tray	1
4	DCP1200-00002	Tire	2
5	DCP1503-03000	Hitch Tube	1
6	DCP1000-00003	Trailer Pivot Tube	1
7	DCP1000-04000	Hitch Pull Weldment	1
8	DCP1000-04001	Support Plate	1
9	DCP0600-00002	Safety Fork	1
10	DCP0600-00003	Pressure Spring	1
11	DCP0600-00004	Spacer	1
12	9301-08000-DX	Flat Washer Ø8	4
13	9302-10000-DX	Large Flat Washer Ø10	10
14	9302-12000-DX	Large Flat Washer Ø12	6
15	9301-24000-DX	Flat Washer Ø24	4
16	TS600-00009	O Lock Ring	2
17	DCP0600-00007	Square Gasket	4
18	9114-12080-DX	Cup Head Square Neck Bolt M12x80	6
19	9206-08000-DX	Nylon Lock Nut M8	2
20	9206-12000-DX	Nylon Lock Nut M12	8
21	9206-10000-DX	Nylon Lock Nut M10	10
22	9104-10025-DX	Hex Socket Plain Round Head Bolt M10x25	6
23	Z104	50mm Coupler	1
24	M150-00003	Plug	2
25	DCP1203-00001	Bushing	1
26	DCP0600-00009	Safety Device	1
27	9302-08000-DX	Large Flat Washer Ø8	2
28	DCP0600-00010	Bushing A	1
29	DCP0600-00006	Bushing	1
30	DCP0600-00008	Handle	1
31	9201-06000-DX	Hex Nut M6	1
32	9206-06000-DX	Nylon Lock Nut M6	1
33	DCP0600-04000	Pedal	1
34	9101-08075-DX	Hex Bolt M8x75	2
35	DCP1500-00002	Hand Shank	1
36	9104-10045-DX	Hex Socket Plain Round Head Bolt M10x45	4
37	9301-12000-DX	Flat Washer Ø12	2
38	9101-12070-DX	Hex Bolt M12x70	2
39	9101-12070-DX	Hex Bolt M12x70	2
40	N870-00011	Hitch Pin	1

Official distributor:



ASP Group s.r.o.

Address: Staroplzenecka 290, Letkov, 326 00, Czech Republic

Tel.: +420 378 21 21 E-mail: info@aspgroup.cz Web: www.aspgroup.eu