



Instruction Disclaimer

Dennis Kirk provides instructions to help our customers better understand how to install the products we sell. The instructions are exact copies of what the manufacturer includes with the product being sold.

That means the quality and accuracy of the instructions is solely dependent on what the manufacturer produces. We do our best to make the text legible and the pictures viewable. However, the end result depends largely on the quality of instructions the manufacturer provides.

Therefore, you will find that some instructions are not of the highest quality. Sometimes text is hard to read and pictures are not easy to see. At times you will find the overall look of the instructions to be less than professional. However, we feel it is better to provide what we have rather than provide nothing at all.

To the best of our knowledge the instructions and application information contained in the instructions is accurate. However, Dennis Kirk assumes no liability related to any errors that may be contained in the copy of the manufacturer's instructions we provide. Buyers are solely responsible to insure that product use is consistent with their application.

If you have any questions please contact us at customerservice@denniskirk.com or 800-969-7501 so we can further assist you regarding additional product information or any other business related questions.

Thank you for doing business with Dennis Kirk.



INSTRUCTIONS FOR USE

- Use the Rollastand® on a flat and level area such as a concrete driveway or workshop floor. Do not use the Rollastand® on sloping uneven surfaces, finished floors or carpet.
- Make sure that the motorcycle ignition is switched off and the gears are in neutral.

FOR REAR WHEEL USE:

1. Place the Rollastand® 12 inches (30cm) in front of the back wheel.
2. Make sure that the rollers of the Rollastand® are at right angles to the direction of the wheel to be cleaned. For Bikes that have more rake on the sidestand you will have to turn the Rollastand® a few more degrees to the left (when sitting on the bike) so the rear wheel lays square across the rollers when the bike is back on the side-stand.
3. Mount the motorcycle and manually roll the motorcycle onto the Rollastand®. You will feel a small bump as the motorcycle wheel rides over the first roller. Let the wheel come to rest between the two rollers. Allow the front wheel to rest at full left lock on the handlebars with the side-stand down.
4. Some owners may feel that their motor-cycle is leaning too much at this point, a small block of wood may be placed under the side-stand to adjust the attitude of the motorcycle.
5. The motorcycle rear wheel can now be rotated by hand to assist with cleaning, polishing or chain maintenance. If the rear wheel creeps to the edge of the Rollastand while spinning, move the handlebars from full left lock to straight ahead. Don't worry the wheel will not fall off Rollastand®, but the wheel will rotate easier when center of the rollers.

FOR FRONT WHEEL USE:

Repeat steps 1-4, but with front wheel pointing straight ahead. The front wheel may move to one side of the Rollastand® as it is being rotated, this can be corrected by changing the direction of the front wheel as it is being rotated.

CARE & MAINTENANCE:

Your Rollastand® is protected by a powder-coat paint or anodized finish. Wipe dirt and oil off with a clean dry towel. Do not immerse in solvents. The Rollastand® comes with a 1 year warranty against defective materials and workmanship. Please provide sales receipt upon submission of warranty.

SAFETY WARNING

THIS PRODUCT IS A CLEANING AID FOR MOTORCYCLE WHEELS. IT MUST NEVER BE USED WITH THE ENGINE RUNNING OR WITH THE MOTORCYCLE IN GEAR. WHEEL ROTATION MUST BE BY HAND ONLY. THE MANUFACTURER ACCEPTS NO LIABILITY FOR INJURY TO PERSONS OR DAMAGE TO PROPERTY THAT MAY RESULT FROM THE MISUSE OR ABUSE OF THIS CLEANING AID.

website: www.hardlineproducts.com email: sales@hardlineproducts.com
phone: 805-581-4700 fax: 805-581-0022