



QUICK REMOVAL

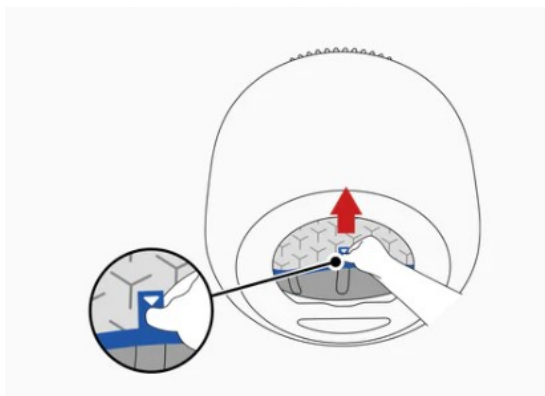

Grasp the handgrip and pull out.

EASY INSTALLATION

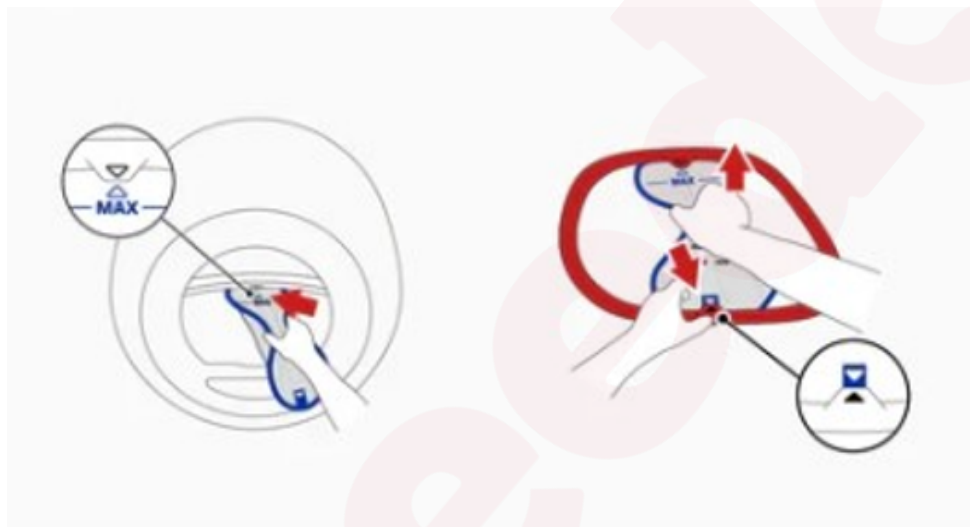

1. Clean the groove with a brush. Insert the pad into the groove so that the top and bottom arrows are aligned.



2. Push gently and release; both sides will automatically slide back into the groove. Make sure that the blue edge is fully inserted into the groove and that the arrows are aligned at both ends. An invisible blue outline indicates a successful installation.