

↑Large↑ 11³/₈" W Center Line



Extreme Weather Pet Door™ Cutting Template

Shoulder Height

Shoulder Height


NOTICE:

Cut out the correct size template. For the Large no cutting is required. If installing in a wall, reduce cut-out width by 1" for the Small and Medium. For the Large reduce cut-out width by 1" and cut-out height by 1".

↑Medium↑ 9³/₈" W

Center Line

Tools Needed

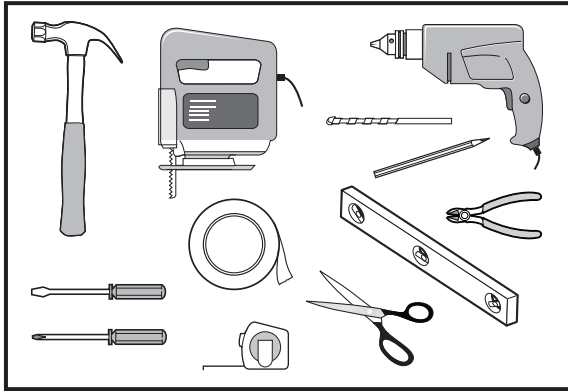

- Hammer
 - Jigsaw
 - Drill
 - 1/2" Drill Bit
 - Wire Cutters
 - Slotted & Phillips Screwdrivers
 - Tape Measure
 - Tape
 - Pencil
 - Level
 - Scissors
 - Safety Equipment
- Optional**
- Duct Tape
 - Caulk

Shoulder Height

Shoulder Height

↑Small↑ 6³/₈" W

Center Line

Shoulder Height

Shoulder Height

NOTICE:

When applying cutting template there should be a minimum of 3" between the bottom and sides of the door and the outer edge of the template to maintain the structural integrity of the door.

↑Large↑ 19" H

↑Medium↑ 14" H

↑Small↑ 10¹/₈" H

↑Small↑ 10¹/₈" H

↑Medium↑ 14" H

↑Large↑ 19" H

Center Line