


# Automatic Ultrasonic Bark Control

User Manual


Model U13

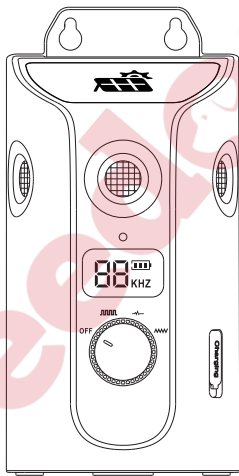


0.3.0.02.U13SXX-ZX-01

Please read the manual carefully before using

# Package Contents

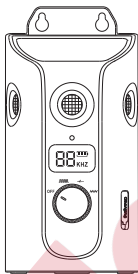

① Main Unit

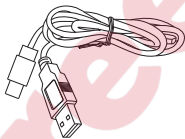

② Charging Cable




③ User Manual

[www.electric-collars.com](http://www.electric-collars.com)  
[www.reedog.com](http://www.reedog.com)




## Overview

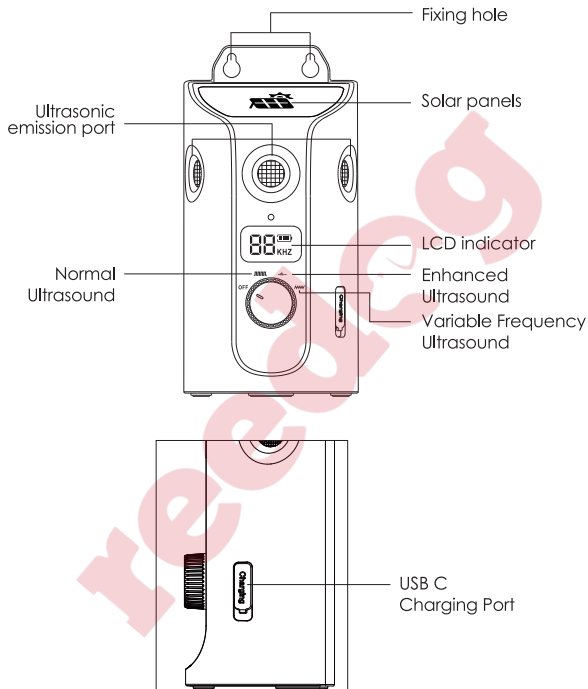

[www.electric-collars.com](http://www.electric-collars.com)  
[www.reedog.com](http://www.reedog.com)

## Uses

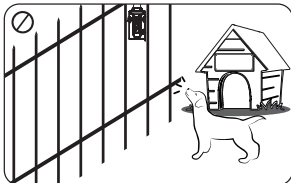

Stop excessive barking




Stop barking at neighbor's dogs



Stop barking at pedestrians passing by the yard





For indoor and outdoor use

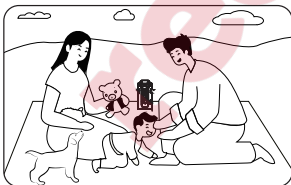


Stop dogs from barking during camping trips

[www.electric-collars.com](http://www.electric-collars.com)  
[www.reedog.com](http://www.reedog.com)



# Operating Guide

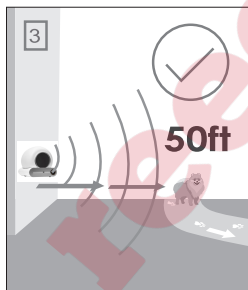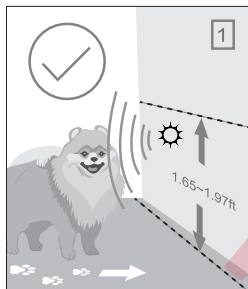

# Operating Guide

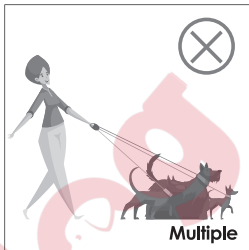

## Operating Guide

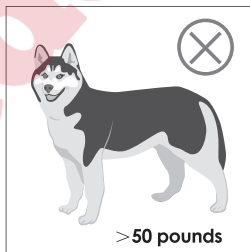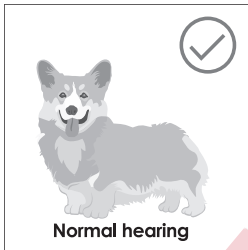

## Operating Guide



## Key Benefits



Powerful three ultrasonic speakers



50 feet control range



Three ultrasound modes



Automatic barking detection



LCD screen



Four hours fast charging



IPX5 waterproof



More than 30 days of battery life




Solar panel: 0.25W, 21% efficiency

[www.electric-collars.com](http://www.electric-collars.com)  
[www.reedog.com](http://www.reedog.com)

## Important Safety Information


1. Keep a distance from ears to avoid hearing damage.
2. Not suitable for deaf, hard-of-hearing dogs.
3. Be placed beyond the reach of children and never used by children.
4. Do not use this product on dogs under 6 months, or on sick, old, pregnant, or aggressive dogs.
5. Do not soak this product in water.
6. Store the device in a cool and dry place when not use.
7. The ultrasonic wave will bounce back if there is an object blocking it.
8. Do not disassemble the device. Please contact customer service, if you need to repair.

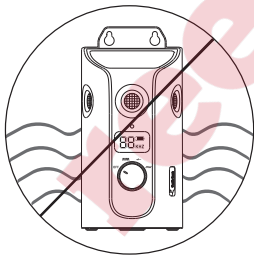



## Device Charging

### Type-C charging port

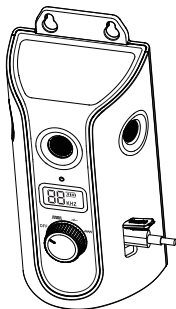

The battery bars on the screen cycle and jump during charging.




The three battery bars is always lighting when fully charged.

### Solar panel charging




When there is direct sunlight on the solar panel, the device will automatically charge and store electricity, with the battery bars on the screen cycling continuously.

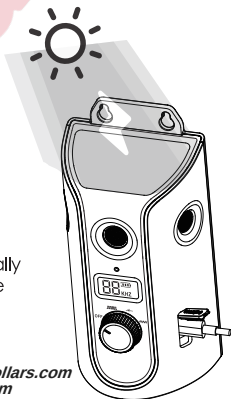

[www.electric-collars.com](http://www.electric-collars.com)  
[www.reedog.com](http://www.reedog.com)

## Device charging

### Start and Turn off the Device


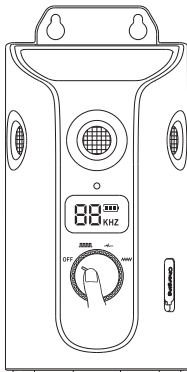


1. Turn the knob to start the device, the beep sound prompts once and the screen will display the icon corresponding to the current mode.



2. Turn the knob to turn off the device, the beep sound prompts twice and the screen goes off.

## How to Emit Ultrasound



1. When the knob is in the normal ultrasound mode, barking at the microphone "wo, wo", the ultrasonic wave will be emitted, and the LCD screen will display the current mode frequency icon "25HKZ" and the remaining battery icon.

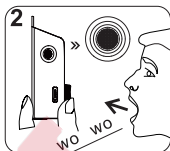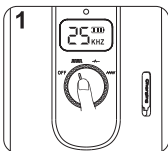

2. When the knob is in the enhanced ultrasound mode, barking at the microphone "wo, wo", the ultrasonic wave will be emitted, and the LCD screen will display the current mode frequency icon "H" and the remaining battery icon.

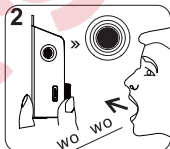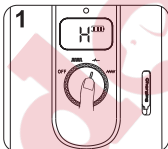

3. When the knob is in the variable frequency ultrasound mode, barking at the microphone "wo, wo", the ultrasonic wave will be emitted, and the LCD screen will display the current mode frequency icon "C" and the remaining battery icon.

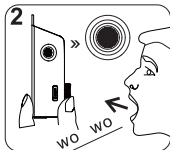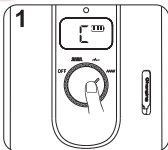

**Q: What is the range of outdoor ultrasound?**

A: Outdoor barking control detects barking and sends ultrasonic waves up to 50 feet.

**Q: Can dogs become desensitized to ultrasound?**

A: In some cases, dogs can become desensitized. To avoid this, turn on barking to control barking during periods when the dog is barking (i.e. turn it off when you are not around).

**Q: Which types of dogs are suitable?**

A: Suitable for dogs of all sizes and weights. Not recommended for dogs over 8 years old or deaf.

**Q: Do I need to install a battery?**

A: The device is rechargeable and has a built-in rechargeable battery.

## Trouble shooting

### **Q: Not responding to my dog.**

#### **Answer:**

1. Make sure the device is turned on.
2. Please make sure the device is fully charged, then turn on the device, face the microphone and say WO, WO, if the normal ultrasonic wave does not work, Try to select the knob mode clockwise for testing.
3. Check whether there is any blocking object in front of the ultrasonic transmission.
4. The ultrasonic effect will be weakened if the dog's ears are covered.
5. Human beings cannot hear ultrasonic sound.

#### **Notice:**

1. Use ultrasound to block unwanted dog barking. Follow the training steps below.

**(Note:** Different breeds of dogs respond differently to ultrasound. For best results, there are three gears to find the best gear)

2. Place the outdoor barking control device within the dog's range and switch the device to normal ultrasound, enhanced ultrasound or variable frequency ultrasound. Most dogs will quickly understand that the ultrasonic control is disrupting their urge to bark and will relax and stop barking. You should notice the dog bark less within the first two weeks of using outdoor ultrasound.

3. Excessive barking can cause real stress to your relationship with your pet and cause disruption in your neighborhood, and in some cases, this product may be a help.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: [www.electric-collars.com](http://www.electric-collars.com)  
Changes to technical parameters, properties and printing errors reserved.

**Service center and distribution**

Reedog, sro  
Sedmidomky 459/8 101  
00 Prague 10  
Phone: +1 646 980 4569  
Email: [info@electric-collars.eu](mailto:info@electric-collars.eu)