





ebs SE






Download the Ebo App by scanning the QR code

# Device Connection

1

Register on Ebo App and click '+' to connect.

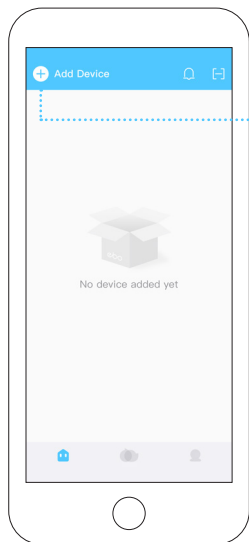



2

Select device card for Ebo SE.



3

Place the robot on the charging dock.

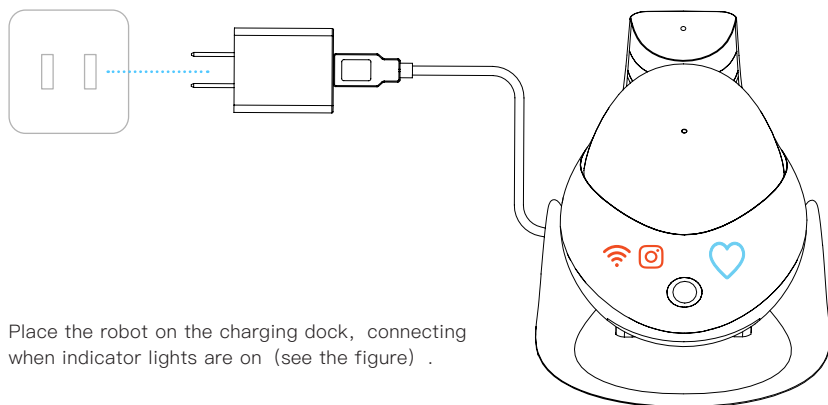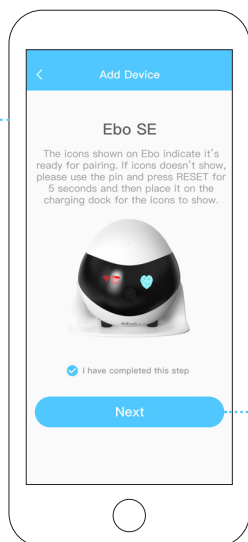


Place the robot on the charging dock, connecting when indicator lights are on (see the figure) .



\* Updates are ongoing and subject to the actual interface of the App

4

Select wifi Network;  
Put in password;  
Click NEXT

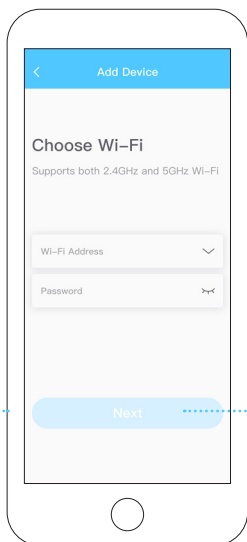



5

Scan the QR code with  
the robot camera.






6

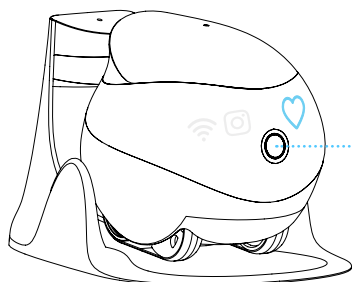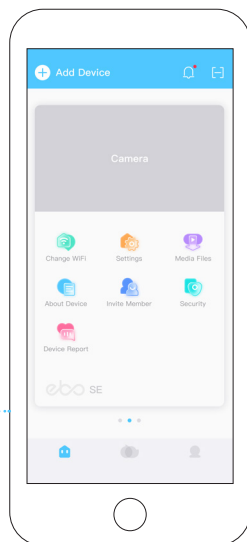Successfully Connected!

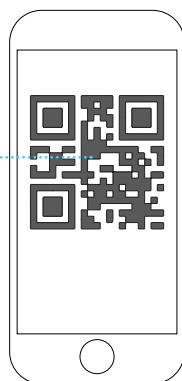



About 15cm apart



Scan the QR code with Ebo's camera until  and  are off,  
and the pairing is successful.

# Interface Instructions

---

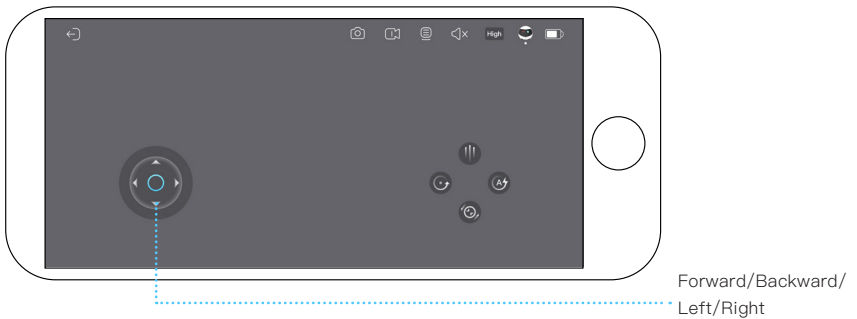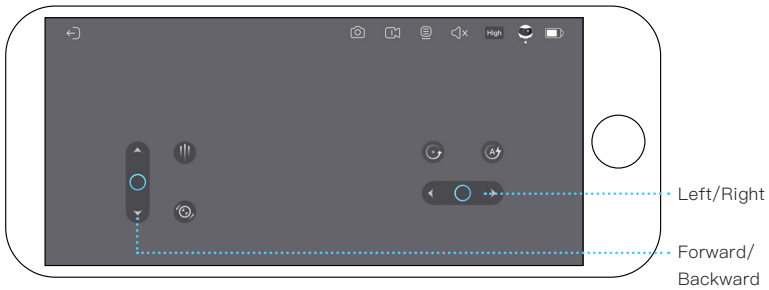

Battery



Exit



Operation  
Setting



Take  
Photo



Shoot  
Video



Mic.



Volumn  
On/Off



Run  
Forward







Rotating



Shaking





# General instructions

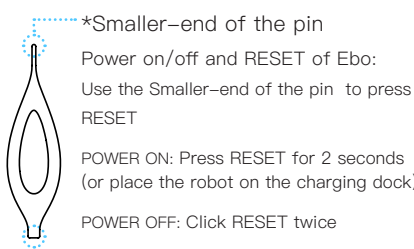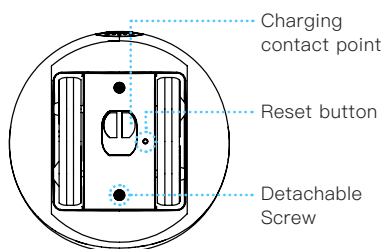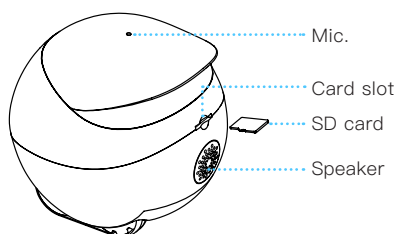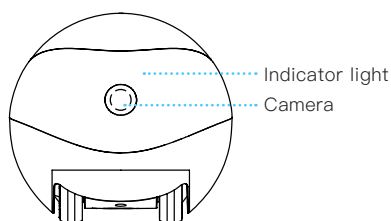

\*Larger-end of the pin

How to clean the wheels?

Dismount the screws at the bottom with the Larger-end of the pin to disassemble the wheel set for cleaning.

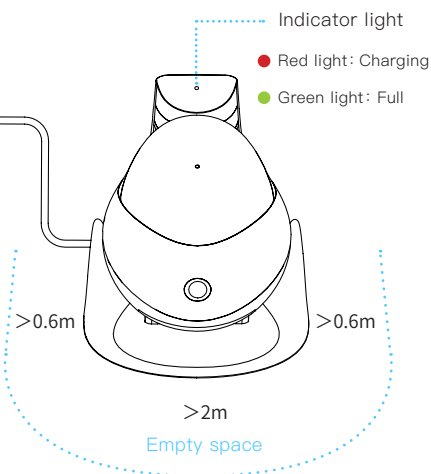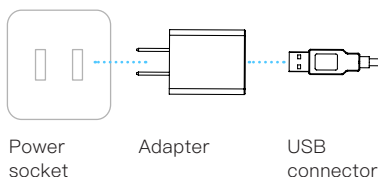

Note for charging Ebo:

Place the back side of the charging dock along the wall and free from any obstacles 0.6 meters on right/left and 2 meters in front.