
Dual Vibration Bark Control Collar Manual


READ AND FULLY UNDERSTAND THIS MANUAL BEFORE USE

Important Safety Information

- -This product is designed for no-pain correction with enhanced vibration and tone technology, which helps to stop barking for small & medium dogs with NO SHOCK.
- -This product is Vibration Bark Control Collar, the prongs cannot deliver shock.
- -This product is NOT intended for use on dogs under 6 months old.
- -NOT for use with aggressive dogs. Use the product under supervision.
- -Avoid leaving the product on dog for more than 12 hours per day. Never connect a leash to the collar.
- -Check the contact area daily for signs of rash or a sore. If a rash or sore is found, STOP using the product immediately until the skin heals.
- -Wash the dog's neck area and prongs weekly with a damp cloth.
- -The product senses the dog's high-frequency barking and other dog's barking may have a very small chance to activate the product. Decrease the sensitivity level when other dog's nearby.

Product Information

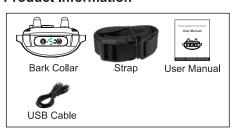

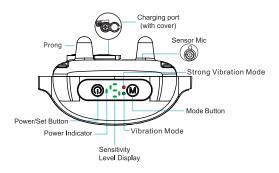

1.Test The Product

1A. Charge the Bark Control Collar before use



You can charge the product via PC, Power Bank or Adapter with output voltage of 5V for 2-3 hours.

Description for Power Indicator

- ≰Blink in green, device is on charge
- Solid in green, device is fully charged
- Solid in red.device is charged with improper charger

1. Improper charger means chargers with output voltage over 5V.

2. Output Voltage usually can be seen on surface of charger


1B. Power on the Bark Control Collar.




Press and hold the button for 1 second to power on



Indicator will be solid red or green after device is powered on. 1C. Set the Bark Control Collar to Test Mode, the display will show digit 0. After that, blow or bark like a dog towards the microphone sensor located at the back of the product.







1D. The Bark Control Collar Responds at Test Mode:



When the device is set on Test Mode, whether the mode indicator is on red or green, it will vibrate, beep then deliver stronger vibration after you blow or shout towards the microphone sensor.




If the product responds as described above, you've succeeded at setting up the collar properly!


2 Put The Product on Your Pet

2A. Attach the strap to the bark collar.

& Follow the A-B-C-D steps instructed to thread the collar.



Notes: If you have the TPU collar in your package, mark the desired length, leaving some extra inches (if your dog is still young and will grow more or for thicker winter coat), and cut off the excess. Seal the edge of the cut strap by holding it above the fire for a few seconds.



2B. Put the product on your dog.



Please ensure to fit the product snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck.



GREAT! Now you have successfully put the Bark Control Collar on your dog and it's ready for training.

3. Mode Setting

The following instruction will guide through the processes of switching modes.



Power on the device by pressing and holding the Power Button for 1 second.

Mode indicator will display green or red after device powered on.

Press the M button to switch Mode Indicator.

Green Mode Indicator means Vibration Mode.

Red Mode indicator means Strong Vibration Mode.

4.Indicator & Display

Mode Indicator		Power Indicator		Sensitivity Level	
				•	12345
SOLID	SOLID	SOLID	BLINKS	SOLID	Level 1~5
On Vibration Mode		On charged & fully Charged	Low Battery, or On charged but not fully charged	When device is powered on & charged with improper charger, power indicator will become solid. When device is powered off & charged with improper charger, power indicator remains off and becomes solid after pressing the power button. Notes: Improper chargers mean those with input voltage over 5V.	sensitive, level 1 is the least. One press on the power button a time to change the

Test Mode

On Test Mode. Press the power button to get to Test Mode. Display shows digit 0 when it is set on Test Mode, it will automatically display digit 5 after the test completes or test is not conducted within 10 seconds.

5. How It Works Vibration Mode Remains in Step 6 if Remains in Step 6 if Step 6 your dog keeps barking. Strong Vibration Mode Back to Step 1 if the device not activated for 1 minute. Back to Step 1 if the device not activated for Step 1 Step 1 The product will go to Strong next step if your dog Step 5 Step 5 keeps barking within 1 **Vibration** Vibration **** **(**1) minute. Mode **||||** Mode Step 2 Step 2 Will automatically back to Step 1 if the product **(1) Dual Motor Dual Motor** is not activated within 1 Step 4 Step Technology Technology minute. Step 3 Step 3

3

6. Frequently Asked Questions & Answers

Q: Why doesn't the product work when the dog barks?

A: Please first ensure to fit the product snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck. Some dogs has weak barking, in this case you will need to level up the sensitivity level. Thick coat on the neck area may also have small chance to decrease the sensing from the barking, trim the coat near the area where you place the product.

Q:Why is the product triggered sometimes in a noisy environment though the dog isn't barking? A: Though we have optimized the barking detection to the best, some environment noises may have similar frequency to barking, which may have small chance to activate the product. Please lower the sensitivity level.

Q:Can I use the product when there are other dogs playing around?

A:Dogs will bark when playing and get excited, for the comfort and safety of your pet, we don't suggest using this product in such environment.

Q:How do I know if I can use this product for my pet?

A: The product is designed for healthy dogs over 6 months old.

Most importantly, this product cannot be used on unhealthy or aggressive dogs, and if you are unsure whether this product is appropriate for your pet, please consult your veterinarian or a certified trainer.

Q:Can this product stop my dog's howl?

A:No, this Bark Control Collar is designed to detect the barking only. It cannot detect or stop the howling.

Q:Can I charge this product with any type of charger?

A:No, you are suggested to charge this product with charger of 5V output voltage, because charger with output voltage of 9V or 12V may cause damage to the product. The product will stop charging automatically if input voltage becomes too high and the power indicator turns red.

Q:Will my dog stop barking completely?

A:The Bark Control Collar effectively and humanely stops all barking when it is worn. It should only be worn during periods of unwanted barking.

Q:Is the Bark Control Collar safe and humane?

A:Yes. The Bark Control Collar is designed to get your dog's attention, not to punish him. This product does not have the shock unit and it will only deliver tone and vibration correction. However, the initial Strong Vibration Correction may startle your dog.

If the FQA cannot solve your problem or you need more help, please reach to our Customer Service.

Model: V2 Version 2.0 Made in P.R.C

The device has been approved for use in EU countries and is therefore provided with the **CE mark.** All necessary documentation is available on the website: www.electric-collars.com Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro Sedmidomky 459/8 101 00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu