


# B600

Automatic bark collar

**User Manual**

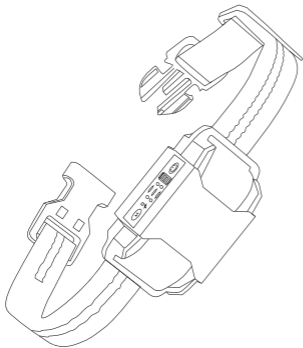

**Please Read This Entire User Manual Before Beginning**

# CONTENTS

<b>PRECAUTIONS</b>	<b>01-04</b>
<b>MAIN FEATURES</b>	<b>05</b>
<b>RELEVANT DESCRIPTION</b>	<b>06</b>
<b>HOW TO USE IT</b>	<b>07</b>
Turn on/Turn off	07
Two different function mode switching	07
This bark stopper has two different anti bark mode	08
Cycle and fixed mode switching	08
Note	09
<b>CHARGING</b>	<b>10</b>
Charging instruction	10
Charging device	10
Testing Light Instructions	11
<b>WEARING METHOD</b>	<b>11-13</b>
<b>SUMMARY OF FREQUENTLY ASKED QUESTIONS</b>	<b>13-14</b>

FCC COMPLIANCE	15
DECLARATION OF CONFORMITY	16-17
REFERENCE SIZE FOR DIFFERENT DOGS	18
ABOUT AFTER-SALES	19

## PACKAGE CONTENTS

1 x Receiver	1 x Nylon Strap
1 x USB Charging Cable	2 x Long Contact Points
1 x Test Light	2 x Short Contact Points
1 x User Manual	2 x Long Conductive Silicone Sleeve
1 x Warning Tag	2 x Short Conductive Silicone Sleeve

Thank you for choosing our products. The B600 bark stopper is a new type of effective pet training aid that can correct the dog's bad behavior, promote training and protect your pet. Hope our products can make you and your pet have more beautiful memories.

# IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this User Manual



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



**WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION**

**CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**CAUTION**

**CAUTION**, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.



## **WARNING**

Not for use with aggressive dogs. Do not use this product if your dog is aggressive, or if your dog is prone to aggressive behavior.

Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer. Do not puncture or incinerate the collar or the refill cannister. Do not expose to extreme heat or store at temperatures above 113 °F or 45 °C.

Lithium Rechargeable Batteries. This device contains Lithium-Polymer (Li-Polymer) batteries; never incinerate, puncture, deform, short-circuit, or charge with an inappropriate charger. Fire, explosion, property damage, or bodily harm may occur if this warning is not followed.

Do not expose the device to freezing temperatures (32 °F or 0 °C) or to conditions warmer than 113 °F or 45 °C. Do not leave the collar in direct sunlight. Never leave the collar in a car where the device can heat up to high temperatures (113 °F or 45 °C).



## CAUTION

This product is not a toy. Keep it away from the reach of children.

## CAUTION

Risk of skin damage. Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible, reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a leash to the electronic collar.
- When using a separate collar for a leash, don't put pressure on the electronic collar.

- Wash the dog's neck area and the contact area of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear smooth contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

This Bark Stopper be used only on healthy dogs. We recommend that you take your dog to a veterinarian before using the collar if he is not in good health.

# 1.Main Features



IC "Power Max"



IPX6 waterproof



Double button setting



500mAh large compacity battery



Voice + vibration intelligent dual trigger recognition system



Unique and accurate anti-trigger control detection




High power motor



The independent dual-mode level setting system



## 2.Relevant Description

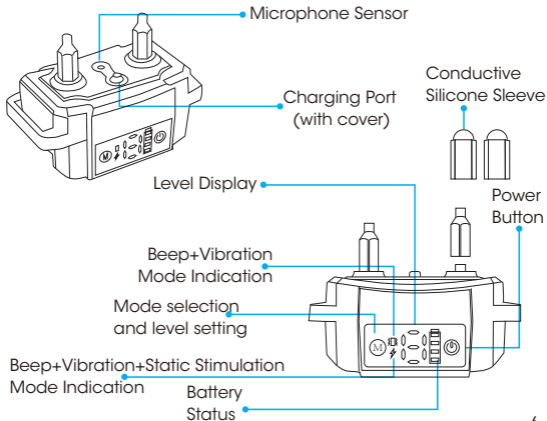

### 3.How to Use It

#### ① Turn on/Turn off

Turn on:5.Press the power button one time to turn on, the green light will on and with two beep.


Turn off:Press and hold the power button 1.5S, it will be tuerned off and with one beep.

Standby:will enter Standby mode after 1 minute of inactivity


#### ② Two different function mode switching

This bark stopper has two different function mode:With static stimulation function and without static stimulation function. And you could switch mode via press M button.

① With static stimulation function:with beep, vibration and static stimulation function,and the corresponding red stimulation icon is displayed.(3B)




3A




3B

②Without static stimulation function:with beep and vibration function, and the corresponding green vibration icon is displayed.  
(3D)



3C



3D

③This bark stopper has two different anti bark mode:cyclic and fixed.

A: Defaults mode is cycle mode.Under cyclic mode, first triggering is level 1 warning, If the dog continues to bark, then to level 2 warning, until the level 6 warning.


B: Fixed mode (The LCD display will show the current corresponding level): You can adjust the level by pressing and holding the M button. The level changes from 1 to 6.And please release the button when you got the leves you want.

#### 4 Cycle and fixed mode switching

##### Defaults mode is cycle mode


Press and hold the M button, then it switches to fixed mode. If press the power button three times continuously and quickly, then back to cycle mode, and LCD display shows 0

Press three times  
continuously and quickly



Cycle mode display

Press and hold the M button and  
switch to a fixed mode



Fixed mode display

Note:

1. With 1~6 different levels. Under both modes, when it is triggered, it will display and flash the current corresponding levels. For example, under level 6, it will display the number 6 and flash 3S until the bark stops and quit flashing.
2. Under both modes, after the 6th triggering, it will enter 'Protection Mode', will stop working for 1 minute and flashing '0'.


## 4.Charging ( please charge before use!)

### ①Charging instruction

Low battery: the battery indicator shows red and show one bar only (4A) . The battery indicator will scroll during charging and it will become solid green 4 bars when fully charged (4B).



4A



4B

②Charging device:The charging cable is a DC interface with 5V output voltage.

(Attention:please use our original charging cable to charge. If you use others, the output voltage must be 5V, otherwise it may cause charging failure)

### ③ Testing Light Instructions:

- A. Press the power button to turn on
- B. Hold the Test Light Contacts to the contact Points.
- C. Make the collar at with static stimulation function mode.
- D. Please send a similar sound of "Wang, Wang" to sensors (imitating dog barking). Since the frequency of human voice is different from that of dogs, please test more time.

## 5. Wearing Method:

Important note: The correct wearing and positioning of the bark stop collar is important for effective operation.

To ensure proper wearing, please follow the steps below:

- ① Make sure the bark stop collar is closed
- ② Keep your dog in a comfortable standing position.  
(As shown below A)
- ③ Place the bark stop collar on the dog's neck, place the bark stop collar control ring in the center, and the "on/off" switch on the operating surface of the collar faces upward. (As shown below B)
- ④ Check the tightness of the bark stop collar by inserting a finger between the dog's collar and the back neck. The proper position should be comfortable rather than tightened. (As shown below C)

5 Let your dog wear a collar for a few minutes, then recheck the fit of a box. Properly adjust the collar to make the dog more comfortable using the "bark stopper collar". (As shown below D)

6 Trim the collar as follows

A. Mark the required collar length with a pen.

B. Remove the bark stop collar from the dog and cut off the excessive length, and use a flame to seal the neckline along the worn edge.

C. Then put the bark stop collar on your dog



Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage.

1. Avoid leaving the collar on the dog for more than 12 hours per day.
2. When possible reposition the collar on the pet's neck every 1 to 2 hours.
3. Check the fit to prevent excessive pressure; follow the instructions in this manual.

4. When using a separate collar for a lead, don't put pressure on the electronic collar.
5. Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
6. Examine the contact area daily for signs of a rash or a sore.
7. Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.

## **6.Summary Of Frequently Asked Questions**

Q:Why doesn't the bark stopper work when the dog is barking?

A:There are many possible reasons, users can make some judgments and analysis based on the following:

1. Make sure the product is powered. And wear it correctly, need to wear the product under the dog's throat.
2. Not all barking will trigger, sometimes the dog barking is to welcome owner. We distinguished it via identification chip.The product is mainly for bad barking, continuous barking.

Q:Can I not use the static stimulation function?

A:Of course, just adjust the mode to without static stimulation function.



Q:Is the Vibration/Stimulation safe for my pet?

A:Although Vibration/Stimulation is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.

Q:Once my pet has been trained and not have bad barking, will he have to continue to wear the collar?

A:Probably not, but you also can turn off the collar and left it on dogs to strengthen training.

Q:Is the product waterproof?

A:Yes. But please make sure that the rubber cover for charging is placed in the correct position and that dogs are not allowed to swim with it.

Q:How about the after-sales service?

A:If it is quality problem, not caused by man-made damage or misoperation, we guaranteed 1 year.

We recommend that you start at without static stimulation function mode to let your dog can adapt to the beep/vibration function first, avoid excessive reactions. If your dog shows no reaction for beep/vibration, then start at level 1 static stimulation. Please note always start at the lowest level.

## 7.FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,


the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 8. Declaration of Conformity:

 Declaration of conformity (see chapter „Declaration of conformity“): Products designated with this symbol fulfill all applicable community provisions of the European Economic Area.

 This symbol certifies that the device's electromagnetic interference is below the limit approved by the United States Federal Communications Commission.

 Disposal: Disposing of packaging Dispose of the packaging according to type:

- Cardboard and carton to waste paper
- Foils in the recycling collection



Disposing of the device Applicable in the European Union and other European countries with systems for separate collection of recyclable materials.



Old devices must not be disposed of in household waste! If the Modular Remote Trainer can no longer be used, all consumers are required by law to hand over the old devices separate from household waste, for example, at a collection point of their local community/district. This ensures that the old appliances are properly recycled and that negative effects on the environment are avoided.

That is why electrical devices are marked with the symbol shown here.

#### Reference Weight for Dogs

Large Dog (Body height above 24 inch, Weight above 88 lbs)

Medium Dog (Height 16-24 inch, Weight 24.2-66 lbs)

Small Dog (Height 10-16 inch, Weight 8.8-22 lbs)

Mini Dog (Height under 10 inch, Weight under 8.8 lbs)

## Reference Size for Different Dogs

Size	Neck(In)	Chest Measurement (In)	Back Length (In)	Type
Mini	7.8-8.6	9.8-11.8	7.5	Chihuahua, Yorkshire Terrier
Small	7.8-9.5	11.4-14.2	9	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian
Medium	9.0-11.0	13.7-16.5	11	Maltese Dog, Shih Tzu
Large	9.6-12.2	16.2-18.5	12.2	Miniature Schnauzer, Pekingese
Large	11.8-13.4	18.1-20.8	13.8	Schnauzer, English Cocker Spaniel
Large	13.0-14.5	20.5-23.2	15.7	Beagle
Huge	17.0-18.9	30.0-33.0	23.6	Husky

## **About after-sales:**

1. If the product is faulty within 30 days from the purchase date, you need to take a video or picture of the faulty product. After the customer service confirms, the replacement can be sent. And the faulty product must be returned within 7 days after receiving the replacement.
2. If the product is faulty after 30 days, and it is still within the 1-year warranty period from the purchase date, the consumer will be required to return the product and pay the freight. We will test and replace the faulty parts, and returned to you free of charge.
3. This warranty is a supplement to other rights and remedies provided by law. For major failures and any other compensation, if it is a reasonably foreseeable loss or damage, you are entitled to a replacement or refund.
4. You also have the right to repair or replace the goods in the following cases: the quality of the goods is unqualified, and the failure does not constitute a major failure. If you have any questions or need more information, please contact our customer service.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: [www.electric-collars.com](http://www.electric-collars.com)  
Changes to technical parameters, properties and printing errors reserved.

### **Service center and distribution**

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: [info@electric-collars.eu](mailto:info@electric-collars.eu)