


Bark Collar

User Manual


Model BC01

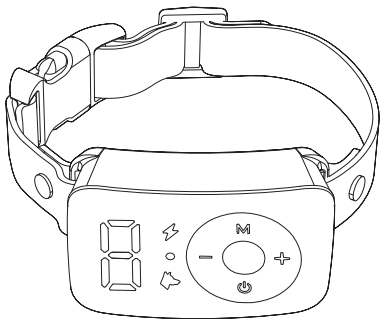


0.3.0.02.BC0100-ZX-01

Please read the manual carefully before using

Package Contents



① Bark Collar



② Test Light Tool



③ Charging Cable



④ Contact points





⑤ Silicone Caps




⑥ User Manual

Overview

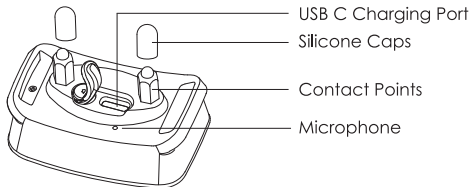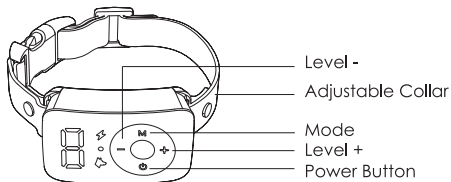

Display

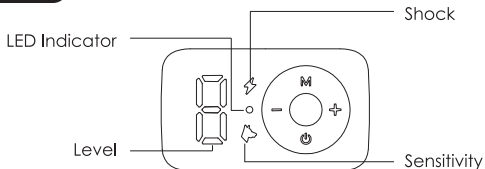

WARNING

Not for use with aggressive dogs. Do not use this product if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injuries to their owners and others. If you are not sure if this product is right for your dog, please check with your veterinarian or certified trainer.


CAUTION

Risk of skin damage.

A collar worn for too long or made too tight on the pet's neck may cause skin damage ranging from redness to pressure ulcers. This condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 8 hours per day.
- When possible reposition the collar on the pet's neck every 1-2 hours.
- Never connect a lead to the electronic collar. It will cause excessive pressure on the contacts.
- If a rash or sore is found, discontinue using the collar until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
- This product is not a toy, please keep away from children.
- This product is only for use with healthy dogs over 6-month old.

1 Charge the Bark Collar

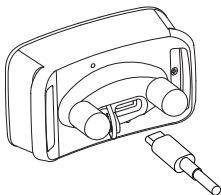


LED Indicator

USB C Charging Port

When charging is completed, steady green light.


2 Turn On the Bark Collar

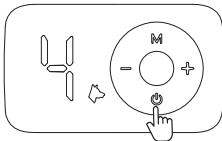

Press and hold the power button for 2 seconds to vibrate once to open the bark collar.


Note: If there is no operation button for 10 seconds, the device will automatically lock, press and hold the power button for 2 secs to unlock.

3 Turn Off the Bark Collar

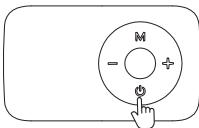


Press and hold the power button for 2 seconds to vibrate once to turn off the bark collar.


4 How to Adjust Sensitivity Level

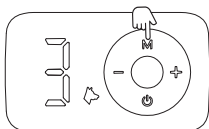

Press the "M" key,
"Dog ICON" lights up.

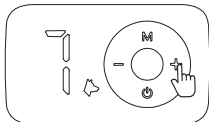

Press the "+" key to
increase the sensitivity level.


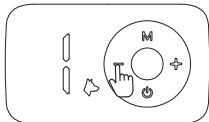



Press the "-" key to decrease
the sensitivity level.


How to Adjust Shock Level



Press the "M" key, "SHOCK ICON" lights up, press the "+" key to increase the shock level, and press the "-" key to decrease the shock level.

Note: "1-5" means custom mode, "0" means no shock mode, "A" means automatic mode.

Custom Mode	Barking Times	Functional Feedback
<div>1-5</div> 	1	Vibration once
	2	Beep once + Shock once
	3	Beep once + Shock once
	4	Beep once + Shock once
	5	Beep once + Shock once
	6	Beep once + Shock once
	After 6	The function is locked for 30 seconds, the screen flashes "P" once for 1 second, and it takes effect again after 30 seconds.

No Shock Mode	Barking Times	Functional Feedback
<div>0</div> 	1	Vibration once
	2	Beep once + Vibration once
	3	Beep once + Vibration once
	4	Beep once + Vibration once
	5	Beep once + Vibration once
	6	Beep once + Vibration once

	After 6	The function is locked for 30 seconds, the screen flashes "P" once for 1 second, and it takes effect again after 30 seconds.
---	---------	--

Automatic Mode	Barking Times	Functional Feedback
<div data-bbox="166 293 187 319">A</div> 	1	Vibration once
	2	Beep once + Shock 1 Level once
	3	Beep once + Shock 2 Level once
	4	Beep once + Shock 3 Level once
	5	Beep once + Shock 4 Level once
	6	Beep once + Shock 5 Level once
	After 6	The function is locked for 30 seconds, the screen flashes "P" once for 1 second, and it takes effect again after 30 seconds.

How to Find the Best Level for Your Dog


Follow the steps below to find the best Level:

1. Starting at Level 1 to see the reaction when the dog barks.
2. Gradually increase the sensitivity and shock levels until your dog reliably responds to the shock.
3. If your dog continues showing no response at Shock Level 3, check the "Fit the Bark Collar"(Page 10). If your dog has long or thick hair, installs long contact points, or dog's hair will need to be trimmed around the contact points, If the "Contact Points" is no contact with the dog's skin, there will be no static stimulation.


Note: If all of these steps have been taken and the dog continues showing no reaction, see the "How to Use Test Light Tool"(Page 9).

How to Install Contact Points




1

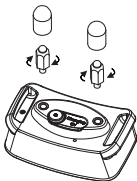

2


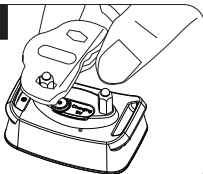


3

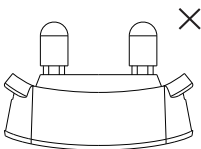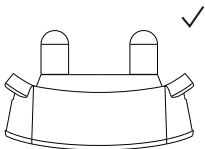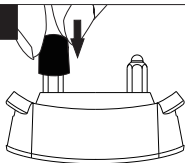


How to Use Test Light Tool

1. Press and hold the "M" key for 3 secs to enter test mode.
2. Put the test light tool vertically on the 2 contact points, making sure the metal wire has direct contact with the top of the 2 points.
3. Shout "WO WO" aim to the Microphone, the device responds to the beep and vibration function. The test light will be lit.
4. After the test is completed, press and hold the "M" key for 3 seconds to exit the test mode.

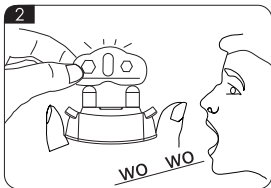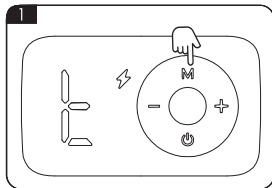


Note: For dog with shorter coats use the 2 contact points and install the conductive silicone caps onto the contact points to make it softer, which may be better for your dog's skin.
For dog with thicker coats, please install contact spring sheet.

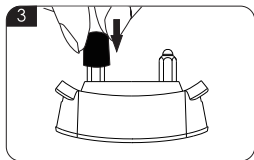

Fit the Bark Collar

The contact points must have direct contact with the dog's neck skin. Check the tightness of the collar by inserting one finger snugly between the collar and neck.

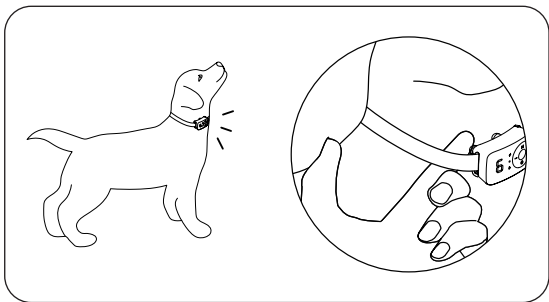

How to adjust the collar

1



2



3



4



5



6



Question & Answer

Q: Is the shock safe for my pet?

A: The static electricity is safe for your pet. So please feel at ease to use the collar. But please do select the appropriate static electricity level. And do start from the lowest level and increase the level gradually until your dog responds.

Q: Is the bark collar waterproof?

A: The bark collar is IPX5 rainproof, please keep the bark collar away from water.

Q: Does growling trigger this collar?

A: Growling can trigger the collar. Please set the sensitivity level to the lowest setting and are only using the vibration, the shock setting is at "0".

Q: How can I get support when I have product problems?

A: Any problems with the product, please feel free to contact us at any time via service@patpet.com. We will do our best to help you.

Troubleshooting

Q: My dog keeps barking and the bark collar doesn't work.

A: Please check the power of the device is sufficient, make sure the device is turned on, check the contact points of the collar fit the dog's skin, and check whether the microphone hole is blocked. If the problem is still not solved, please feel free to contact us at any time via service@patpet.com. We will do our best to help you.

Warranty

1-Year Warranty

The original purchaser for this unit is provided with a 1-YEAR Warranty. The warranty begins on the date of purchase. For the first year, coverage is provided for both parts and labor on warranty repair services. After the first year, the Limited Lifetime Warranty covers parts only, and does not cover labor fees and Accessories. Accessories such as straps and batteries are covered for the first year only. All shipping fees incurred, the cost of accessories after the first year, and labor fees associated with out of warranty repair work are the customers responsibility.

Not Covered Under Warranty

We DO NOT offer warranty for products that have been bought secondhand or were resold. Issues of replacement and refunds on units purchased in less than 30 days from an authorized dealer must be addressed to the dealer directly. If the products purchased from an authorized dealer are 30 days after the date of purchase, please send the units to us for service and repair. We DO NOT cover the cost of repairs and replacements due to misuse by the owner or dog, improper maintenance, and/or lost units. The warranty is void if the unit has been altered or an unauthorized person has damaged the unit while attempting repair work.

Procedure for Repair Work

If the unit is malfunctioning, please refer to the "Troubleshooting" (Page 13) in the manual before sending it back for service. A copy of the sales receipt showing the purchase date may be required before warranty work is initiated. Please include a brief explanation outlining the problem, and include your name, address, city/state/zip code, daytime phone number, evening phone number, and email address.



MADE IN CHINA

装订方式	骑马钉	尺寸	80(宽)mm*100mm(长)	颜色	单色+哑油
名称	BC01说明书(感恩)	材质	128g双铜	版本日期	2022年9月13日

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu