



AI Cat Litter Box (Young)

SCOOPER User Manual



Toll free: +1 833 440 2772 Email: support@catlink.cn

Toll free: +1 833 440 2772 Email: support@catlink.cn

Thank you for purchasing a CATLINK AI Cat Litter Box Scooper -Young!

CATLINK aims to develop products that keep your pets happy and make your life easier. This manual will help you get the most out of your Scooper-Young. We will guide you through the setup process, as well as provide you with useful tips and advice.

There are many features to explore with the Scooper-Young, so keep this manual handy for future reference. If you need assistance, or a little extra time, please email us at support@catlink.cn or call us +1 833 440 2772. Enjoy your Scooper-Young, and Enjoy your Freedom!

CATLINK


Important Safety Instructions

- **Always** be sure any cat in your household that might use the Scooper weighs at least 3.3 lbs. Cats must weigh 3.3 to 22 lbs to safely use the Scooper.
- **Always** place the Scooper on a firm, level surface. Avoid soft, uneven, or unstable flooring, which may affect the ability of the unit to detect your cat.
- **Always** unplug the unit before servicing.
- **Never** force your cat into the Scooper.
- **Never** put anything in the unit other than dumping litter or litter beads that are small enough to pass through the screen.
- **Never** sit on or place anything on top of the Scooper.
- **Never** push the Scooper against a wall or into a corner (must not be touching any walls).
- **Never** remove the Globe or Bonnet while the unit is rotating or turn the unit on if the Globe or Bonnet are removed.
- **Never** wet or submerge the Bonnet or Base.
- **Never** allow children and people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge to use, clean, or maintain the Scooper without supervision, instruction concerning its use in a safe way, and understanding of the hazards involved. Children below 8 years of age should not be allowed contact with the Scooper.
- **Never** allow children or others to play with the Scooper.
- **Never** use an external power supply other than the one provided with the unit.
- If the external power supply is damaged, please contact us for a replacement.


【Table of Contents】

- 【Product Structure】----- 01
- 【Packing List】----- 02
- 【Setting Up Your Scooper-Young】----- 03
 - 1.Placement ----- 03
 - 2.Power and Initial Test Cycle ----- 04
 - 3.Cat Litter ----- 05
- 【Control Panel-Button Functions】----- 06
 - 1.Control Panel ----- 06
 - 2.Button Functions ----- 07
- 【Indicator Lights】----- 08
- 【Protection Mechanism】----- 09
- 【Replace All Cat Litter】----- 10
- 【Cleaning and Attentions】----- 11
- 【Troubleshooting】----- 13
- 【Accessories】----- 15
- 【Product Specifications】----- 16
- 【Customer Service】----- 17


【Product Structure】

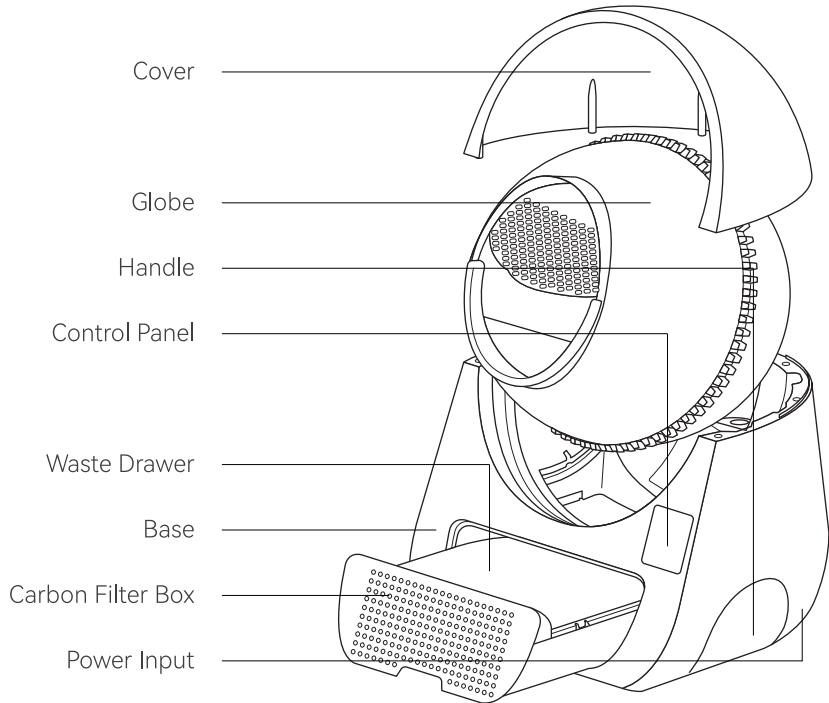

【Packing List】

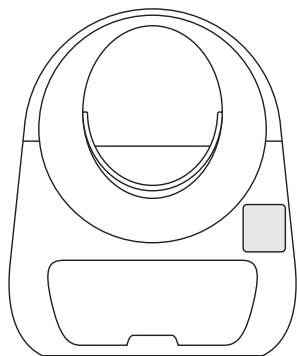

AI Cat Litter Box




Power Adapter



Trash Liner




User Manual
(Warranty Card)




Suitable for
Bentonite Cat Litter

Two Screens
(2 options, choose one to use)



Suitable for
Mixed Cat Litter

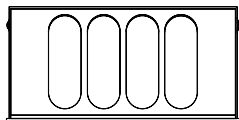


Carbon Filter Box

The carbon filter box has been placed in the waste box. CATLINK recommends taking this part out every month and exposing it to the sun, and replacing it every 2 months.

【Setting Up Your Scooper-Young】


Once you have assembled the product and confirmed that the package is complete, get started by following the steps below.

【Placement】

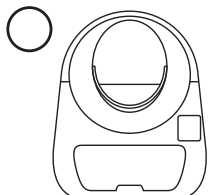

1

Make sure that the unit is placed on flat and solid ground with no other object at the bottom. Avoid soft, uneven, or unstable flooring.

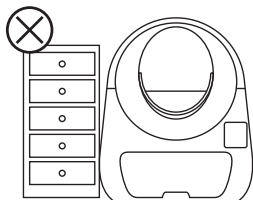


2


Locate the unit near a power outlet. Ensure the unit isn't pushed against a wall or into a corner (must not be touching any walls), and there is no other objects are placed on the top.

【Power and Initial Test Cycle】


- 1 Check whether the Trash Liner is properly placed, and properly push the Waste Drawer back to its position.

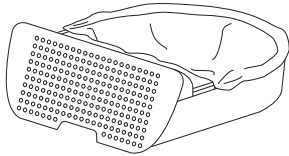

- 2 Plug the small end of the Power Supply into the Power Input at the back of the Base. Then plug the adapter into a wall outlet.

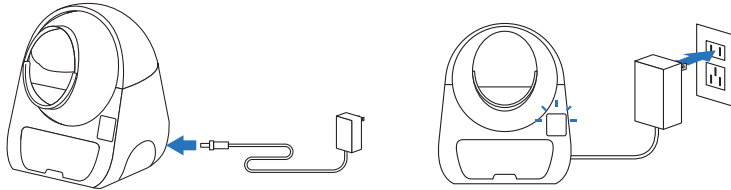


- 3 The unit will perform a test cycle every time it is plugged in. DO NOT touch the unit or buttons during this process. It takes about 3 minutes.

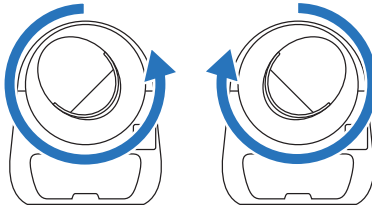

【Cat Litter】

Fill the Globe through the opening with clumping litter until it meets the Fill Line when spread flat. Be careful not to overfill the Globe.

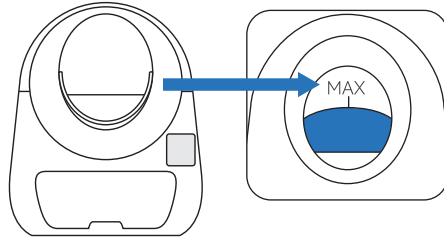

The Scooper-Young litter sifting system requires clumping litter to work properly. We recommend a bentonite clumping cat litter.


DO NOT use litters that are non-clumping, loose-clumping, newspaper-based, or wood-based pellets.

If you are using a litter alternative not listed here, please contact Customer Service to make sure you are using a compatible litter.





Congratulations!
Your Scooper-Young is now ready to use!

【Control Panel- Button Functions】

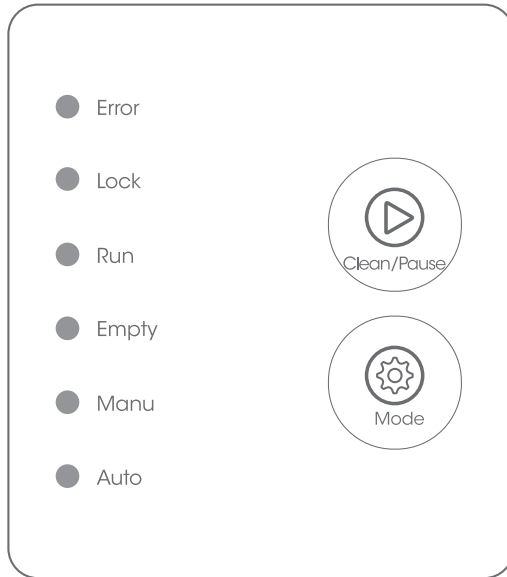1.Control Panel



2.Button Functions

Button		Operation	Explanation
Clean/Pause		Press and Release	
Mode Switch		Press and Release	The mode will switch from auto, manu and empty.
Panel Lock		Press and Hold Release the buttons when you hear a "Beep"	Press and hold the Clean/Pause button and Mode button. Release the buttons when you hear a "Beep". The lock indicator is on, the locking is successfully enabled. If you want to disable the panel locking, repeat the above-mentioned operations.
Set Wait Time		Press and Hold Release the buttons when you hear 3 "Beep"	Press and hold the Clean/Pause button and Mode button. Release the buttons when you hear 3 "Beep". The indicator flashes, the unit enters Wait Time setting mode. Press the Mode button to select the Wait Time you want to set. 3min- Auto flashes 5min- Manu flashes 10min-Empty flashes Press and hold the Clean/Pause button and Mode button to save the setting. Release the buttons when you hear 3 "Beep". The Wait Time set successfully.

【Indicator Lights】

Indicator	Status	Explanation
● Error	On	The unit is in cat protection and now the unit will not rotate. After confirming that your cat is safe, press the Clean/Pause button to cancel the cat protection state.
	Flash	The Waste Drawer is full and the Trash Liner needs to be replaced.
● Lock	On	Panel lock on.
	Off	Panel lock off.
● Run	On	The unit is rotating.
● Empty	On	The unit is in Empty mode. Press and release the Clean button, the unit rotates and dumps all the cat litter into the Waste Drawer below.
● Manu	On	The unit is in Manu mode. Press and release the Clean button, the unit does a Clean cycle and dumps waste into the Waste Drawer below.
● Auto	On	The unit is in Auto mode. When a cat enters the Globe, the Cat Sensor is activated. Once the cat exits the Globe, the countdown to a Clean cycle begins. When the Wait Time has elapsed, a Clean cycle begins.

【Protection Mechanism】


Protection Function	Priority	Explanation
Weighing	Level 1	During the rotation of the Globe, if a object over 3.3lbs enters, the weighing protection will be triggered, and the Globe will stop rotating. When the object is detected to leave, the Globe will resume rotation.
Anti-pinch	Level 2	When the Globe's litter outlet is facing downwards and the anti-pinch device is triggered during rotation, the Globe will release the maximum litter outlet space and stop rotating. This protection can only be lifted after human intervention.
Motor Stalled	Level 3	The Globe will stop rotating when the motor resistance suddenly increases during the rotation. This protection can only be cancelled with human intervention.

[Replace All Cat Litter]


- 1** Press and release Mode button to switch to Empty Mode.




- 2** Press and release Clean/Pause button, the unit starts to rotate clockwise.

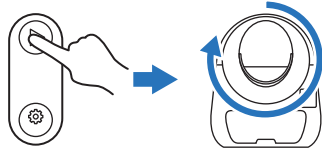




- 3** After all the cat litter has fallen into the Waste Drawer, press and release the Clean/Pause button again, the Globe returns to Home position.

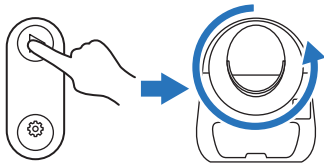

- 5** Fill the Globe through the opening with dumping litter until it meets the raised Fill Line when spread flat. Press and release Mode button to switch to Manu Mode. Press and release Clean/Pause button to do a clean cycle for paving cat litter.

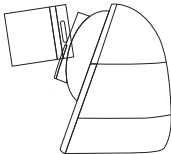


- 4** After the Globe returns to the Home position, lift out the Trash Liner filled with the waste clump and throw it away. Put on a new Trash Liner, and then put the Waste Drawer back in place.

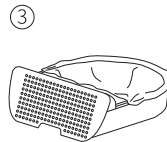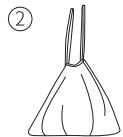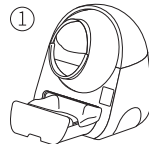


【Cleaning and Attention】



- 1 Refer to the steps of 【Replace all cat litter】 , empty the cat litter and then power off the power.

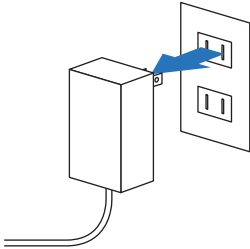


- 2 Remove the top Cover.

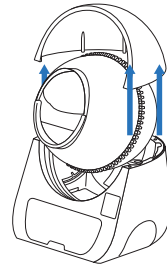


- 3 Remove the Globe (Note: remember to remove the pivot support rod on the back of the Globe).

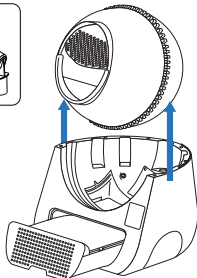


- 4 Pull out the Waste Drawer and take out the Carbon Filter Box (we recommend exposing the box to the sun once a month and replacing the box every two months).

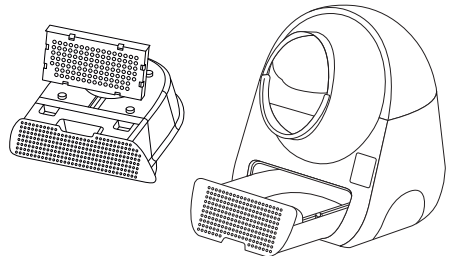


5 Directly washable parts.

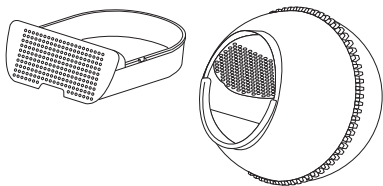




6 Parts that can be wiped with wet wipes (including electronic parts, not directly washable).

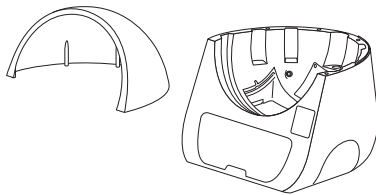

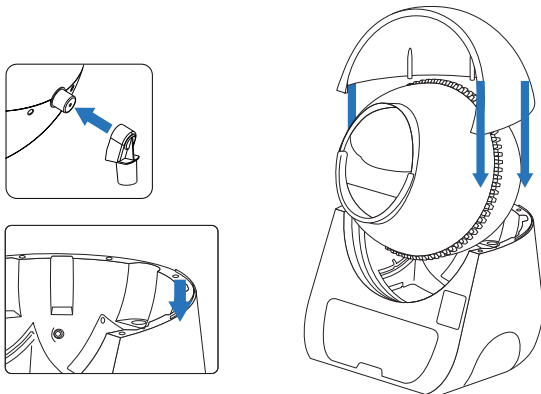

7 After cleaning, put the Carbon Filter Box back into the Waste Drawer, assemble the litter box according to the steps, and it can be used normally.








【Troubleshooting】

Trouble	Solution	Steps
Unit stops working in Auto mode	Calibration	1 Please ensure that there are no objects around the machine, the ground is flat, and the bottom sensing feet are active.
		2 Prepare reference object. Can use 3.3lbs items, 3 bottles of 16.9 fl oz water.
		3 Unplug the power cord and plug it back in. 
		4 After the Globe starts to rotate, put the 3.3lbs item into the Globe. 
		5 At this time, long press the "setting" button on the panel, when you hear 5 "beep"s and release your finger, and the manual indicator light "flashes". 
		6 When you hear a "beep" and the manual indicator light on the panel is "off", the calibration is successful.

Trouble	Solution	Steps
Unit stops working caused by full Waste Drawer or weighing protection	Cancel manually	<p data-bbox="639 277 810 323">Press and release Clean/Pause button.</p> 
Unit stops working caused by anti-pinch protection	Cancel manually	<p data-bbox="639 440 810 486">Press and release Clean/Pause button.</p> 

【Accessories】

Name	Product pictures
Trash Liner	
Carbon Filter Box	
Ramp	
Clumping Litter	
Odor Remover	

You can order the above products on Amazon.com or www.catlinkus.com



Amazon.com



www.catlinkus.com

【Product Specifications】

Product Name	CATLINK AI Cat Litter Box (Young) - SCOOPER
Product Model	CL-03
Main Material	PP
Product Size	23.62 x 22.83 x 27.95 inch
Rated Voltage	12V \equiv
Rated Power	5W
Applicable Scope	Cat (3.3-22 lbs)
Weight	24.25 lbs
Carried Standard	GB 4706.1-2005

【Customer Service】

We will provide customers with a one-year free warranty service.
If you have questions or need assistance, contact us!

Phone Support

+1 833 440 2772

Mon–Fri: 10AM–6PM EST

Email Support

support@catlink.cn 24/7

Toll free: +1 833 440 2772 Email: support@catlink.cn



Toll free: +1 833 440 2772 Email: support@catlink.cn

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu