

User Manual

600 Yards Rechargeable Remote Training Collar

Model Number: T600



Please read this manual before beginning

Important Safety Information

⚠️WARNING Not for use with aggressive dogs.

Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

⚠️WARNING Risk of explosion if battery is replaced by an incorrect type.

Do not short circuit, mix old and new batteries, dispose of in fire, or expose to water. When batteries are stored or disposed, they must be protected from shorting. Dispose of used batteries properly.

⚠️CAUTION Safety during on-leash training.

It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

⚠️CAUTION Risk of skin damage.

Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet’s neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet’s neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.

- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
 - When using a separate collar for a lead, don’t put pressure on the electronic collar.
 - Wash the dog’s neck area and the contacts of the collar weekly with a damp cloth.
 - Examine the contact area daily for signs of a rash or a sore.
 - If a rash or sore is found, discontinue use of the collar until the skin has healed.
 - If the condition persists beyond 48 hours, see your veterinarian.
- . These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear harmless contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

Packing List:

- 1 X Handheld Transmitter
- 1 X Receiver with Nylon Collar Strap
- 1 X USB Charging Cable
- 2 x Long Contact Points
- 2 x Long Contact Points
- 1 X Test Light
- 1 x User Manual
- 1 x Lanyard



MAIN FEATURES

1. Brand-new Signal Wake-up Technology, battery work time up to 90 Days.
2. Pioneering Design with separated adjustable Tone level.
3. Humane Design-Maximum Static Stimulation Period is 5 seconds.
4. 3 training modes: static stimulation/ vibration/ beep. 0-3 Adjustable Intensity Levels for Tone; 0-8 Adjustable Intensity Levels for Vibration;
0-16 Adjustable Intensity Levels for Static Stimulation. If the level set 0, the mode is inhibited.
5. IPX6 Waterproof Receiver Collar and IPX5 Waterproof Transmitter.
6. Maximum remote range up to 600 yards in the open area without any interference.
7. Train up to 2 dogs with one remote transmitter (separately purchase additional receiver)
8. Rechargeable collar and transmitter.

DESCRIPTION



①.LCD Screen:

The LCD Screen will display different modes of the collar and the different channels for two collar receivers as well as battery indication.

Channel A/B will be displayed on the screen

②.**Static Stimulation Button:** Pressing the “Static Stimulation”button, the receiver

will emit static stimulation. If set level 0 , NO stimulation

③.**Vibration Button:** Pressing the “Vibration” button, the receiver will vibrate. If set level 0, NO vibration

④.**Beep Button:** Pressing the “Beep” button, the receiver will emit beep sound. If set level 0, NO beep

⑤.**Intensity Up/down Buttons:** Selects intensity level of beep,vibration and static Stimulation.

⑥. **Channel Button:** Pressing this “A B”button will shift channel between the first and second collar receiver.

⑦.**Charging port:** Insert charging cable into charging port to charge the Transmitter.

⑧. **Turn on/off the Receiver:**Turn on/off the receiver by press the “Power” button one time.

⑨. **Micro USB port:** Insert charging cable into Micro USB port to charge the receiver.

HOW TO USE

Note: Please charge before using the product!

1. Charge the remote transmitter:

- 1) Connect the charger cable to the charging port.
- 2) Plug the charger into a standard outlet.
- 3) The icon of battery will flash.
- 4) Charge the transmitter for about two hour for the first charge or until the icon of battery stops flashing.

2. To turn the Transmitter on

- 1) Press any button to active the Transmitter. The backlight on.
- 2) Backlight will stay for about 5 seconds. if no operation then, backlight off.
- 3) LCD display will stay for about 50 seconds. if no operation then, LCD display shuts off.

3. Charge the collar receiver:

- 1) Connect the charger cable to the Micro USB port.
- 2) Plug the charger into a standard wall outlet.
- 3) The red light will flash on the receiver
(If not or green light, please plug the charger again).
- 4) Charge the receiver for about two hour for the first charge or until the light indicates charging complete.

4. To turn the Receiver Collar on

Press the power button once, the blue light will flash

5. To turn the Receiver Collar off.

Press the On/Off Button until the blue light is gone, it means the receiver is turned off.

6. Connect transmitter and receiver

- 1) With the Receiver Collar off your pet, turn on the receiver collar.
- 2) Press the power button of receiver once again, the red light will always on.
- 3) Press the TONE, VIBRA or Static Stimulation(any of them) on remote, the blue light on receiver will flash, it indicates pairing is completed.
- 4) Press the TONE button, the receiver receives the command and makes a sound.
- 5) If the pairing were not successful, please repeat the 1-3 steps.
- 6) To match the second receiver, press the "A B" button and select for the second receiver and follow the same procedure.

Two Dog System

NOTE: If you wish to add another Receiver Collar to the training system, extra Receiver Collars are available where you bought your unit.

7. How to use the Test Light

- 1) Turn the Receiver Collar on.
- 2) Hold the Test Light Contacts to the Contact Points.
- 3) Press the SHOCK Button on the Remote Transmitter.
- 4) The Test Light will flash.

Note: At higher Stimulation Levels, the Test Light will flash brighter.

- 5) Turn the Receiver Collar off.

Save the Test Light for future testing.


Note: If the Test Light does not flash, recharge the Receiver and re-test.

How to Connect transmitter and receiver:

1. Turn on the transmitter



2. Turn on the receiver

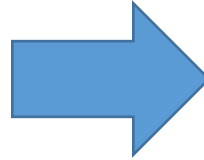

3. Press the "power" button once again, the red light will always on.



Note:

1) If the pairing were not successful, please repeat the 1-4 steps.

2) To match the second receiver, press the "A B" button and select for the second receiver and follow the same procedure.

3) If you wish to add another Receiver Collar to the training system, extra Receiver Collars are available where you bought your unit.

4. Press the TONE, VIBRA or Static Stimulation (any of them) on remote, the blue light on receiver will flash, it indicates pairing is completed.



Test Light

Important Notice:

1. The display of transmitter stays on for approximate 6 seconds after a button press. After 6 seconds with no button press, the blue backlight shuts off first, and if no button press with another 50 seconds, the display shuts off and the transmitter goes into sleep mode with auto-vibration, pressing any button with auto-vibration will turn the display back on.

2. The receiver will be into shallow sleep mode if stop working for 5 seconds, and if without any operation for 50 seconds, it will be into deep sleep mode. Any commands from the transmitter will activate the receiver.

3. Press "A B" button for selection. Channel A controls the first receiver and Channel B controls the second receiver. Channel A B controls both the two receiver.

4. The design of the receiver is rainproof. The rubber cover has to be put in the right position to ensure rainproof effect.

5. Test static stimulation function

- 1) Place the Test bulb to the metal screws (ensure the metal points are attached when test the stimulation function).
- 2) Press the "Static Stimulation" button, and the LED light will flash on.

6. How to find the best Vibration/Stimulation Level?

The level of Vibration/Stimulation best suited for your dog depends on your dog's temperament and threshold for Vibration/Stimulation. Always start at the lowest level and work your way up.

The appropriate level can be found when the dog responds to the Vibration/Stimulation with a mild reaction, such as a tensing of the neck muscles. The Vibration/Stimulation Level may vary depending on the training situation. When highly distracted, dogs will require a higher level of Vibration/Stimulation

Frequently Asked Questions

Q: Is the Vibration/Stimulation safe for my pet?

A: While the Vibration/Stimulation is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.

Q: How old does my pet have to be before using the Remote Training Collar?

A: Your pet should be able to recognize basic obedience commands such as "Sit" or "Stay". Pets should be at least 6 months old before using the Training Collar.

Q: Once my pet is trained and has been obeying my commands, will he have to continue to wear the Receiver Collar?

A: Probably not. You may need to reinforce training with the Receiver Collar from time to time.

Q: Is the Receiver Collar waterproof?

A: It's water resistant/rainproof. Be sure to keep the rubber cover put in the right position and do not make the dog swim in water.

Q: How long can I continuously deliver Vibration/ Stimulation to my pet?

A: The maximum amount of time you can press the Stimulation Button and deliver Stimulation to your pet continuously is 5 seconds. And the maximum amount of time you can press the Vibration Button and deliver Vibration to your pet continuously is 10 seconds. After this, Vibration/Stimulation cannot be delivered until you release and press the button again.

Q: How long should I process my training session for my pet?

A: Training sessions should be kept positive and short, it is better for about 10-15 minutes each time.

Common size of different dogs

| Size | Neck | Chest Measurement(cm) | Back Length(cm) | Type |
|--------|-------|-----------------------|-----------------|--|
| Mini | 20-22 | 25-30 | 19 | Chihuahua, Yorkshire Terrier |
| Small | 20-24 | 29-36 | 23 | Chihuahua, Yorkshire Terrier, Poodle, Pomeranian |
| Medium | 23-28 | 35-42 | 28 | Maltese Dog, Shih Tzu |
| Large | 27-31 | 41-47 | 31 | Miniature Schnauzer, Pekingese |
| Large | 30-34 | 46-53 | 35 | Schnauzer, English Cocker Spaniel |
| Large | 33-37 | 52-59 | 40 | Beagle |
| Huge | 43-48 | 76-84 | 60 | Husky |

General Training Tips

The following tips will show you how to get the best performance out of your Dog Training Collar.

- (1) Make training sessions short and positive (about 10-15 minutes for each session.) This will enable the dog to focus on the trainer.
- (2) Training one dog each time is recommended.

- (3) During the first initial training sessions, keep the dog in a familiar outdoor environment. Training in a place that the dog is not familiar with may make the dog become distracted.
- (4) Use a long leash fastened to a non-metallic collar to help the dog to learn. Ensure that the additional collar and leash does not interfere with the Contact Points of the Collar Receiver. Do not use the remote training collar without a long leash unless your dog is fully trained.
- (5) More success will occur by teaching the dog a command first before trying to reinforce the command with the Remote Transmitter.
- (6) For basic obedience training, vibration is more useful.
- (7) Issue one obedience command each time, this will reduce confusion and allow the dog to remain focused. Do not use the training system for commands that the dog has not learned.
- (8) During training, look for all the positive changes in the dog's behavior and remember to encourage it promptly with ample praise and reward.
- (9) Avoid over-correcting your dog. Use as less remote correction as possible during the training process.
- (10) When the dog has become apparently perplexed, shift the focus of the training by drawing the dog's attention to a command they have been familiar with.
Example: Tell the dog to sit and give abundant praise and encouragement on successful completion of the sit command.
- (11) Do not use the training system to correct or eliminate aggressive or biting behavior. When the dog is showing signs of aggressive behavior, contact a professional dog trainer in your local area immediately.
- (12) Please keep in mind that training sessions should be kept short. Stop Training and play with the dog when the dog has made progress.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the

following two conditions: (1) This device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu