


Thank you for using the Ultrasonic Handheld Device.
Please read this manual before use.


This handheld training device uses ultrasonic sound to train dogs to stop barking and or train them to stop other unwanted behavior. When the dog barks simply press the button and the unit will emit an ultrasonic sound that only the dog will hear. The sound will be uncomfortable for the dog, and over time the dog will learn that if they stop barking, they will not be corrected by this device. This is a safe and effective way to stop barking.

SCENARIOS

1. This device can be used in both indoor and outdoor settings.
2. This device can be used as a training aid.
3. The product may not be effective on dogs with hearing problems. The product cannot be used for dogs under six months.

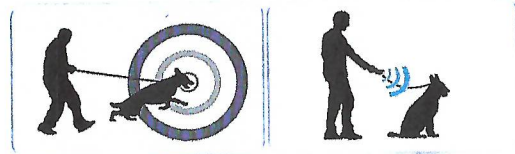

WHAT'S IN THE BOX

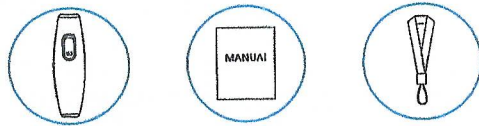

Main Unit 1 Instruction Booklet 1 Wrist Strap 1




BATTERY INSTALLATION

1. Remove the cover of the battery.
2. Press the A&B of the battery holder with your fingers respectively, then gently pull the battery holder out in parallel.




3. Remove the batteries to be replaced.

4. Take 4 new AAA Alkaline batteries, and install them in the battery holder according to the "+" and "-" signs (rechargeable batteries cannot be used).

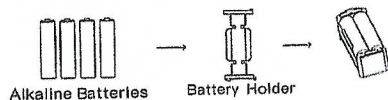


5. Please observe the conductive metal sheet, the position of slots and the spring position of the battery holder in the device before the battery holder is loaded into the device. (as shown in the figure)

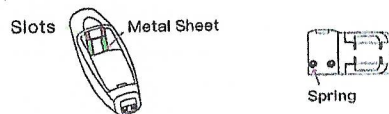

6. Align the conductive spring to the slots, and then place the conductive springs into the slots in parallel. (as shown in the figure)

COMPONENTS

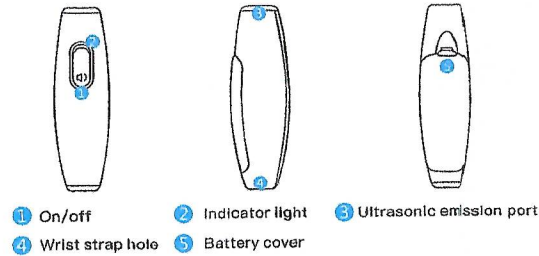

HOW TO USE

1. Hold the device in hand.
2. Press the button when you hear the dog barking. (max distance 16.4 ft).
3. When pressing the button, you will hear a beep and a blue light will come on. This indicates the product is functioning normally.
4. The device only works when the button is pressed. The longest working time is 10 seconds. After 10 seconds the device will stop emitting sound.
5. If there is a red light, that indicates the batteries are low and need to be replaced.

TECHNICAL SPECIFICATIONS

Model Number: M-238
Operating Range: 16.4 ft (maximum effective range)
Battery: AAA Alkaline Battery X4
Product Dimensions: 4.33*1.26*1.38 in
Product Weight: ~ 3.28 oz

HINTS AND TIPS


1. Different dog breeds may react to the ultrasonic sound differently. For optimal results, please use the product as a training aid, along with other tools/commands. Be patient during this training process.
2. Average human hearing frequency range is between 20Hz~20 KHz, and the dog can hear a wider range from 15Hz ~120 KHz. The product emits ultrasonic sound at 25 KHz. So the sound cannot be heard by a human but can be heard by dogs.
3. Do not use the device against your ear for testing.
4. This device can be used for bark deterrent training for dogs. The maximum operating range is 16.4 foot.
5. This device is not intended to provide protection against aggressive dogs.
6. This device is not a toy; keep out of reach of children.
7. Do not submerge the unit in water or any other liquid.
8. The product cannot be used for dogs under six months.

Questions? Contact us!

1-800-657-8214

customerservice@goodlifeinc.com

www.goodlifeinc.com

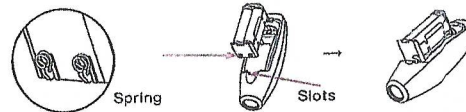

7. Push the conductive spring gently, and load the battery holder into the device slowly.

8. Old batteries shall not be mixed with new batteries, alkaline batteries and carbon-zinc batteries shall not be mixed with rechargeable batteries.

Good Life® Guarantee

Put us to the test! We're confident you'll love your new bark-free life that we're giving you a full 60 days to try out our products risk-free. If you aren't 100% satisfied and happily enjoying more peace and quiet during the 60-day trial period, you are welcome to return your order for a refund of the product price minus shipping.

How long are my products covered?

60-Day Money-Back Guarantee - Starts the day your order is delivered.


1-Year Manufacturer's Warranty --- Starts the day your order is delivered and ends one year after that date.

All products are eligible. Keep in mind that returned products must be in usable and resalable condition. We cannot accept items damaged due to accident, misuse, abuse or negligence.

Contact us for more information.

FCC CAUTION

This device complies with Part 18 of the FCC Rule

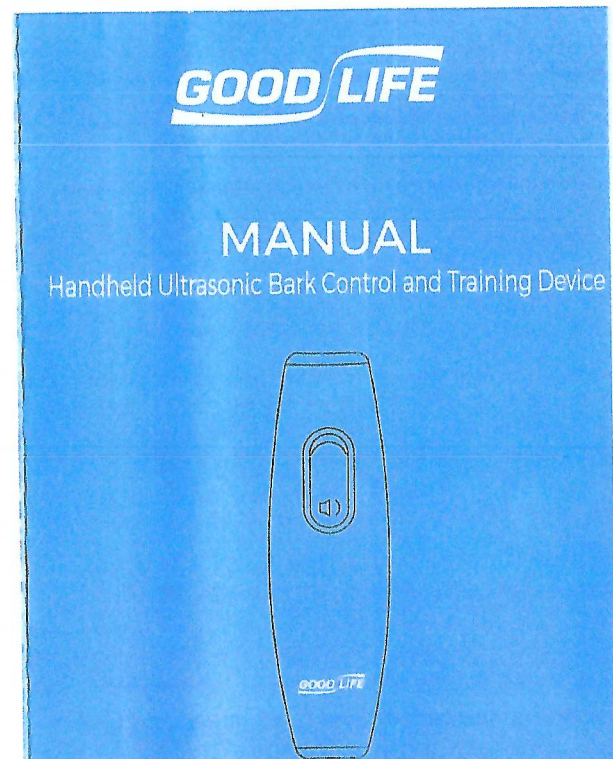

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: www.electric-collars.com
Changes to technical parameters, properties and printing errors reserved.

Service center and distribution

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: info@electric-collars.eu