

uahpet


# Furmatic Brush

Product manuals



## Product Introduction

### Parts Description

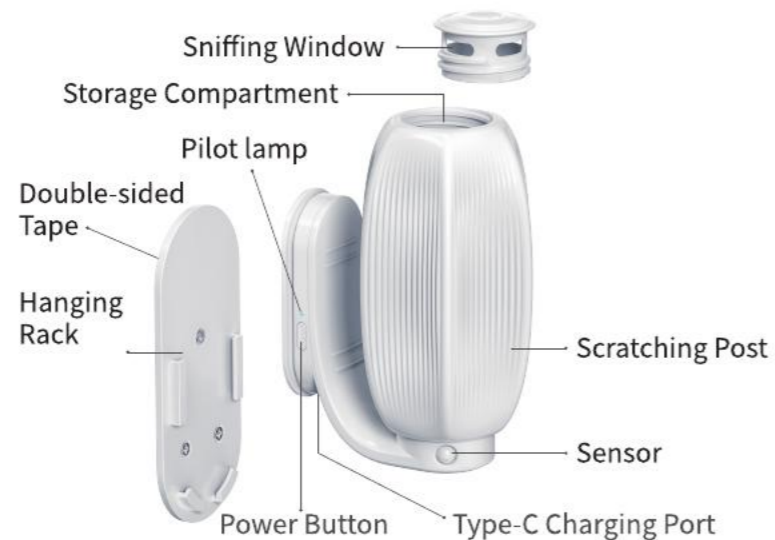

### Product Specifications

Product Model	UCTQ01	Input Voltage	5V -- 1A
Product material	ABS	Rated power	5W
Product color	White+Grey	Battery	800mAh
Product weight	0.86lb	Push button	Power Button
Product size	4.76*6.89*3.07 inches(121×78×175mm)		

### Product List

Furmatic Brush x1	Zip ties x2	
User manual x1	Type-C charging cable x1	Screws x3
Double-sided adhesive mount x1		


## Product Installation

Check if the accessories are complete against the packing list.

### Product installation steps

#### STEP 1 Determine the device installation location.


Measure the height of the installation location to determine the optimal position for the device.

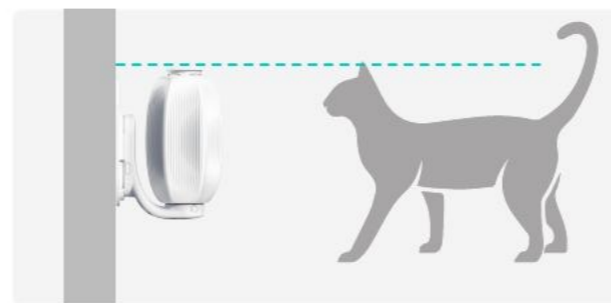

\*The top edge of the device should be parallel to the tips of the cat's ears when it stands normally.

#### STEP 2 Install the hanging rack.

Attach/nail/tie the hanging rack to the determined location.

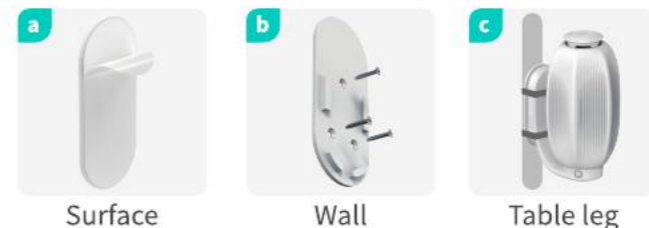

**a.** For mounting the hanging rack on glass, please clean the glass surface first to ensure that it is clean and flat. Tear off the double-sided tape on the back of the hanging rack and stick it to the determined location. Use it after leaving it for 24 hours.

\*Do not use it immediately to avoid poor adhesion.

**b.** For mounting the hanging rack on the wall, use the screw accessory to drive the screw into the wall, and fix the hanging rack in the determined location.

**c.** For installation on other places such as table corners, use the tie accessory to tie the two tie straps through the two fixing grooves on the support column and the fixed position.

\*For flat materials, you can use the double-sided tape on the back of the hanging rack to make the installation more secure.

#### STEP 4 Install the main device.

Insert the main device into the hanging rack, turn on the power switch, and the installation is complete.



### Thank you for choosing Uahpet!

Uahpet insists on helping pets to live in a way more in line with their nature through scientific and advanced parenting concepts, such as physiology, environment, behavior and psychology.

## Product usage instructions





It is recommended to be fully charged in advance for the first use.

### Charging instruction

- Connect Type-C data cable and 5V =1A charger
- When charging: red light flashes  
when charging is complete: blue light is always on
- Charging time: 4h
- Can be used while charging

### Function and light description

- Switch on/off: long press 2s
- Intelligent sensing: when the cat enters the 1m sensing range, it automatically starts and rotates in the direction of cat hair growth, and stops rotating when the cat leaves.
- Lighting description:

	Red and blue lights flashing alternately: On/Off
	Blue light blinking: Induction Work
	Red light is always on: Low Battery Alert
	No light on: Standby/Off

### Maintenance and cleaning instructions

- Remove the rubbing post and rinse with detergent and water.
- Wipe the host with wet wipes (please do not rinse the host).
- Please be sure to dry or wipe dry to put back each part in turn.

## Safety Precautions

Failure to comply with the following terms may result in the product not working properly, or other unexpected losses.

- Please install and use this equipment strictly according to the instructions.

- It is forbidden to rinse the host directly with water, which contains electronic components, so as not to cause short circuit or damage to the device.  
Clean the host with a wet towel to wipe the surface.
- When using the product charger or charging cable, please ensure that pets do not tear the cable to avoid leakage.
- Please do not hang heavy objects on the body, otherwise it may lead to product damage.
- In addition to maintenance personnel, no one else may repair this product to avoid various accidental injuries.
- If there are children operating the product, please ensure that under the guidance of adults.
- Please do not use the charger that exceeds the rated voltage. If you encounter problems with the use of the product,
- please contact customer service in a timely manner.

## After-sales Service

### Accessories Purchase

If you need to buy Natural Stressfree Bag, use with genuine please. [www.uahpet.com](http://www.uahpet.com)

### Warranty Regulations

Enjoy 1 year product warranty service from the date of purchase on your proof of purchase for product performance failures not caused by human factors, except for consumables.

### Non-warranty regulations

The following cases (but not limited to the following cases) are not included in the scope of the warranty:

- No warranty certificate or missing valid invoice or has exceeded the warranty service validity.
- Not in accordance with the user manual requirements, maintenance, storage and damage caused by.
- Damage caused by fire, lightning, floods and other force majeure.
- The product model or number on the warranty card does not match the actual product.
- Damage caused by disassembly and repair by non-authorized service providers.
- The normal fading, wear and tear and consumption during the use of the product, which is not a failure within the scope of the warranty.
- Product use in non-compliant geographic areas, resulting in poor product function is not covered under the warranty.
- Random gifts.

### Note

In order to provide better products, we will regularly make product improvements. If there are any discrepancies between the product images and the actual product, please refer to the actual product.

The device has been approved for use in EU countries and is therefore provided with the **CE mark**. All necessary documentation is available on the website: [www.electric-collars.com](http://www.electric-collars.com)  
Changes to technical parameters, properties and printing errors reserved.

### **Service center and distribution**

Reedog, sro

Sedmidomky 459/8 101

00 Prague 10

Phone: +1 646 980 4569

Email: [info@electric-collars.eu](mailto:info@electric-collars.eu)